

NT Rockpicker

NT78

NT60

NT44

**Operator's
Manual**



NT Rockpicker

NT78

NT60

NT44

Operator's Manual

Up to Serial No: NT78001045

Up to Serial No: NT60000335

Up to Serial No: NT44000135

Highline Manufacturing Limited
HWY #27, P.O. Box 307
Vonda SK S0K 4N0
Canada
Phone: 306.258.2233
Fax: 306.258.2010
Toll Free: 1.800.665.2010

E14128V1

Highline Team Message

Congratulations on your purchase of a NT Rockpicker NT78, NT60 & NT44 manufactured by Highline Manufacturing Ltd.

This Operator's Manual has been prepared to provide information necessary for the safe and efficient operation of your Rockpicker. In the manual you will find safety procedures, maintenance routines and detailed operational instructions.

If you find that you require information not covered in this manual, please feel free to consult your local dealer. Your dealer is always able to contact Highline for this technical information.

Highline Manufacturing Ltd. thanks and congratulates you for selecting a NT Rockpicker as your machine of choice.

Highline Manufacturing Ltd.

Table of Contents

Section 1 **Safety**

Serial Number	1
Safety Sign-off Form	2
Safety Alert Symbol	3
General Safety	4
Safety Decal Locations	10

Section 2 **- Transporting the Rockpicker**

Adjust the position of the tongue plate	1
Lift the hitch with the jack	2
Connect the hitch to the tractor drawbar	2
Rotate the hitch jack into the storage position	2
Connect the hydraulic hoses	3
Raise the pickup apron	3
Move the hitch into the transport position.	3
Ensure the hitch lock has engaged	4

Section 3 **- Preparing the Rockpicker**

Preparing the Rockpicker	1
Check the condition of the apron and the rock bucket.	2
Remove any rocks that are wedged in the bat teeth.	3
Remove from the bucket any debris or rocks	3
Check the linkages on both sides under the raised bucket	4
Check the condition of the tires	4
Check and adjust the tire air pressure	5

Section 4 **- Operating the Rockpicker**

Check the condition of the apron and the rock bucket	2
Field Preparation	2
Raise the hitch lock (1) from the hitch linkage	3
Move the hitch into the operating position	3
Lower the apron	4
Operate the rockpicker	4
Adjust the rock reel speed	4
Unloading the Rock Bucket	5
Removing Rocks Lodged in the Bucket	6
Rock Removal Approach 1	6
Rock Removal Approach 2	7

Section 5 - Maintaining the Rockpicker

Installing the Bucket Lift Locks	1
Removing	2
Check the Bucket Linkage	3
Lubrication	4
Check the Gearbox Oil	5
Check the Motor Mount Bolts	5
Check and Adjust Tire Air Pressure	6
Changing the Reel Springs	7
Removing the Springs	7
Installing the Springs	8

Section 6 - Storing the Rockpicker

Empty the bucket	1
Clean all the debris from the bucket area	1
Remove all debris from the bucket linkages	2
Move the rockpicker hitch to the transport position	2
Raise the apron	2
Place the jack onto the hitch	2
Disconnect the hydraulic hoses	3
Disconnect the hitch from the tractor	3
Lubricate the reel bearings	3
Change the oil in the gearbox	3

Section 7 - Troubleshooting

Section 8 - Specifications

Warranty

Delivery and Warranty Registration

GENERAL DESCRIPTION OF THE ROCKPICKER

The Rockpicker is designed to pick up rocks while driving in a cultivated field without the need to stop to pick up the rocks.

The hitch is hydraulically operated to move from the transport position to the operating position. The operating position moves the Rockpicker to the right of the tractor so the tractor treads do not push rocks into the soil. When the Rockpicker bucket is full, the operator moves the hitch to the transport so the Rockpicker follows the tractor to the rock dumping location.

The Rockpicker apron is positioned by the operator to be just above the surface of the soil. The spring loaded pickup bats rotate on a hydraulically operated reel. As the rotating pickup bats encounter rocks, they push the rocks across the apron and into the Rockpicker bucket. The apron and bucket allow any moved soil to fall back to the ground.

For unloading the rocks, the Rockpicker is backed into the dumping location. The hydraulic cylinders are activated to raise the rock bucket. As the bucket is raised, it tilts to dump the rocks out.

When the Rockpicker is picking rocks it uses hydraulic power from the tractor to position the apron and to rotate the reel with the spring loaded rock bats. When the Rockpicker is moving from transport position to operating position, a hydraulic cylinder is activated to move the hitch. When the Rockpicker is dumping the rocks, the hydraulic lift cylinders lift the rock bucket and tilt it to dump the rocks.

The operator of the Rockpicker is located in the tractor cab where they drive the tractor, control the speed of driving, the operation of the hitch position, the rotating rock bat reel and the dumping of the rocks.

The Rockpicker is transported on the wheels of the Rockpicker.

INTENDED USE OF THE ROCKPICKER

- The Rockpicker is designed to pick up rocks that are on the surface or near the surface of a cultivated field and then to move those rocks to a storage location.
- The Rockpicker is designed to lift the rocks that have been picked up and to dump them.
- The Rockpicker is intended for use in field farming applications.
- The Rockpicker is intended for use in locations that are not near people or animals who could be harmed by rocks that are thrown into the rock bucket.

Any uses of the Rockpicker other than the above stated Intended Uses shall be considered misuse of the Rockpicker. This misuse shall include (but not limited to):

- Using the Rockpicker in non-farming applications.
- Using the Rockpicker around people or in public places.
- Moving materials other than rocks from fields.

Always use the Rockpicker according to the instructions contained in this Operator's Manual and the safety and instruction decals on the machine.

Perform regular maintenance and repair to ensure that the Rockpicker operates safely and efficiently.

This Page Left Blank

SERIAL NUMBER

Your serial number is found on the serial number plate attached to the NT Rockpicker on the front frame member.

It is important to record the serial number for proof of ownership and for any service or maintenance assistance.

Serial Number

Owner

Model

Date of Purchase

SAFETY SIGN-OFF FORM

Highline Manufacturing Ltd. follows the general Safety Standards specified by the American Society of Agricultural Engineers (ASAE) and the Occupational Safety and Health Administration (OSHA). Anyone who will be operating and/or maintaining the Highline NT Rockpicker should read and clearly understand all Safety, Operating and Maintenance information presented in this manual.

Do not operate or allow someone to operate this equipment until this information has been reviewed. This information should be reviewed by all operators before the start-up of the season.

This sign-off sheet is provided for record keeping to indicate that the person working with the equipment has read and understood the information in the Operator's Manual and has been instructed in the safe operation of the equipment.

Date	Employee's Signature	Employer's Signature

SAFETY ALERT SYMBOL

The Safety Alert Symbol means:



**ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!**

The Safety Alert Symbol combined with a Signal Word alert to the presence of a hazard and the degree of possible injury.



Indicates an imminently hazardous situation that, if not avoided, **WILL** result in **DEATH OR SERIOUS INJURY**. The color is Red with White lettering.



Indicates a potentially hazardous situation that, if not avoided, **COULD** result in **DEATH OR SERIOUS INJURY**, and includes hazards that are exposed when guards are removed or unsafe practices. The color is Orange with Black lettering.



Indicates a potentially hazardous situation that, if not avoided, **MAY** result in **MINOR INJURY**. The color is Yellow with Black lettering.

GENERAL SAFETY

1. Ensure that anyone who is going to operate, maintain or work near the NT Rockpicker is familiar with the recommended operating, maintenance procedures and safety information contained in this manual and follows all the safety precautions.
2. In addition to the design and configuration of the equipment, hazard control and accident prevention are dependant upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of the NT Rockpicker.
3. The NT Rockpicker shall not be operated without all the guards in place.

SAFETY DECALS

1. Keep decals and signs clean and legible at all times.
2. Replace decals and signs that are damaged, missing or have become illegible.
3. Replaced parts that displayed a decal should also display the current decal.
4. Decals are available from the Highline Parts Department.
5. Be familiar with the decals, the type of warning and the area or function(s) related to the area(s) that requires your awareness.



DO NOT ENTER THE PICKUP REEL APRON AREA

Contact with the moving pickup reel or spring loaded bats will cause serious injury or death.

The pickup bats are spring loaded. When a rock is lodged, the springs are under pressure. The bats could release rapidly causing serious injury or death.

Do not use hands or feet to remove a lodged rock.


APPROPRIATE PROCEDURES FOR DISLODGING ROCKS ARE OUTLINED IN THE OPERATOR'S MANUAL AND MUST BE FOLLOWED


DO NOT CONTACT THE ROTATING PICKUP REEL

Contact with the moving pickup reel will cause serious injury or death. Keep away from the moving pickup reel.

DO NOT ATTEMPT TO MANUALLY REMOVE ROCKS FROM TINES WHILE THE HYDRAULIC MOTOR IS ENGAGED

READ AND FULLY UNDERSTAND THE INSTRUCTIONS ON THIS DECAL

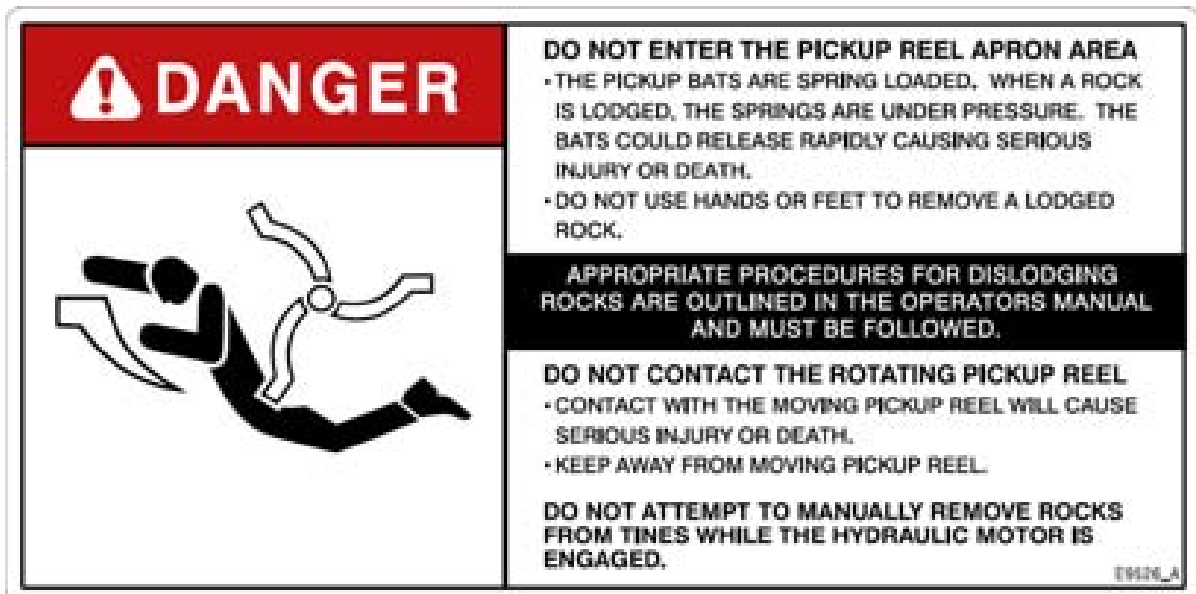


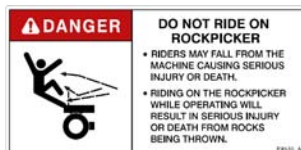

DO NOT RIDE ON ROCKPICKER

Riders can fall from the machine which will cause serious injury or death.

Riding on the Rockpicker while operating will result in serious injury or death from rocks being thrown.

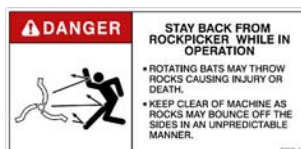

STAY BACK FROM ROCKPICKER WHILE IN OPERATION

Rotating bats may throw rocks causing injury or death.

Keep clear of the machine as rocks may bounce off the sides in an unpredictable manner.



KEEP PERSONS BACK WHEN MOVING THE HITCH

The hitch can move quickly.

Contact with the hitch can cause serious injury or death.



UPENDING HAZARD

The tongue can rise rapidly when the bucket is lifted.

Use a clevis to attach implement.

Ensure implement is attached to machine before hydraulics are activated.



THE ROCKPICKER IS DESIGNED FOR OFF-ROAD USE ONLY

To transport on public roads consult with local traffic regulations.

DO NOT TRANSPORT THE ROCKPICKER WITH ROCKS IN THE BUCKET

Rocks may fall out of the bucket resulting in an accident.

Deposit the rocks on a pile in the field or load them directly onto a truck or trailer.



DO NOT PLACE HANDS OR FEET IN THE APRON REST AREA

Serious injury could result if hands or feet are clamped in this area.



DO NOT PLACE HANDS IN THIS AREA WHEN RAISING OR LOWERING THE BUCKET

Serious injury could result if hands are placed in this clamping area.



USE PAPER OR CARDBOARD TO CHECK FOR HYDRAULIC LEAKS


To prevent serious injury or death:

Relieve pressure on hydraulic system before repairing, adjusting or disconnecting.

Wear proper hand and eye protection when searching for leaks.

Use wood or cardboard instead of hands.

Keep all components in good repair.

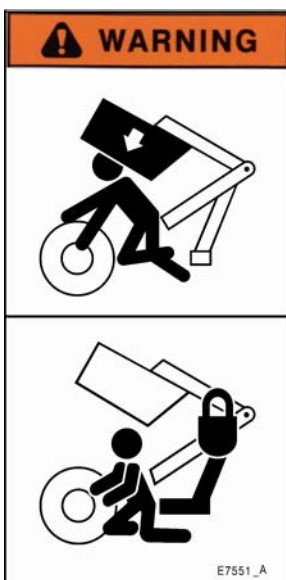

STAND CLEAR WHEN BUCKET IS BEING RAISED OR LOWERED

The raised bucket could fall causing serious injury or death.


Do not work under a loaded bucket.

Before working under an empty raised bucket, always place both safety locks onto the hydraulic cylinders.

DO NOT TRANSPORT THE ROCKPICKER WITH THE BUCKET RAISED

The rockpicker will be unstable and hard to steer.

Damage to the machine will occur.

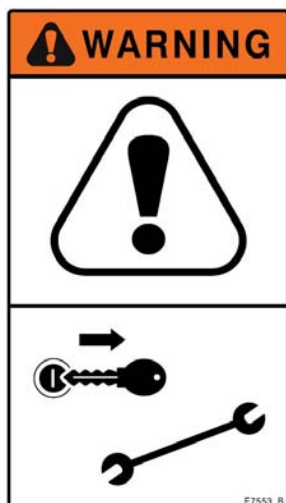

SHUTDOWN THE TRACTOR BEFORE DISMOUNTING TRACTOR

Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the rockpicker.

Relieve all hydraulic pressure in the hoses before going near the rockpicker. Leave the hydraulics in the "float" position.



READ, UNDERSTAND, AND FOLLOW SAFETY INSTRUCTIONS

Read, understand and follow all instructions and safety messages included in this manual and on decals attached to the machine. These instructions and safety messages contain important information.

Allow only responsible, properly instructed individuals to operate and service the machine.

Failure to follow the instructions and safety messages in this manual and on the decals attached to the machine could result in serious injury or death.

Keep all safety and instruction decals in good condition. Replace any missing or damaged decals

This Page Left Blank

Transporting



Only tow the Rockpicker behind a properly sized and equipped tractor or vehicle which exceeds the weight of the loaded Rockpicker by 50%.



Shut off the tractor engine before attaching the rockpicker or hydraulics.



Do not allow children or other people to ride on the tractor or Rockpicker. Falling off can result in serious injury or death. Impact from thrown rocks can result in serious injury or death.



The rockpicker is designed for off road use only. To transport on public roads consult with local traffic regulations.




Do not transport the rockpicker with rocks in the bucket.
Do not transport the rockpicker with the bucket raised.



1. Adjust the position of the tongue plate for the rockpicker to be level.

- Level the rockpicker using the hitch jack.
- Position the tongue plate so that the rockpicker is level when connected to the tractor drawbar.
- Remove the bolts (1) and move the tongue plate. Fasten in place.

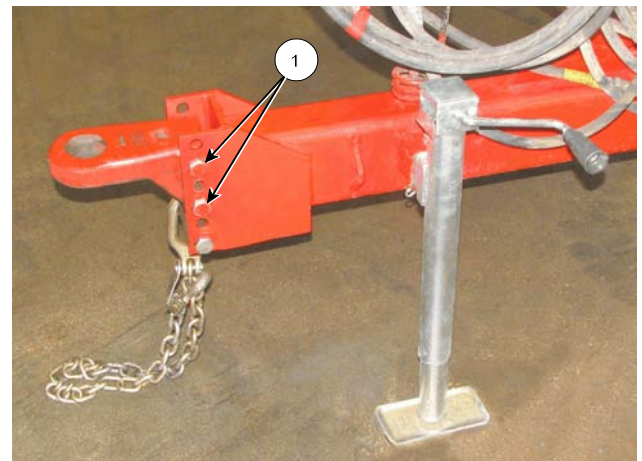

Adjust Tongue to Level the Rockpicker

214001C

Section 2 - Transporting the Rockpicker

2. Lift the hitch with the jack

- The hitch is heavy. Do not attempt to lift the hitch without using the jack.



Lift the Hitch with the Jack

214002

3. Connect the hitch to the tractor drawbar.

- Use a 1 1/4" (31.75 mm) pin.
- Use a clevis to attach the hitch.




Do not disconnect the hitch when the bucket is lifted. There is an upending hazard at the hitch when the bucket is lifted.



4. Connect the safety chain (1) to the tractor.

5. Rotate the hitch jack (2) into the storage position.

- Remove all weight from the jack.
- Remove the locking pin holding the jack onto the hitch.
- Rotate the jack to the storage position.
- Fasten the jack in place with the lock pin.

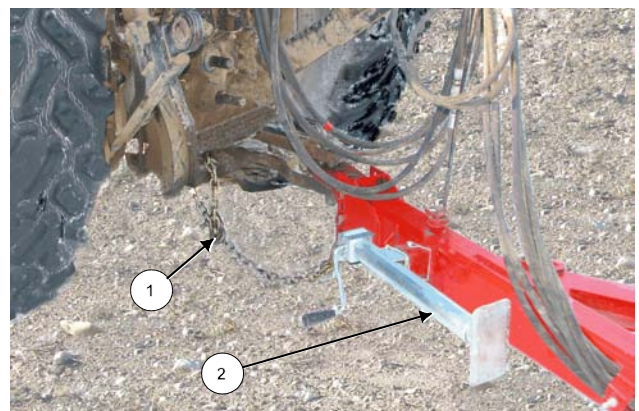

Connect to Tractor. Jack in Storage Position.

214003C

Section 2 - Transporting the Rockpicker

6. Connect the hydraulic hoses.

- One set of hydraulic hoses is used for adjusting the picker's collecting apron height and dumping the bucket when full of rocks.
- The second set of hoses is used to drive the rock picker reel motor.
- The third set is for the hitch hydraulic cylinder.
- The selector valve option is used when there are only 2 remotes on the tractor.
 - The selector valve directs the hydraulic oil from the reel motor to the hitch cylinder.



Connect Hydraulic Hoses

108008

7. Raise the pickup apron.

- Fully retract the bucket dump cylinders (1) to raise the apron.
- As the cylinders retract, they will raise the apron from the ground surface.



Raise the Pickup Apron.

214004C

8. Move the hitch into the transport position.



Keep persons back when moving the towing arm. The towing arm can move quickly.

Contact with a moving tow arm can cause serious injury or death.

- Retract the hitch cylinder (2) to move the hitch into the transport position. This reduces the travel width of the rock picker.



Hitch In Transport Position

214006C


Section 2 - Transporting the Rockpicker

- If the selector valve option is installed with the hydraulic hitch option:

- Push the selector valve in to direct the hydraulic oil from the reel motor to the hitch hydraulic cylinder. Operate the hitch cylinder to move the hitch into the transport position.

9. Ensure the hitch lock (3) has engaged onto the hitch linkage before transporting.

- The hitch lock will fall onto the hitch linkage.

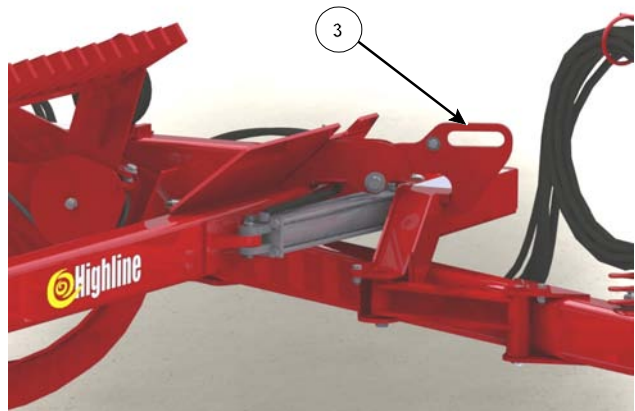

Hitch Lock Engaged

214138C

11. Check the condition of the tires.

- Ensure that the lug nuts have the cone side of the lug nut against the wheel rim.
- Torque the lug nuts to 170 lbf (230 Nm).




Check Condition of the Tires

214007



Do not transport the rockpicker with rocks in the bucket.

Do not transport the rockpicker with the bucket raised.

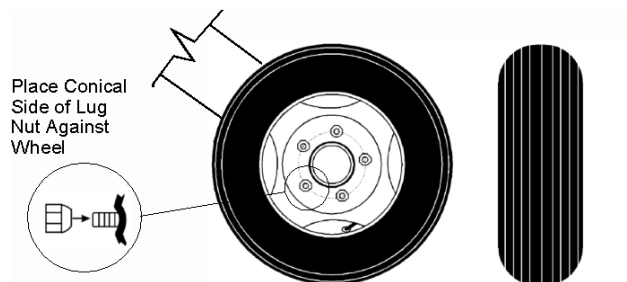

Tires

107094CC

Preparing the Rockpicker



Do not ride on the rockpicker.

Riders can fall from the machine which will cause serious injury or death.


Riding on the Rockpicker while operating will result in serious injury or death from rocks being thrown.



Stay back from the rockpicker while in operation.

Rotating bats may throw rocks causing injury or death.

Keep clear of the machine as rocks may bounce off the sides in an unpredictable manner.

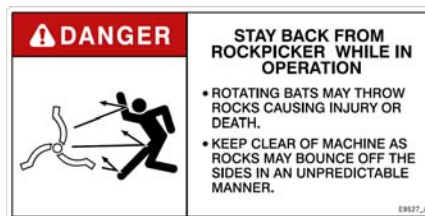

Do not enter the pickup reel apron area.

Contact with the moving pickup reel or spring loaded bats will cause serious injury or death.

The pickup bats are spring loaded. When a rock is lodged, the springs are under pressure. The bats could release rapidly causing serious injury or death.



Do not contact the rotating pickup reel.

Contact with the moving pickup reel will cause serious injury or death. Keep away from the moving pickup reel.

Section 3 - Preparing the Rockpicker



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses before going near the machine.



1. Check the condition of the apron and the rock bucket.



Do not enter the reel or apron area while the reel is rotating or rocks are lodged against the bats.

Contact with the moving pickup reel or spring loaded bats under pressure will cause serious injury or death.



Check Condition of Apron and Bucket

214010

Section 3 - Preparing the Rockpicker

2. Remove any rocks that are wedged in the bat teeth.



Remove Rocks from Bat Teeth

214021


3. Remove from the bucket any debris or rocks that would hinder soil from exiting the bucket.



Remove Debris From Bucket

214022

4. Raise the bucket and secure the bucket locks (2) onto the cylinder rods.
 - The bucket locks are located on each side of the machine near the tires.

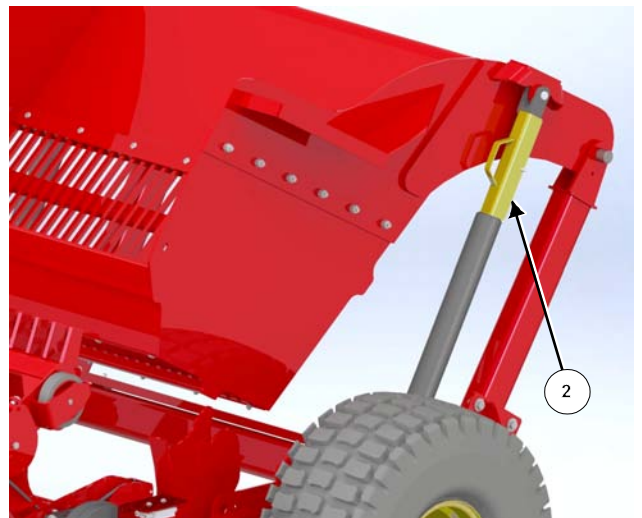

Raise Bucket - Secure With Cylinder Locks

214018C

Section 3 - Preparing the Rockpicker


5. Check the linkages on both sides under the raised bucket.



Install the bucket lift cylinder locks before doing any work under a raised bucket.



- Remove any debris that would interfere with free movement of the linkages.
- Remove debris that would prevent the bucket or linkages from resting on the stops (1).

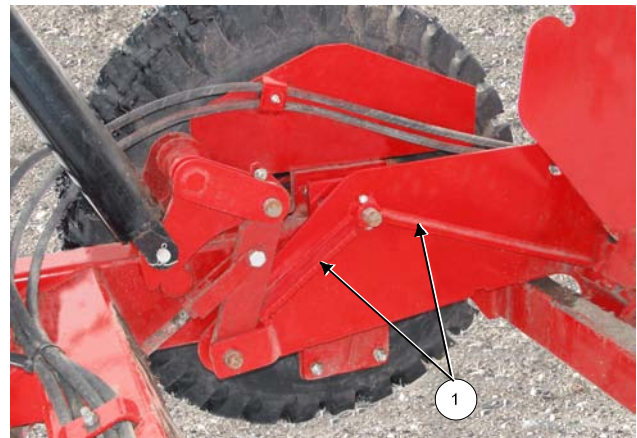

Check Linkages Under the Raised Bucket

214016C

6. Check the condition of the tires.

- Replace any tires that have cuts or bubbles.
- Replace any damaged rims.

7. Torque wheel bolts to 85 -100 lbs ft (115 -135 Nm) dry.



Check Condition of the Tires

214007


Section 3 - Preparing the Rockpicker

8. Check and adjust the tire air pressure.



Do not lean over a tire while inflating.

- Do not inflate tire above recommended pressure.
- Maintain tire pressure to avoid possible tire damage.

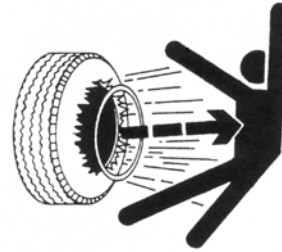

Model	Tire Pressure
NT 78	27 psi (186 Kpa)
NT 60	24 psi (165 Kpa)
NT 44	90 psi (620 Kpa)



Check Tire Pressure

214007

This Page Left Blank

Section 4 - Operating the Rockpicker

Operating The Rockpicker



Do not ride on the rockpicker.

Riders can fall from the machine which will cause serious injury or death.


Riding on the rockpicker while operating will result in serious injury or death from rocks being thrown.



Stay back from the rockpicker while in operation.


Rotating bats may throw rocks causing injury or death.

Keep clear of the machine as rocks may bounce off the sides in an unpredictable manner.

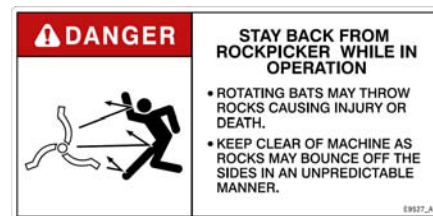

Do not contact the rotating pickup reel.

Contact with the moving pickup reel or spring loaded bats will cause serious injury or death. Keep away from the moving pickup reel.

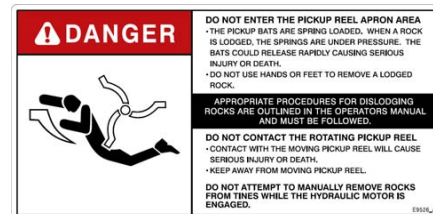

Do not enter the pickup reel apron area.

The pickup bats are spring loaded. When a rock is lodged the springs are under pressure. The bats could release rapidly causing serious injury or death.

Section 4 - Operating the Rockpicker

1. Check the condition of the apron and the rock bucket.

- Refer to Section 2 - "Preparing the Rockpicker" for additional information.




Check Condition of Apron and Bucket

214010



Do not enter the reel or apron area. Contact with the moving pickup reel or spring loaded bats under pressure will cause serious injury or death.

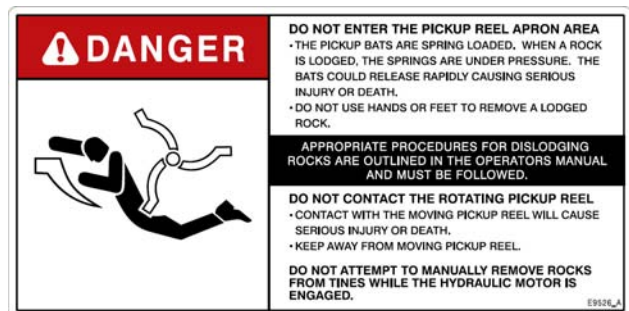

Field Preparation

Field preparation plays a major role in the performance of the rock picker.

- For best picking conditions, the field should be cultivated prior to picking.
- Cultivating brings stones to the surface and buries field residues.




Prepared Field With Rocks Exposed

108184

Section 4 - Operating the Rockpicker

1. Raise the hitch transport lock (1) from the hitch linkage to allow the hitch to move into the operating position.

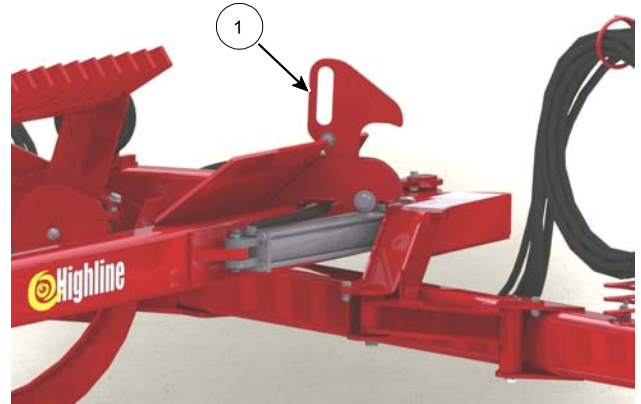

Raise the Hitch Lock

214139C

2. Move the hitch into the operating position.



Keep people back when moving the hitch. The hitch can move quickly. Contact with the moving hitch can cause serious injury or death.



- Drive ahead slowly.
- Extend the hitch cylinder to the maximum length.
- The rockpicker will move to the right side of the tractor.



Rockpicker In Operating Position

214009

Section 4 - Operating the Rockpicker

3. Lower the apron so that it is just below the surface of the dirt to pick up rocks but does not dig deeply into the dirt.

- The apron height is adjusted through the bucket dump hydraulic cylinders.
 - To lower the apron, extend the bucket dump cylinders.
 - Note: Continuing to extend the bucket dump cylinders will raise the bucket into dumping position.
 - To raise the apron, retract the bucket dump cylinders.
 - Note: For larger rocks, it may be necessary to raise the apron.

4. Operate the rockpicker at a field speed of 3 - 4 mph (5 -6 kmh).



Stay back from the rockpicker while in operation.

Rotating bats may throw rocks causing injury or death.

Keep clear of the machine as rocks may bounce off the sides in an unpredictable manner.


- Engage the hydraulic motor to rotate the rock reel.
- When picking large rocks, the field speed should be decreased to reduce possible damage from large impacts.

5. Adjust the rock reel speed so that rocks are pushed into the rock bucket but are not thrown out of the bucket or bounce from the bucket sides.



Set the Apron Height

214011

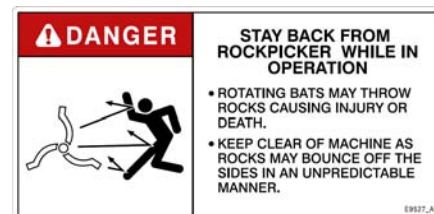

Rockpicker In Operating Position

214009

Section 4 - Operating the Rockpicker

Dumping the Rocks



Do not transport the rockpicker on public roadways with rocks in the bucket.

Rocks may fall out of the bucket resulting in an accident.



Stand clear when the bucket is being raised or lowered.

A raised bucket can fall causing serious injury or death.

Do not work under a loaded bucket. Install the bucket lift cylinder locks before doing any work under a raised bucket.



Do not disconnect the hitch when the bucket is lifted. There is an upending hazard at the hitch when the bucket is lifted.



Unloading the Rock Bucket

1. Turn off the rock reel.
2. Back the rockpicker onto level ground near the desired dumping location.
3. Extend the bucket dump cylinders until the apron is resting on the ground.
4. Continue to extend the bucket dump cylinders until the bucket rises to the dumping position and rotates.
5. When the rocks are completely dumped, lower the bucket by retracting the cylinders.
6. Continue retracting the cylinders to raise the apron off the ground.



Rock Bucket in Dumping Position

214013

Removing Rocks Lodged in the Bucket




Do not enter the pickup reel apron area!

When rocks are lodged against the spring, the springs are under pressure. The bats could release rapidly causing serious injury or death. Do not use hands or feet to remove a lodged rock.

Contact with the moving pickup reel or spring loaded bats will cause serious injury or death.



Do not attempt to manually remove rocks while the hydraulic motor is engaged.

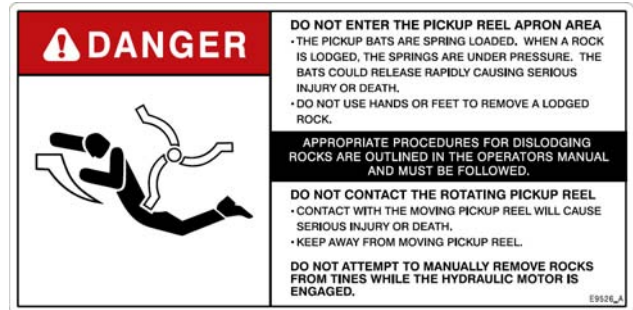

- ✓ Try Rock Removal Approach 1 before attempting Rock Removal Approach 2.

- Rock Removal Approach 2 increases the level of danger to the operator.

- ✓ Follow the instructions exactly as given for each Approach because personal safety is involved!

Rock Removal Approach 1

Use The Hydraulics to Rotate the Pickup Reel Backwards and Forwards While Raising and Lowering the Apron.

1. Repeatedly try to dislodge the rock from the tines by reversing the direction of the pickup reel while raising and lowering the apron.



Reverse Reel & Raise Apron to Remove Rock 214011

Rock Removal Approach 2

Chain the Pickup Reel to Prevent All Movement and Remove the Spring Pressure from the Bat

Note: Try Rock Removal Approach 1 before attempting Rock Removal Approach 2.



Approach 2 involves entering the apron/reel pickup area.

Use extreme caution to prevent harm from moving parts. The spring loaded bats and the rock that is lodged are under spring pressure that may release at any time.

Complete all the instructions carefully in the order they are given.

1. Empty the rock bucket.
2. Park the tractor and rockpicker on level ground.
3. Lower the apron to the ground by extending the dump cylinders.
4. Shut down the tractor and remove the key before doing any work on the rockpicker.



Section 4 - Operating the Rockpicker

5. Disconnect the hydraulic hoses from the tractor.



Disconnect Hydraulics

108008

6. Place a chain around the front top bat and around the front bar of the rockpicker. Tighten to prevent the reel from turning when the spring pressure of the lodged bat is released.

Note: Both free bats must be chained. The pickup reel may rotate in either direction once the spring pressure of the lodged bat is released.



Chain The Front Top Bat

108189

7. Place a chain around the rear top bat and through the grill of the rock bucket.
 - Tighten to prevent the reel from turning when the spring pressure of the lodged bat is released.



Work on the lodged bat from the front of the apron (away from the direction of the bat rotation). This work position is to prevent the spring pressure on the bat from throwing the lodged rock that will cause injury or moving the bat swiftly and causing serious injury.



Chain The Rear Top Bat

214024

Section 4 - Operating the Rockpicker

8. Place a chain winch around the lower bat and the reel center rod.
 - Tighten the winch to move the bat against the spring pressure until the rock is free to be moved.
9. Remove the lodged rock from the apron area.



Winch The Lodged Bat-Remove Spring Pressure¹⁰⁸¹⁹³


10. Loosen the winch to release the pressure on the bat spring.
11. Remove the winch from the bat and the center reel rod.
12. Remove the front and rear chains from the pickup reel.
13. Reconnect the hydraulic hoses.

This Page Left Blank



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

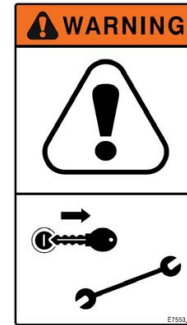

Rock Bucket



Do not work under a loaded bucket. Empty the bucket before doing maintenance under the bucket.

When the bucket is raised, place the bucket locks onto the lift cylinder rods.




Do not disconnect the hitch when the bucket is lifted. There is an upending hazard at the hitch when the bucket is lifted.



Installing the Bucket Lift Locks:

1. Unload the bucket of all rocks.
2. The bucket lift locks (1) are stored on each side of the machine near the wheels.
 - These locks fit onto the bucket lift cylinder rods to prevent the bucket from falling when raised to perform maintenance.
3. Raise the bucket so the locks will fit onto the cylinder rods.

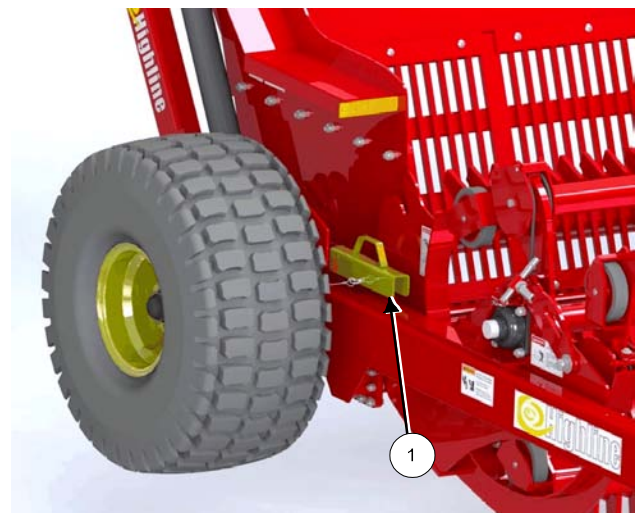

Bucket Lock in Storage Position

214017C


Section 5 - Maintaining the Rockpicker

4. Install one lock (2) on each cylinder.
 - Secure in place with the retaining pin.

Removing the Bucket Lift Locks:


Both locks must be removed before hydraulic pressure is applied to lower the bucket. Failure to remove both locks may result in damage to the rockpicker.

1. Raise the bucket to remove the pressure on the locks.
2. Remove the retaining pin and locks (2).
3. Store the bucket lift locks (1) on each side of the machine near the wheels. Secure with the retaining pins.

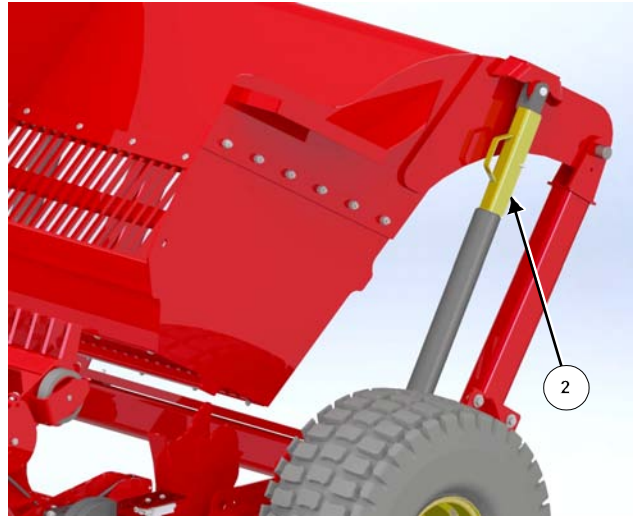

Lock on Bucket Cylinder

214018

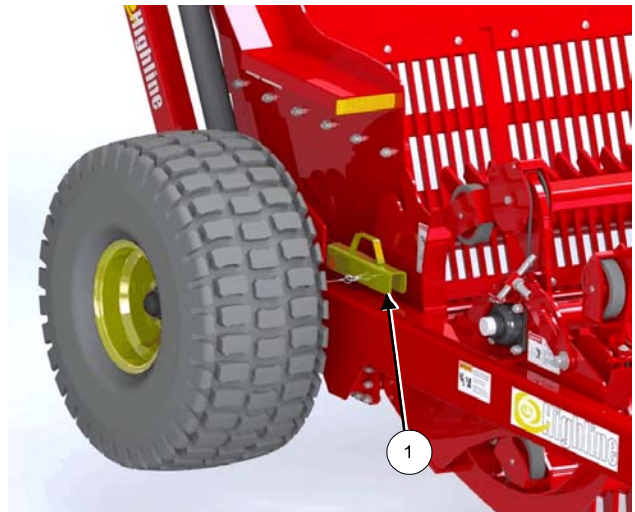

Bucket Lock in Storage Position

214017C


Check the Bucket Linkage

1. Raise the rock bucket and empty any rocks.



Do not work under a loaded bucket. Empty the bucket before doing maintenance under the bucket.

When the bucket is raised, place the bucket lift locks onto the lift cylinder rods.

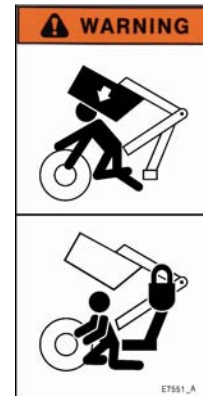

2. Place the bucket locks onto the cylinder rods before going under the raised bucket.
3. Check that all the linkages are in good condition and are free to move.
 - Remove any debris that may have built up in the area.



Check Bucket Linkage & Remove Debris

214016


Section 5 - Maintaining the Rockpicker

Lubrication

Lubricate all grease fittings with a lithium soap compatible E.P. grease meeting the N.L.G.I. #2 specifications and containing no more than 1% molybdenum disulfide.


Every 100 Hours

- Lubricate the pickup reel bearings - 2 points.

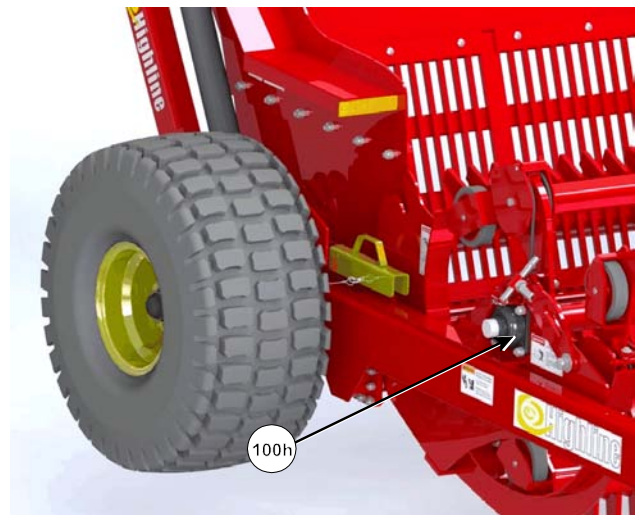

Grease the Reel Bearing

214017C2

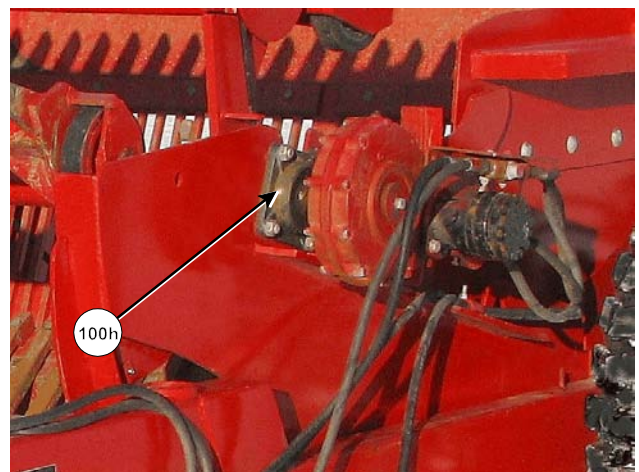

Grease the Reel Bearing

214025C

Section 5 - Maintaining the Rockpicker

- Lubricate the wheel hubs - 2 points.



Grease Wheel Hubs

214026C


Check the Gearbox Oil

Remove the lower plug (1) on the face of the gearbox to check the oil level.

- The oil should be at the bottom of the plug.

If additional oil is needed, remove the top vent plug (2) and add #90 gear oil until the oil is at the bottom of the lower plug.

Replace the top vent (2) and the lower plug (1).

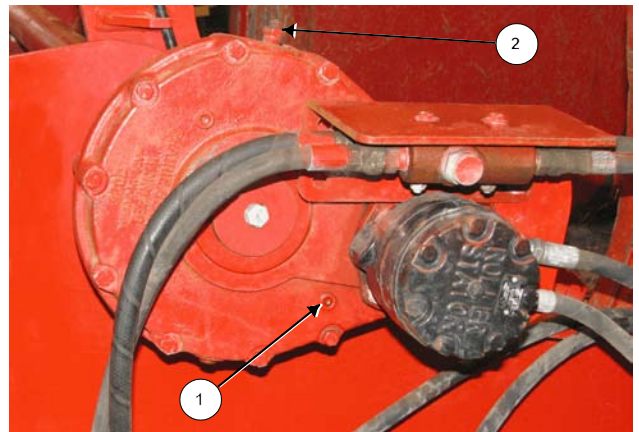

Check Gearbox Oil

214027C

Check the Motor Mount Bolts

Check that all the motor mount bolts (1) are tight and the motor is securely fastened to the gearbox.



Check Motor Mount Bolts Are Tight

214027C2

Section 5 - Maintaining the Rockpicker

Check and Adjust Tire Air Pressure

If tire pressure is not maintained, severe tire damage may result.

Model	Tire Pressure
NT 78	27 psi (186 Kpa)
NT 60	24 psi (165 Kpa)
NT 44	90 psi (620 Kpa)

Torque wheel bolts to 85-100 lbs ft (115 -135 Nm) dry.



Check and Adjust Tire Pressure

214007

Changing the Reel Springs



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.




Removing the Springs

- Before proceeding, ensure there is no spring pressure on any of the rock bats.

Note: As the spring pressure is released, the bat may sag slightly. Be in a position so that this movement will not be harmful.

1. Remove the leading edge impact bolt (6).
2. Remove the bolt (5) that prevents the tension bolt from moving up.
3. Loosen the bolt (2) holding the spring cover plates.
 - Do not remove the bolt at this time.
 - Loosen the bolt enough to allow movement of the springs between the plates.
4. Loosen the jamnut (4) on the spring tension bolt.
5. Loosen the spring tension bolt (3) to remove tension from the spring.
 - Completely loosen the bolt to remove all pressure from the spring.
6. Remove the spring cover plate bolt (2).
7. Remove the cover plates (1) and springs.

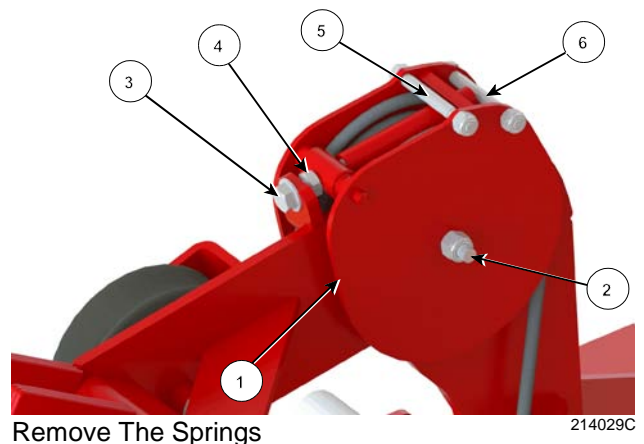


Remove The Springs

214029C

Installing the Springs

1. Place the curled end of the spring into the spring holder plate.
 - Place the straight short end (1) into the slot of the holder.

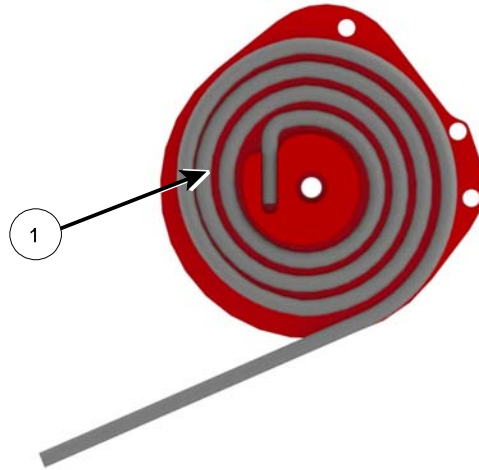

Spring Placed into Spring Holder

214031C


2. Fasten the long straight end of the spring into the spring tab (2) located on the reel arm.



Spring Into Tab On Reel Arm

214032C

3. Place the cover plates (3) with springs onto the reel arm.
4. Insert the cover plate bolt (4). (Do not tighten at this time.)
5. Lubricate the threads of the spring tension bolt (5)
6. Fully tighten the spring tension bolt (5) to place tension onto the springs.
7. Tighten the tension bolt jamnut (6).
8. Tighten the cover plate bolt (4).
9. Install the bolt (7) to prevent the tension bolt from moving up. Tighten just until snug.
10. Install the leading edge impact bolt (8). Tighten just until snug.

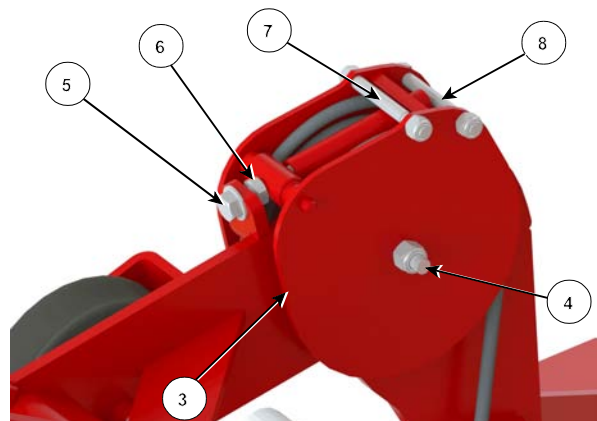

Replace The Spring Cover Plates

214029C2

Storing the Rockpicker

Instructions for storing longer than a week:

1. Empty the bucket of all the rocks.



Do not disconnect the hitch when the bucket is lifted. There is an upending hazard at the hitch when the bucket is lifted.



Empty The Bucket of All Rocks

214013

2. Clean all the debris from the bucket area and off the rockpicker.



Clean Out All Debris

214022

Section 6 - Storing the Rockpicker

3. Remove all debris from the bucket linkages (under the bucket) and off the stops.



Install the bucket locks before doing any work under the bucket.



4. Park the rockpicker on level ground.
5. Move the rockpicker hitch to the transport position with the hitch cylinder completely retracted.
6. Raise the apron until the bucket lift cylinders are completely retracted.



Remove Debris From Linkage Area


214016

7. Place the jack onto the hitch.
 - Rotate the jack from the storage position.
 - Pin the jack in place on the hitch.
 - Ensure that the jack is resting on solid level ground or resting on a wood block.
 - Raise the hitch until the weight is supported by the jack.



Move Hitch to Transport Position, Raise Apron

214030

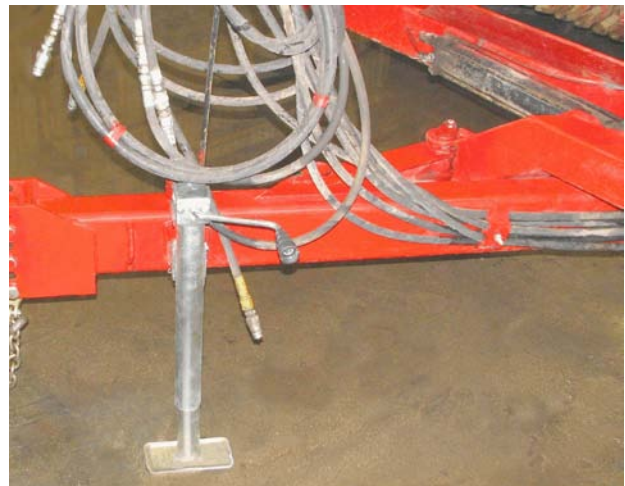

Place the Jack Onto the Hitch

214002

Section 6 - Storing the Rockpicker

8. Disconnect the hydraulic hoses from the tractor.

- Relieve the pressure on the hydraulic hoses and disconnect them.
- Secure the hydraulic hoses to the hose holder on the hitch to keep them off the ground and clean.



Disconnect Hydraulic Hoses & Electrical

201199

9. Disconnect the hitch from the tractor.

- Remove the hitch pin.



Disconnect Safety Chain and Hitch

214002

10. Lubricate the reel bearings. (See Section 5).

11. Change the oil in the gearbox.

- See Section 5 for the oil changing procedures.
- Fill the gearbox to the oil level as outlined in the Maintenance Section.



Grease Reel Bearings, Change Gearbox Oil

214025

12. Check the rockpicker for worn and damaged parts. Replace as needed.

13. Touch-up the paint to prevent rusting.

This Page Left Blank

7.0 Troubleshooting**Hitch**

Symptom	Problem	Solution
Hitch not moving into operating position	Transport lock engaged	Lift transport lock
	Hydraulic cylinder	Check hydraulic connections and lines. Check hydraulic cylinder is working
Hitch not moving into transport position	Hydraulic cylinder	Check hydraulic connections and lines. Check hydraulic cylinder is working
Hitch does not stay in transport position when moving the rockpicker	Transport lock not engaged	Ensure transport lock has fallen into position into the hitch

Rock Reel

Symptom	Problem	Solution
Reel not turning	Hydraulic motor	Check hydraulic connections and lines
	Rock is lodged in a reel bat	Remove the lodged rock using rock removal Approach 1 or Approach 2. See Section 4 for instructions. Carefully follow all instructions
	Drivebox	Check that the drivebox is able to turn. Check the connection between the hydraulic drive motor and the gearbox. Check the oil level in the drive box.

Section 7 - Troubleshooting

Symptom	Problem	Solution
Bogie wheel running off center	Bogie wheel bushings	Change the bogie wheel bushing. Check that the bogie wheel connection is tight.
	Bogie wheel worn	Replace bogie wheel. Use Highline parts
Rock bat not moving rocks	Bat springs	Check tension on the bat springs. Tighten to full tension.
	Cushion valve	Cushion valve not allowing for hydraulic pressure to build. Replace valve with Highline part
Rock bat is flopping	Bat springs	Check for loose or broken springs. Tighten springs to full tension. Replace broken spring with Highline part
	Reel bolts loose	Tighten bolts

Rock Bucket

Symptom	Problem	Solution
Bucket will not raise	Hydraulic	Check hydraulic connections, lines and cylinders
	Bucket linkage	Check that the bucket linkage under the bucket is clear of obstructions/debris
	Too much weight	Remove some rocks
Bucket does not fully lower	Bucket lift locks	Remove both bucket lift locks from the lift cylinder
	Bucket linkage	Check that the bucket linkage under the bucket is clear of obstructions/debris
	Rocks or debris lodged between bucket and apron	Remove the rocks or debris

Section 8 - Specifications

Specifications

	NT78	NT60	NT44
Weight - Empty	Approx. 7500 lbs (3401 kg)	Approx. 6600 lbs (2994 kg)	Approx. 5700 lbs (2585 kg)
Tongue Weight	750 lb (340 kg)	750 lb (340 kg)	750 lb (340 kg)
Length - Transport	18'4" (5.59 m)	18'8" (5.68 m)	18'10" (5.74 m)
Operating	17'2" (5.23 m)	17'2" (5.23 m)	17'2" (5.23 m)
Width - Picking	78" (1.98 m)	60" (1.52 m)	44" (1.11m)
Transport	12'1" (3.68 m)	10'1" (3.07 m)	7'8" (2.34 m)
Operating	15'5" (4.69 m)	13'8" (4.16 m)	11'8" (3.55 m)
Height	72" (1.83 m)	72" (1.83 m)	72" (1.83 m)
Dumping Height	84" (2.13 m)	84" (2.13 m)	84" (2.13 m)
Bucket Capacity	3.4 cubic yards (2.59 cubic meters)	2.5 cubic yards (1.91 cubic meters)	1.9 cubic yards (1.45 cubic meters)
Tires:	21.5L x 16.1	16.5L x 16.1	11L-15
Tire Pressure	27 psi (186 kPa)	24 psi (165 kPa)	90 psi (620 kPa)
Power Required	90-150 Horsepower (67 - 112 kW)	70-135 Horsepower (72 - 101 kW)	50-120 Horsepower (37 - 89 kW)
Hydraulic Outlets	3	3	3
Pressure	2500 psi (17236 kPa)	2500 psi (17236 kPa)	2500 psi (17236 kPa)
Flow Required	18 gpm (68 l/min)	18 gpm (68 l/min)	18 gpm (68 l/min)
Minimum Rock Diameter Pickup	2" (50 mm)	2" (50 mm)	2" (50 mm)
Maximum Rock Diameter Pickup	24" (0.61 m)	24" (0.61 m)	24" (0.61 m)

This Page Left Blank

Highline New Equipment Limited Warranty Policy

One (1) Year / 12 Months - Parts and Labour

Highline Mfg. Ltd. (hereinafter "Highline") warrants this new product of Highline's manufacturer to be free from defects in material and workmanship, under normal use and service for one (1) full year after initial purchase/retail sale. Highline will warrant its product for one (1) year parts and labour, if performed by a qualified Dealer. This Limited Warranty shall apply only to complete machines of Highline's manufacture. Parts are covered by a separate Limited Warranty.

EQUIPMENT AND ACCESSORIES NOT OF HIGHLINE'S MANUFACTURE ARE WARRANTED ONLY TO THE EXTENT OF THE ORIGINAL MANUFACTURER'S WARRANTY AND SUBJECT TO THEIR ALLOWANCE TO HIGHLINE ONLY IF FOUND DEFECTIVE BY SUCH MANUFACTURER.

During the Limited Warranty period specified above, any defect in material or workmanship in any warranted item of Highline Equipment not excluded below shall be repaired or replaced at Highline's option without charge by any authorized independent Highline Dealer. An authorized Dealer must make the warranty repair or replacement. Labour in accordance with Highline's labour reimbursement policy. Highline reserves the right to supply remanufactured replacement parts as it deems appropriate.

RETAIL PURCHASER RESPONSIBILITY

This Limited Warranty requires proper maintenance and periodic inspections of the Equipment as indicated in the Operator's Manual furnished with each new Equipment. The cost of routine or required maintenance and services is the responsibility of the retail purchaser. The retail purchaser is required to keep documented evidence that these services were performed. This Highline New Equipment Limited Warranty may be subject to cancellation if the above requirements are not performed.

EXCLUSIONS AND LIMITATIONS

The warranties contained herein shall NOT APPLY TO:

1. Any defect which was caused (in Highline's sole judgement) by other than normal use and service of the Equipment, or by any of the following:
 - a. accident
 - b. misuse or negligence
 - c. overloading
 - d. of reasonable and proper maintenance
 - e. improper repair or installation
 - f. unsuitable storage
 - g. non-Highline approved alteration or modification
 - h. natural calamities
 - i. vandalism
 - j. parts or accessories installed on Equipment which were not manufactured or installed by Highline authorized Dealers
 - k. the elements
 - l. collision or other accident.
2. Any Equipment whose identification numbers or marks have been altered or removed.
3. Any Equipment which any of the required or recommended periodic inspection or services have been performed using parts not manufactured or supplied by Highline or meeting Highline Specifications including, but without limitation, lubricants (oil, grease), belt lacings, and hydraulic fluids.
4. Any Equipment used in demonstrations not performed by a Highline Dealer. Warranty will be at the discretion of Highline for all other demonstration warranty.
5. New Equipment delivered to the retail purchaser in which the warranty registration has not been completed and returned to Highline within ten (10) days from the date of purchase.
6. Any defect that was caused (in Highline's sole judgement) by operation of the Equipment not abiding by standard operating procedures outlined in the Operator's Manual.
7. Tire Limited Warranties and support are the responsibility of the respective product's manufacturer.
8. Transportation costs, if any, of transporting to the Highline Dealer.
9. In no event shall Highline's liability exceed the purchase price of the product.
10. Highline shall not be liable to any person under any circumstances for any incidental or consequential damages (including but not limited to, loss of profits, out of service time and damage to equipment which this equipment may be attached) occurring for any reason at any time.
11. Diagnostic and overtime labour premiums are not covered under this Limited Warranty Policy.

12. Depreciation damage caused by normal wear, lack of reasonable and proper maintenance, failure to follow operating instructions, misuse, and/or lack of proper protection during storage.
13. Accessory systems and electronics not of Highline's manufacture are warranted only to the extent of such manufacturer's respective Limited Warranty if any.
14. Wear items which are listed by product group below:

COMMON WEAR ITEMS

Roller chain, sprockets, clutches, shear bolts, clutch components, chains, gearbox housings bolts/torqued parts, flails, feed roller belting, coupler chain, DRV couplers, bogie wheels, apron tines and hoses, blades and blade pans, blade bolts and nuts, skid shoes, chain guards, clutches and clutch components.

PARTS WARRANTY

Parts replaced in the warranty period will receive the balance of the one year New Equipment Limited Warranty. Replacement parts after the original machine warranty are warranted to be free from defects of material for ninety (90) days or the part will be repaired or replaced, without labour coverage for removal and reinstallation.

EXCLUSION OF WARRANTIES

UNLESS OTHERWISE REQUIRED BY LAW, AND EXCEPT FOR THE WARRANTIES EXPRESSLY AND SPECIFICALLY MADE HEREIN, HIGHLINE MAKES NO OTHER WARRANTIES, AND ANY POSSIBLE LIABILITY OF HIGHLINE HEREIN UNDER IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANT ABILITY OR FITNESS FOR A PARTICULAR PURPOSE. HIGHLINE RESERVES THE RIGHT TO MODIFY, ALTER AND IMPROVE ANY PRODUCT WITHOUT INCURRING ANY OBLIGATION TO REPLACE ANY PRODUCT PREVIOUSLY SOLD WITH SUCH MODIFICATION. NO PERSON IS AUTHORIZED TO GIVE ANY OTHER WARRANTY, OR TO ASSUME ANY ADDITIONAL OBLIGATION ON HIGHLINE'S BEHALF.