

Park the BP 661 on level ground.

Lower the forks to the ground for additional stability.

Ensure the BP 661 upper discharge door is locked in the upright position.

Disconnect the drive shaft from the tractor before beginning any work. Disconnect the BP 661 from the tractor hitch.

Block the machine to prevent any movement while assembling.



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

Securely block the machine to avoid any movement while doing the work.




Do Not Enter Tub While Parts Are Rotating

Before entering the tub:


- Turn off the tractor and remove the key.
- Wait for rotating parts to stop Contact with the rotating flail drum will cause serious injury or death.
- 1. Jack up the BP 661 under the left rear frame to allow the left axle to be able to removed.

Note: Do not place the jack on the axle or the bale lift frame.

Note: Leave the machine on the jack until the end of the assembly.

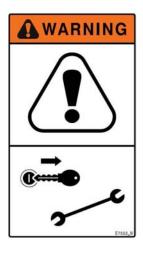




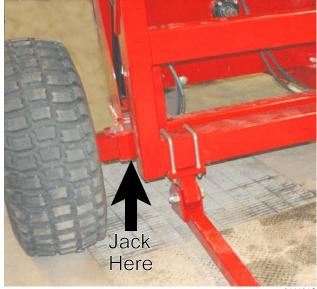

Jack Under the Left Frame

211191C

- 2. Remove the tire.
- 3. Remove the existing axle and hub.
 - Remove the u-bolt holding the axle.
 - Keep the u-bolt to be used again.
 - Slide the axle out.
 - Discard the axle.
 - Discard the hub and spindle.
- 4. Slide in the new Grain Tank axle with hub and spindle (1).
 - Position the axle to be 27-1/2" (699 mm) from the inside of the tab near the hub to the outside of the flatbar that the u-bolt goes through.
 - Re-install the u-bolt (2) and locknuts.
 - Do not tighten at this time.

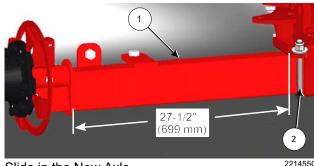


Slide in the New Axle

2214330

5. Install the axle brace.

- Attach the brace plate (5) to the processor frame with 2 of ½" x 6-1/16" x ½" u-bolts and flange locknuts (6).
 - Do not tighten at this time.
- Attach the axle brace (3) to the brace plate (5) with a 3/4" x 1-3/4" hex bolt and flange locknut (4).
 - Place the brace on top of the support tab.
 - Do not tighten at this time.
- Fasten the brace (3) to the axle tab with a 3/4" x 1-3/4" hex bolt and flange locknut (4).
 - Place the brace under the tab on the axle.
- Tighten the u-bolts on the brace plate (5) to 85 lbft (115 Nm).
- Tighten the brace bolts (4) to 297 lbft (403 Nm).

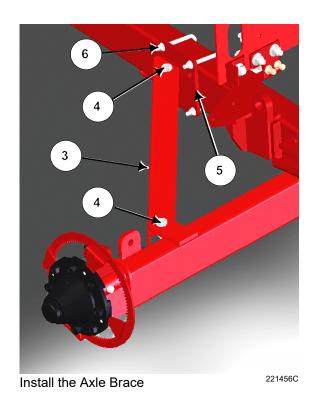

Page 2 — E20372_A

- 6. Remove the center flail cover panel on the left side of the processor.
 - Keep the fasteners for re-use.
 - Discard the panel.



Remove the Center Flail Cover Panel 221481

7. Mount the new auger transition panel to the outside of the tub wall using 4 of 3/8" x 1-1/4" carriage bolts and locknuts removed earlier.



Install Center Transition Panel 2

221482

- 8. Remove the left rear clearance light assembly from the rear tub wall.
 - Disconnect the harness connection.
 - Remove the light assembly.
 - Keep the light assembly and fasteners for re-installation later.




Remove the Left Rear Clearance Light

221483

9. Install the rear tank mount bracket (3) to the tub end wall.


Note: Have the top angle facing to the rear.

- Connect with a 2 of 3/4" x 1-3/4" flange bolt and flange locknut (4).
 - On the bottom 3/4" bolt also place the knee brace support bar (5).
- Connect the tank mount with 1 of 1 x 1-1/4" flange bolt and flange locknut (6)
 - Do not tighten at the time.
- 10. Install the knee brace (1).
 - Attach to the lower tub wall with 2 of 3/4" x 2" carriage bolts and flange locknuts (2).
 - Attach to the tank mount with 2 of ½" x 1-1/4" flange bolts and flange locknuts (3).
- 11. Attach the knee brace support bar (4).
 - Attach with a 3/4" x 1-3/4" hex bolt and flange locknut (5).
- 12. Inside the tub place a piece of wood (10) between the guard rods and the flail drum.
 - The wood will hold up the rods when the aggression handle is removed.
- 13. Move the aggression handle so that the guard rods are resting on the wood (10).

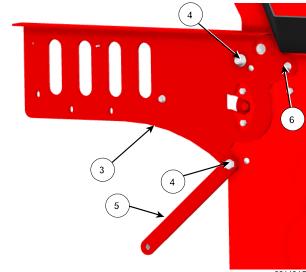


Install the Rear Tank Mount Bracket

221484C

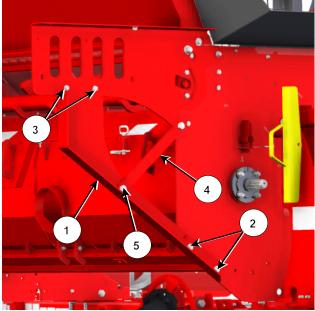

Install the Knee Brace and Support

221485C

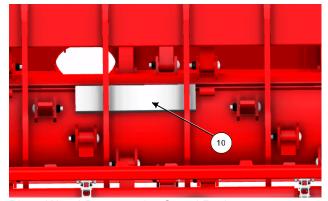


Place Wood Between the Guard Rods and Flail Drum

221488C

Page 4 — E20372_A

- 14. At the front tub wall, remove the aggression adjustment handle (7) by removing the bolt and nut (6) from the handle.
 - Slide the handle (7) off the rod.
 - Keep the handle and fasteners.
- Remove the flail drum pin storage 15. bracket (9) by removing the lower bearing bolt (8).
 - Keep the bracket and fastener.

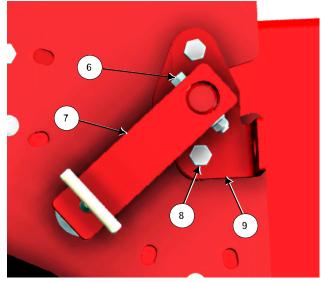


Remove the Aggression Handle and Pin Storage Bracket

221489C


16. Install the front tank mount bracket (1) to the tub end wall.

Note: The front mount bracket has a tab in front with a hole for the tank lid handle

- Connect with 2 of 3/4" x 1-3/4" flange bolts and flange locknuts (2).
 - On the bottom 3/4" bolt also place the knee brace support bar (3).
- Do not tighten at the time.
- 17. Re-install the flail drum pin storage bracket (9).
- 18. Replace the bolt (8) that goes into the bearing.
- 19. Slide the aggression adjustment handle (7) onto the rod.
 - Install the bolt and nut (6) onto the handle.

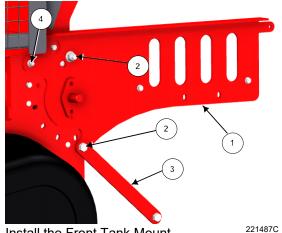


Install the Front Tank Mount

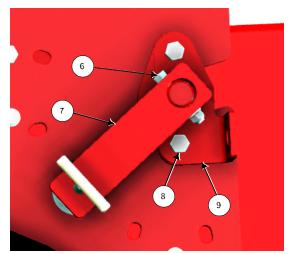



Re-Install the Pin Storage Bracket and the 221489C Aggression Handle

Page 5 E20372 A


- 20. Install the front knee brace (1).
 - Attach to the lower tub wall with 2 of 3/4" x 2" carriage bolts and flange locknuts (2).
 - Attach to the tank mount with 2 of 1/2" x 1-1/4" flange bolts and flange locknuts (3).
- 21. Attach the front knee brace support (4).
 - Attach with a 3/4" x 1-3/4" hex bolt and flange locknut (5).

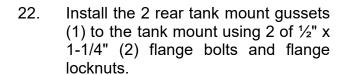

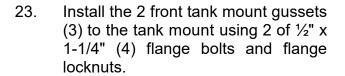

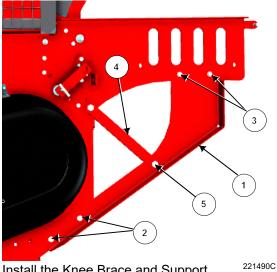


Install the Knee Brace and Support

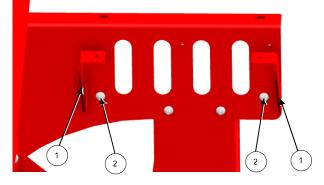

Install the Rear Tank Mount Gussets

221491C

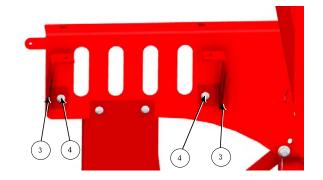


Install the Front Tank Mount Gussets

221492C

Page 6 E20372 A

- 24. At the rear of the processor attach the tank to axle brace (3).
 - Fasten to the tab on the rear tank mount with a 3/4" x 1-3/4" hex bolt and flange locknut (4).
 - Do not tighten at this time.
 - Attach to the axle tab with a 3/4" x 1-3/4" hex bolt and flange locknut (5).
 - Do not tighten at this time.

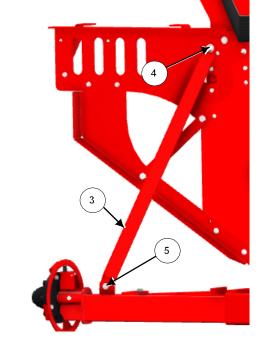


Attach the Tank to Axle Brace

221493C

- 25. Place lifting straps at the four corners (5) of the tank.
 - Use the holes in the flat along the side of the tank as attachment points for the lifting straps.
- 26. Remove the fasteners holding the grain tank to the shipping frame.
- 27. Lift the tank.
- 28. Lower the tank onto the tank supports and gussets.
 - Keep the weight of the tank on the lifting straps.

Note: The tank will need to be supported by the lifting straps until near the end of the assembly.

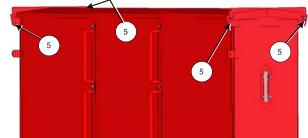

Place Lifting Straps onto the Tank


221464C



Lower the Tank Onto the Supports and Gussets

221494


- 29. Align the tank mount holes to the front and rear mounting bracket holes
 - Fasten with 4 of ½" x 1-1/4" flange bolts and flange locknuts (1).
 - Do not tighten at this time.
- 30. Align the support gussets to the front and rear tank support holes.
 - Fasten with 4 of ½" x 1-1/4" flange bolts and flange locknuts (2).
 - Do not tighten at this time.

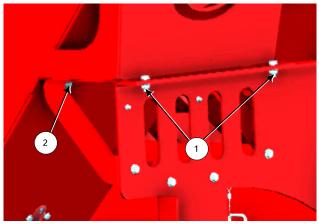

Fasten the Tank to the Mounting Brackets and Gussets


221495C

- 31. Check the condition of the foam tape around the surface of the auger flange (1) that will connect to the bottom of the tank.
 - This foam tape will ensure a good seal.

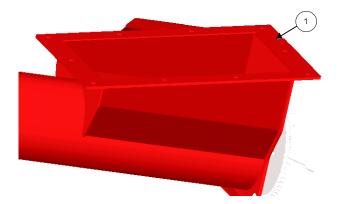

Check Condition of the Foam Tape on Flange 221468C

- Slide the auger tube (2) into the auger 32. transition mounted on the processor tub wall.
- 33. Mount the auger flange to the bottom of the tank using 10 of 3/8" x 1-1/2" hex bolts, flatwashers and flange locknuts (3).
 - On the back two bolts attach the calibration pail holder (4) with the fasteners.
 - Fully tighten all the fasteners to create a good seal to the tank.

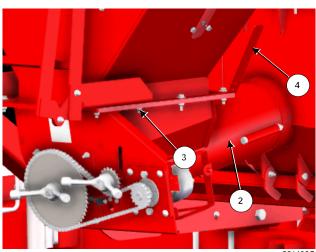

Mount the Auger to the Tank


Page 8 E20372 A

- 34. Adjust the tank to be level with the frame of the processor.
- 35. Tighten all the fasteners on the tank supports, tank mounts, gussets and the axle brace.



Adjust Tank to Be Level, Tighten all Fasteners


36. Tighten all the fasteners on the axle to frame brace.

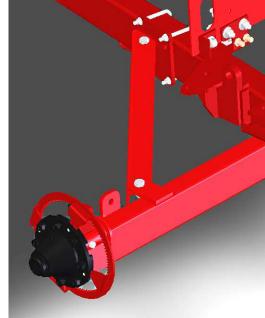

Tighten the Axle to Frame Brace

221456

- 37. Tighten the u-bolt holding the axle.
 - Torque to 200 lbft (271 Nm).

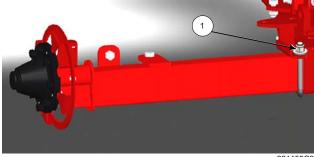


Tighten the U-bolt To Hold the Axle

221455C2

- 38. Mount the selector valve onto the rear tub wall.
 - Remove the hoses from both sides of the bulkhead on the rear tub wall.
 - Remove the bulkhead union from the tub wall.
 - Mount the union to the bottom holes of the valve support (34).
 - Mount the selector valve according to the chart and diagram.

ITEM	DESCRIPTION	
4	WASHER,FLAT,1/4,ZP	
5	BOLT,HEX,3/4X1-3/4,UNC,GR5,ZP	
7	BOLT,HEX,1/4X3-1/2,UNC,GR5,ZP	
13	NUT,FLG,LOCK,1/4,UNC,GR5,ZP	
14	NUT,FLG,LOCK,3/4,UNC,GR5,ZP	
25	HYD,VALVE,ELEC_DOUBLE SELECTOR	
34	BP661GT,VALVE_SUPPORT	

- 39. Remove the lifting straps from the Grain Tank.
- 40. If the auger drive guard and calibration crank are attached to the auger, remove them to allow the assembly of the hydraulic components.

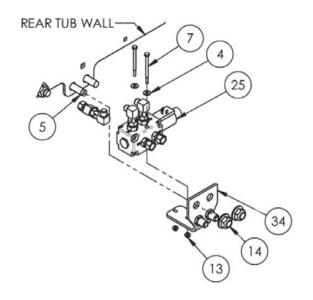


Mount the Selector Valve

221499



Selector Valve Mounted on Rear Tub Wall

221498

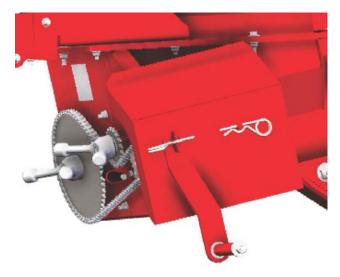


Remove Drive Guard and Crank

221516

Page 10 — E20372_A


41. Assemble the hydraulics according to the chart and diagram below.

Note: The motor is already installed on the auger. It is shown in the diagram for reference purposes only.

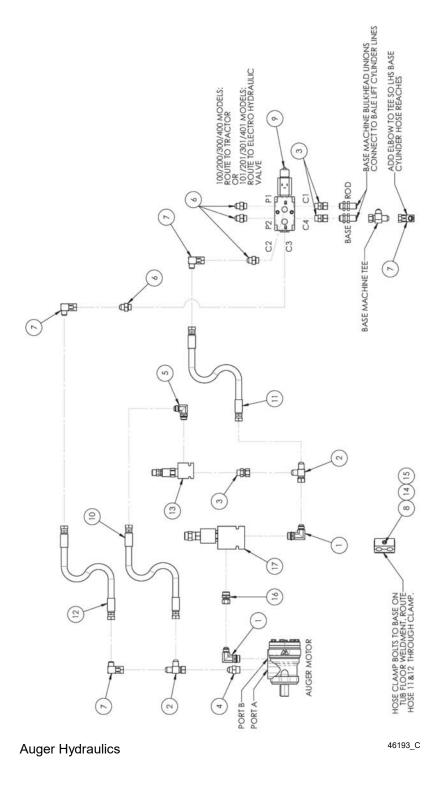


Page 11 — E20372_A

ITEM	DESCRIPTION	QTY.
1	HYD,FIT,ELBOW,10MB-8MJ90	2
2	HYD,FIT,TEE,8FJX-8MJ-8MJ	2
3	HYD,FIT,ADAPTER,8MB-8FJX	3
4	HYD,FIT,ADAPTER,10MB-8MJ	1
5	HYD,FIT,ELBOW,8MB-8MJ90	1
6	HYD,FIT,ADAPTER,8MB-8MJ	4
7	HYD,FIT,ELBOW,8FJX-8MJ90	4
8	BOLT,HEX,5/16X1-3/4,UNC,GR5,ZP	1
9	HYD,VALVE,ELEC_DOUBLE_SELECTOR	1
10	HYD,HOSE,3/8X19,8FJX-8FJX,2W	1
11	HYD,HOSE,3/8X69,8FJX-8FJX,2W	1
12	HYD,HOSE,3/8X76,8FJX-8FJX,2W	1
13	HYD,VALVE,RELIEF,1500,10 ORB	1
14	HYD,CLP,19/19,3015-3,3,PA	1
15	HYD,CLAMP,CAP,DIN,3015-3,3	1
16	HYD,FIT,ADAPTER,10MB-8FJX	1
17	HYD,VLV,PRO,SOL,3500,10_ORB	1

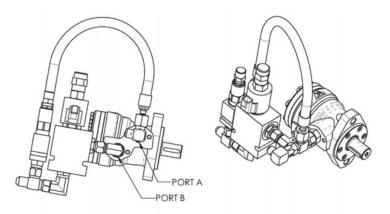

Views of Installed Valves and Hose on Auger Motor

46195_C2

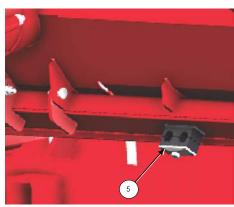


View of Installed Hose Clamp on Processor Tub

221515C

42. Attach the auger hose clamp to the lower bottom side of the processor.


Page 12 — E20372_A

- Route the hydraulic hoses along the 43. frame and support them.
- Install the left rear clearance light 44. assembly (that was removed earlier) (3) to the tank mount bracket.
 - Use 2 of 1/4" x 3/4" carriage bolts and flange locknuts (4).

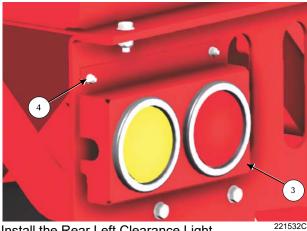

Install the Rear Left Clearance Light

- 45. Install the motor guard (5) and calibration crank (6).
 - Fasten with 2 of 2" x 3-5/8" clip pins (7).

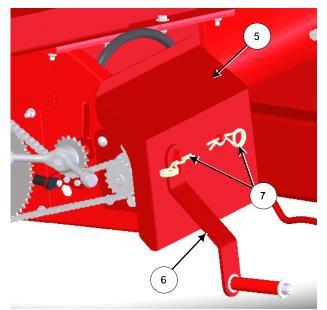

Install the Motor Guard and Calibration Crank ^{221476C}


Page 13 E20372_A 46. Attach the tank lid handle according to the instructions below.



Handle Installed

221520


- Place a 3/8" x 2-1/2" flange bolt (2) through the top hole of the handle (1).
- Place a 3/8" jam nut (3) onto the bolt.
- Place the bolt/jam nut into the top hole in the tank lid.
- Place a 3/8" flange locknut (4) onto the bolt.
- Adjust the jam nut and flange locknut so the bolt becomes a pivot shaft for the handle.

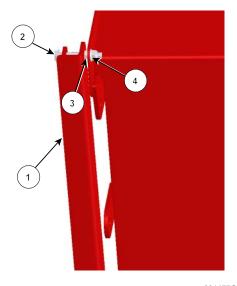


Install the Pivot Bolt in Handle and Tank^{221477C}

Page 14 — E20372_A


- Place a 3/8" x 2-1/2" flange bolt (6) through the slot of the handle
- Place a 3/8" jam nut (7) onto the bolt.
- Place the bolt/jam nut into the tab with the hole in the tank mount.
- Place a 3/8" flange locknut (8) onto the bolt.
- Adjust the jam nut and flange locknut so the bolt becomes a guide for the handle.
- Check for free movement of the handle and tank lid.

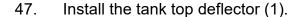

Attach the deflector with \(\frac{1}{2} \)" x 1-1/4" flange bolts and flange locknuts (2) through the back bottom holes at the top of the tank.

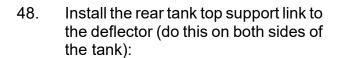


- Place a ½" flat washer onto a ½" x 1-3/4" hex bolt (4).
- Place the 1/2" bolt through the deflector link (3).
- Put a ½" flat washer onto the bolt.
- Place the bolt through the tank top deflector and the processor side deflector.
- Place a ½" flange locknut onto the bolt.
- Do not tighten at this time.

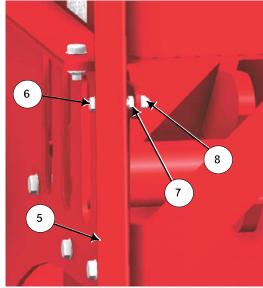


Install the Guide Bolt in the Handle and Tank Mount

221517C

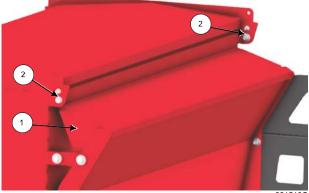


Attach Tank Top Deflector

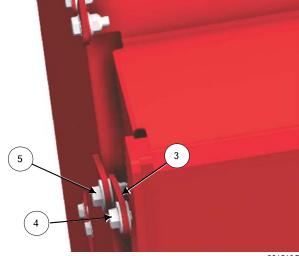


Install the Rear Tank Support Link

221519C

- 49. Attach the rear tank top support link to the tank (do this on both sides of the tank):
 - Place a 1/2" flatwasher onto a 1/2" x 1-3/4" hex bolt (5).
 - Place the 1/2" bolt into the tab near the top rear of the tank.
 - Place a ½ flatwasher onto the bolt.
 - Place the bolt through the support
 - Place a 1/2" flange locknut onto the bolt.

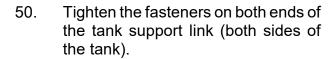

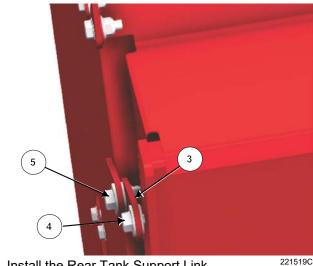


Install the Rear Tank Support Link

51. Connect the electrical wiring harnesses according to the drawings.

46169 CC **Grain Tank Harness** Connect to Selector Valve on Rear Tub Wall SELECTOR VLV To Hitch for Tractor Connection C1 C2 TRACTOR GND SPD Connect to Speed C7 Sensor on Wheel Sprocket Auxiliary -Not Connected C3 C5 GT AGR VLV CAN TERM Not Connected Connect to Valve near Auger Motor C4 GT AGR SPD Connect to Speed Sensor on Auger Sprocket

> Page 16 E20372 A

Tractor Harness 46170_CC

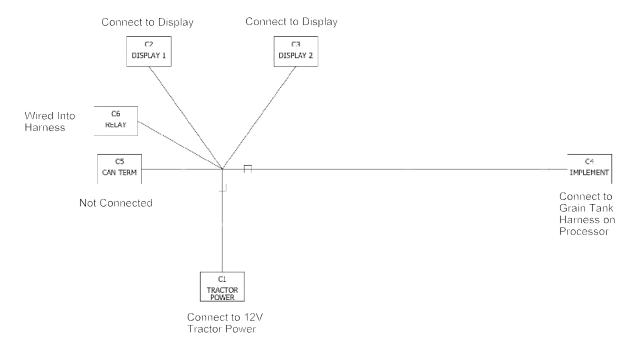

- 52. Mount the tire onto the hub.
- 53. Lower the BP 661 and remove the jack.
- 54. Place the calibration bucket onto the bucket holder.
- 55. Place the weigh scale in the manual tube on the side of the Grain Tank.

Page 17 — E20372_A