

Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

Securely block the machine to avoid any movement while doing the work.



Do Not Enter Tub While Parts Are Rotating

Before entering the tub:

- Turn off the tractor and remove the key.
- Wait for rotating parts to stop


Contact with the rotating flail drum will cause serious injury or death.

## **Removing Parts**

- 1. Disconnect the existing guard rods (1) from the adjustment tube tabs by removing the bolts, flatwashers and locknuts (2).
  - Discard this hardware.
  - Leave the other end of the guard rods connected to the tub wall.
  - Allow the guard rods to rest on the flail drum.





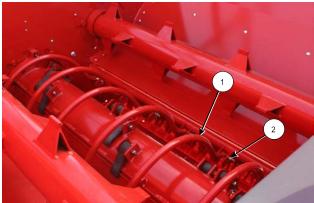

Disconnect Guard Rods from Adjustment Tube 221538C




Leave Other End of Guard Rod Connected

218168


Page 1

## Installation of the BP 660 Additional Guard Rods

 - 2. Near the inside of the front tub wall, remove the adjustment handle nut, flatwasher, slotted spacer and bolt (4) on the guard rod adjustment tube.
  - Keep the hardware and spacer to be used again.
- 3. Remove the hardware and rear pipe from the adjustment tube.
  - Keep the pipe and fasteners to be used again.

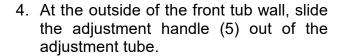


 - Support the adjustment tube on the inside of the tube wall while removing the handle.
- Keep the handle to be reinstalled later.

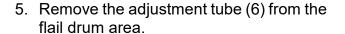

Note: If a Feed Chopper is installed it may be necessary to move the chopper to remove the tube.

Discard the adjustment tube.

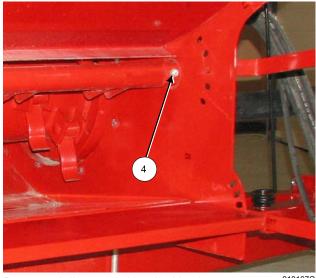


Remove Adjustment Handle Hardware

218167C



Remove Adjustment Handle, Support Tube

218169C

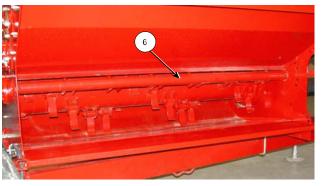


Remove the Adjustment Tube

218170C

Page 2 E20380 A

## **Installing Parts**

 
- 1. Lay the new guard rods on the flail drum in the orientation shown in the diagram.
  - Note the bends on the tube.
    - The bend on the rod determines which way to install the rod.
    - Use the diagram to determine the tub wall end and the rod adjustor end.
- 2. Connect the new guard rods to the left tub wall mount tabs using the new 1/2" x 3" hex bolts and stover nuts.
  - Ensure the bolts are loose enough to allow the guard rods to be moved into all positions.

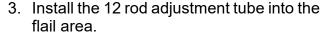

The tabs on the adjustment tube should point toward the flail drum and slope downward.


Note: If a Feed Chopper is installed it may be necessary to move the chopper to install the tube.

Insert the tube into the rear tub wall.

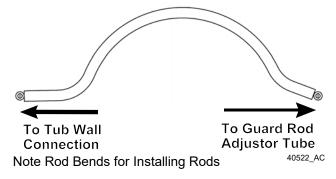



Connect All the Rods to the Tub Wall Tabs

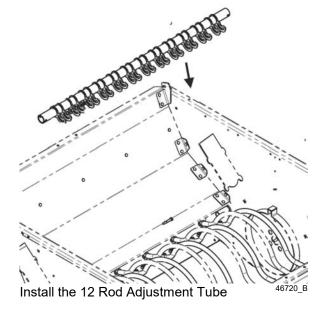





Installed 12 Guard Rod Adjustment Tube

Page 3

- 4. Replace the rear pipe and hardware into the adjustment tube.
- 5. Replace the adjustment handle through the front tub wall and into the adjustment tube.
- 6. Slide the adjustment handle over the adjustment tube (9).
- 7. Fasten the adjustment handle onto the tube with the bolt (3) and nut (1) removed earlier.

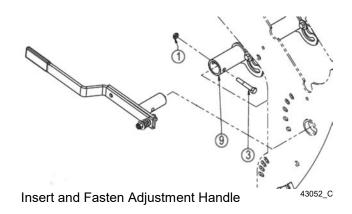

- 8. Move the aggression level handle to position 1.
- 9. Place all the guard rods (8) into the tabs of the adjustment tube.
  - Fasten the rods into the tabs with a new ½" x 3-1/4" hex bolt (5), a ½" flatwasher on the outside of both tabs (3).
    - Use blue Loctite on the bolts to prevent the nuts (1) from self-loosening.
  - Ensure the bolts slide freely allowing the guard rods to move through each setting smoothly.

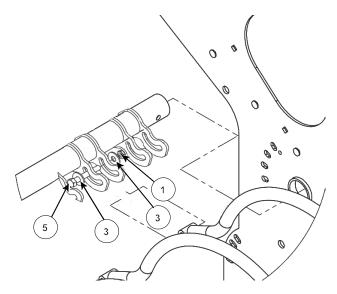

Attach Guard Rods to the Adjustment Tube

221539C

10. Move the aggression adjustment handle to all the positions to ensure free movement of the handle and guard rods.

Page 4 —