



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

Securely block the machine to avoid any movement while doing the work.




Do not enter the tub while the mixers are turning.

Entering the tub when the mixers are turning will result in death or serious injury.



Do not contact the rotating screws.

1. Attach the mounting bracket (12) to the display (11).
 - Remove the top 4 screws from the back of the display.
 - Place the display onto the bracket.
 - Fasten the display to the bracket with 4 of 1/4" flatwashers (5) and the 4 screws removed from the display.
2. Attach the lower part of the display to the bracket (12) with 2 of 1/4" x 1" hex bolts (3) and flange locknuts (10).

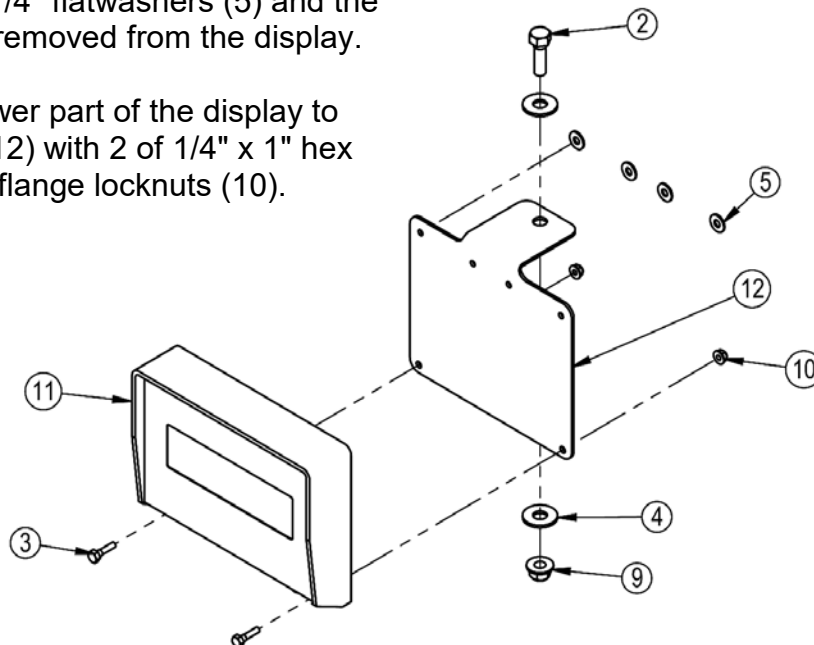


REMOVE TOP 4 SCREWS FROM THE DISPLAY AND USE THEM TO FASTEN THE BRACKET TO THE DISPLAY.

Remote Display and Mounting Bracket

47107_A

3. Fasten the mounting bracket/display to one of the top holes in the rim of the tub.

- Place a $\frac{1}{2}$ " x 1-1/2" hex bolt (2) and flatwasher (4) through the bracket (13) and into the mounting hole on the top of the tub wall.
- Fasten the bracket with a $\frac{1}{2}$ " flatwasher (4) and flange locknut (9).

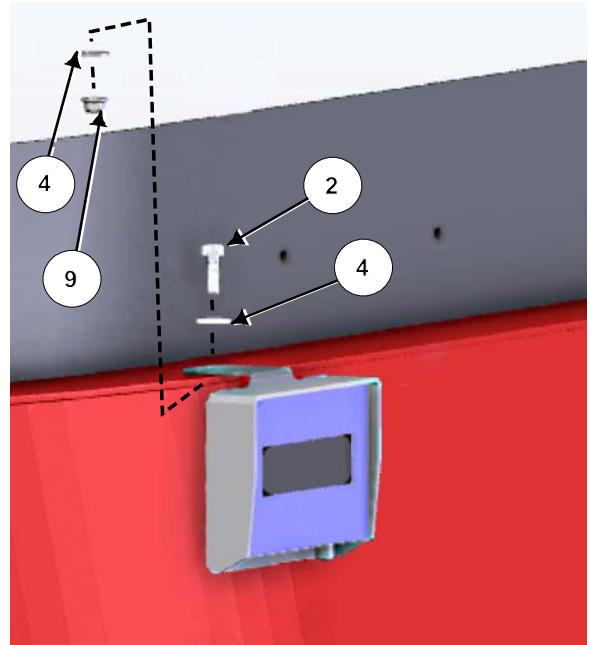

Remote Display and Mounting Bracket

222317

4. Attach the wire from the remote display to the main display.
 - Connect the remote display cable to the Aux port on the main display.

5. Support and fasten the cables with the supplied loop clamps, machine screws #10-24 x 3/4" and nylon locknuts #10-24.

- Attach the cables to the top of the tub rim.
 - The cables can be attached to the rubber rim if it is present. This will keep the cables out of any dirt on the rim.
- The cables can be attached to existing harnesses on the machine using the cable ties.

6. Additional wire support can be attached using the cable ties.



Remote Display Mounted on Tub Wall (Left Hand Side Shown)


222274



Attach Cables to Top of Tank Rim

223172

Connection Arrangement for DigiStar/TopCon Displays

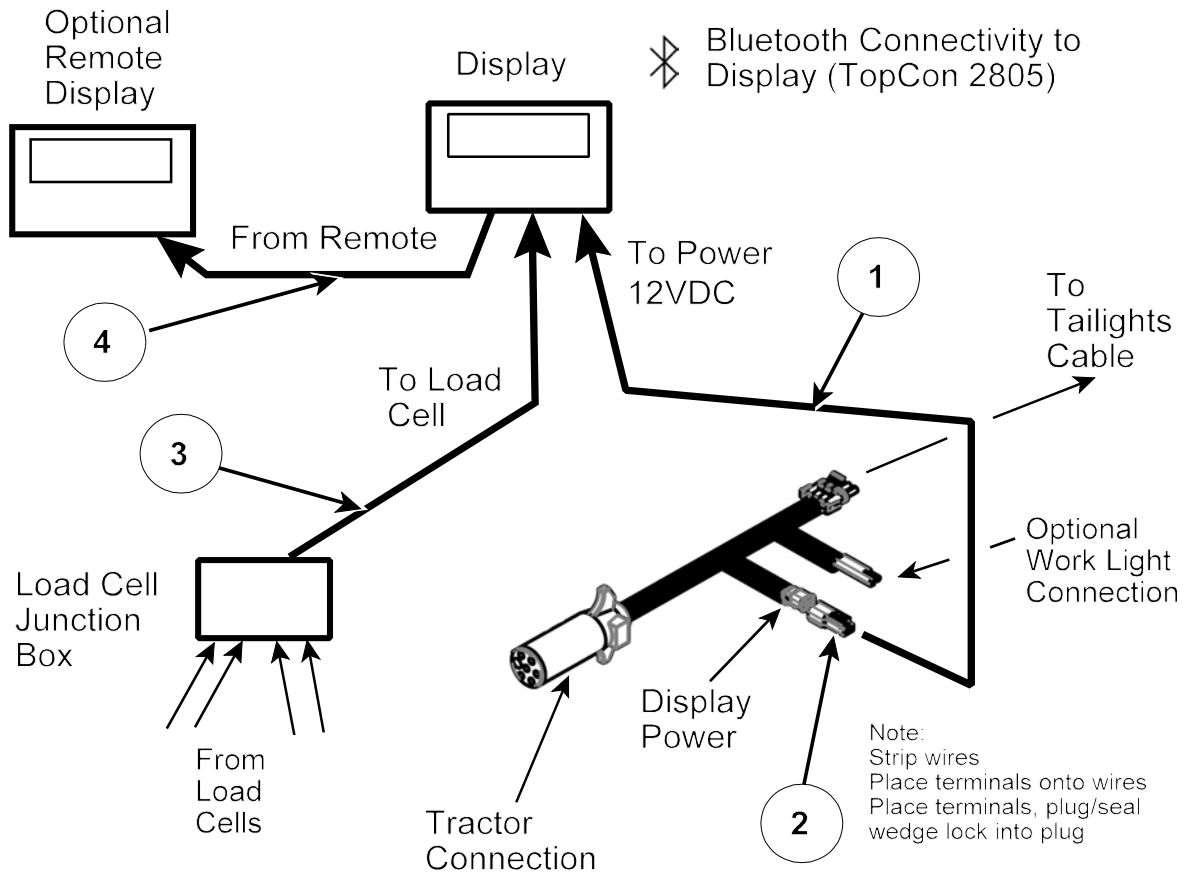

Remote DigiStar/TopCon Connection Arrangement (Not to Scale)

223151C

1	Wire to Power of Main Display
2	Connection for Power
3	Wire To Load Cell Junction Box
4	Wire to Remote Display