

Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

Securely block the machine to avoid any movement while doing the work.



Do not enter the tub while the mixers are turning.


Entering the tub when the mixers are turning will result in death or serious injury.

Do not contact the rotating screws.

<u>Note</u>: For this assembly there will be a remote display mounted on the right and left side of the tub.

The mounting instructions are the same for the right and left displays.

- 1. Attach the mounting bracket (12) to the display (11).
 - Remove the top 4 screws from the back of the display.
 - Place the display onto the bracket.
 Fasten the display to the bracket with 4 of 1/4" flatwashers (5) and the 4 screws removed from the display.
- 2. Attach the lower part of the display to the bracket (12) with 2 of 1/4" x 1" hex bolts (3) and flange locknuts (10).

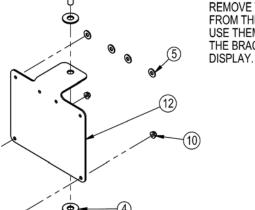

REMOVE TOP 4 SCREWS FROM THE DISPLAY AND USE THEM TO FASTEN THE BRACKET TO THE






Remote Display and Mounting Bracket

47107_A

- Fasten the mounting bracket/display to one of the top holes in the rim of the tub.
 - Place a ½" x 1-1/2" hex bolt (2) and flatwasher (4) through the bracket (13) and into the mounting hole on the top of the tub wall.
 - Fasten the bracket with a ½"
 flatwasher (4) and flange locknut
 (9).
- 4. Fasten the second bracket/display to a location where it is easy to read.
 - Follow the instructions given in step 3.
- 5. Attach the wires from the remote displays to the main display as shown in the diagram below and the chart.
 - Use the various lengths of wire to connect the displays.
- 6. Support and fasten the cables with the supplied loop clamps, machine screws #10-24 x 3/4" and nylon locknuts #10-24.
 - Attach the cables to the top of the tub rim.
 - The cables can be attached to the rubber rim if it is present.
 This will keep the cables out of any dirt on the rim.
 - The cables can be attached to existing harnesses on the machine using the cable ties.
- 7. Additional wire support can be attached using the cable ties.

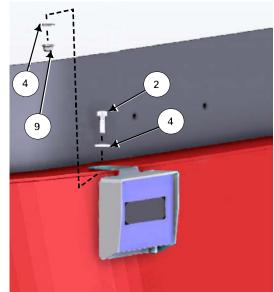

Remote Display and Mounting Bracket (Left Side Shown)

222317



Remote Display Mounted on Tub Wall (Left Side Shown)


222274



Attach Cables to Top of Tank Rim

Page 2

Connection Arrangement for 2 Remote DigiStar/TopCon Displays

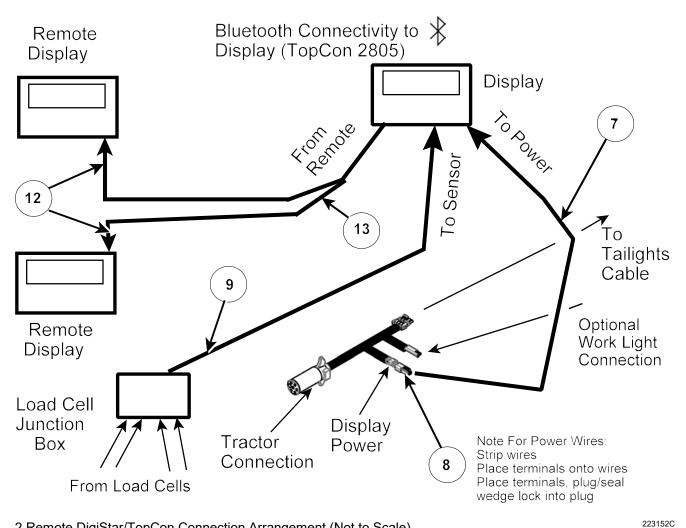

2 Remote DigiStar/TopCon Connection Arrangement (Not to Scale)

7	Wire to Power of Main Display
8	Connection for Power
9	Wire To Load Cell Junction Box
12	Wire to Remote Display
13	Y-Cable Connection



Y-Cable Connection

223151

Page 3 E22902_A