



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

Securely block the machine to avoid any movement while doing the work.



Do not enter the tub while the mixers are turning.


Entering the tub when the mixers are turning will result in death or serious injury.



Do not contact the rotating screws.


1. Attach the mounting bracket (13) to the display (11).

- Place 4 of 1/4" x 3/4" hex bolts (3), flat washers (5) through the back of the display into the mount bracket (13).
- Fasten with 4 of 1/4" nylon locknuts (10).

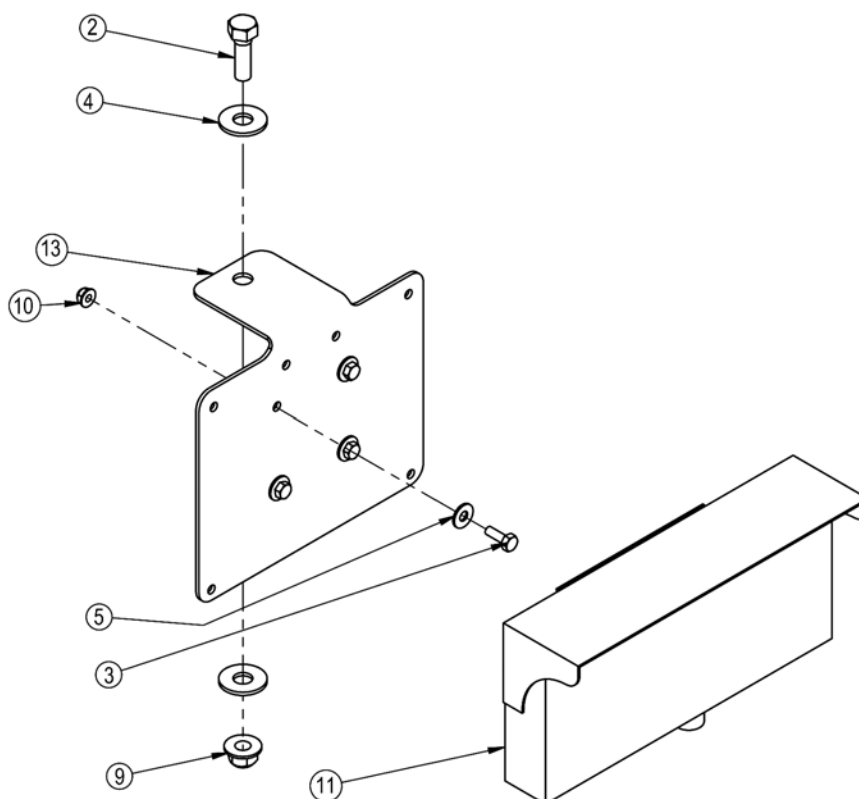

Remote Display and Mounting Bracket

47107_A

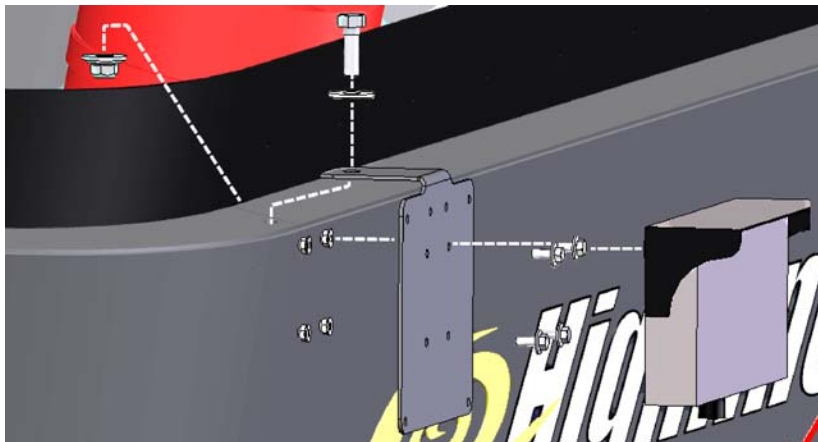

Remote Display and Mounting Bracket

222317

2. Fasten the mounting bracket/display to the tub.
 - Place a $\frac{1}{2}$ " x 1-1/2" hex bolt (2) and flatwasher (4) through the bracket (13) and into the mounting hole on the top of the tub wall.
 - Fasten the bracket with a $\frac{1}{2}$ " flatwasher (4) and flange locknut (9).
3. Fasten the second bracket/display to the tub at the desired location.
 - Follow procedures in steps 1 & 2.
4. Attach the wires as shown in the diagram and the chart below.
 - Use the various lengths of wire to connect the displays.
5. Support and fasten the cables with the supplied loop clamps, machine screws #10-24 x 3/4" and nylon locknuts #10-24.
 - Attach the cables to the top of the tub rim.
 - The cables can be attached to the rubber rim if it is present. This will keep the cables out of any dirt on the rim.
 - The cables can be attached to existing harnesses on the machine using the cable ties.
6. Additional wire support can be attached using the cable ties.



Remote Display Mounted on Tub Wall
(Left Hand Mounting Shown)


222274



Attach Cables to Top of Tank Rim

223172-2

Connection Arrangement for 2 Dinamica Displays

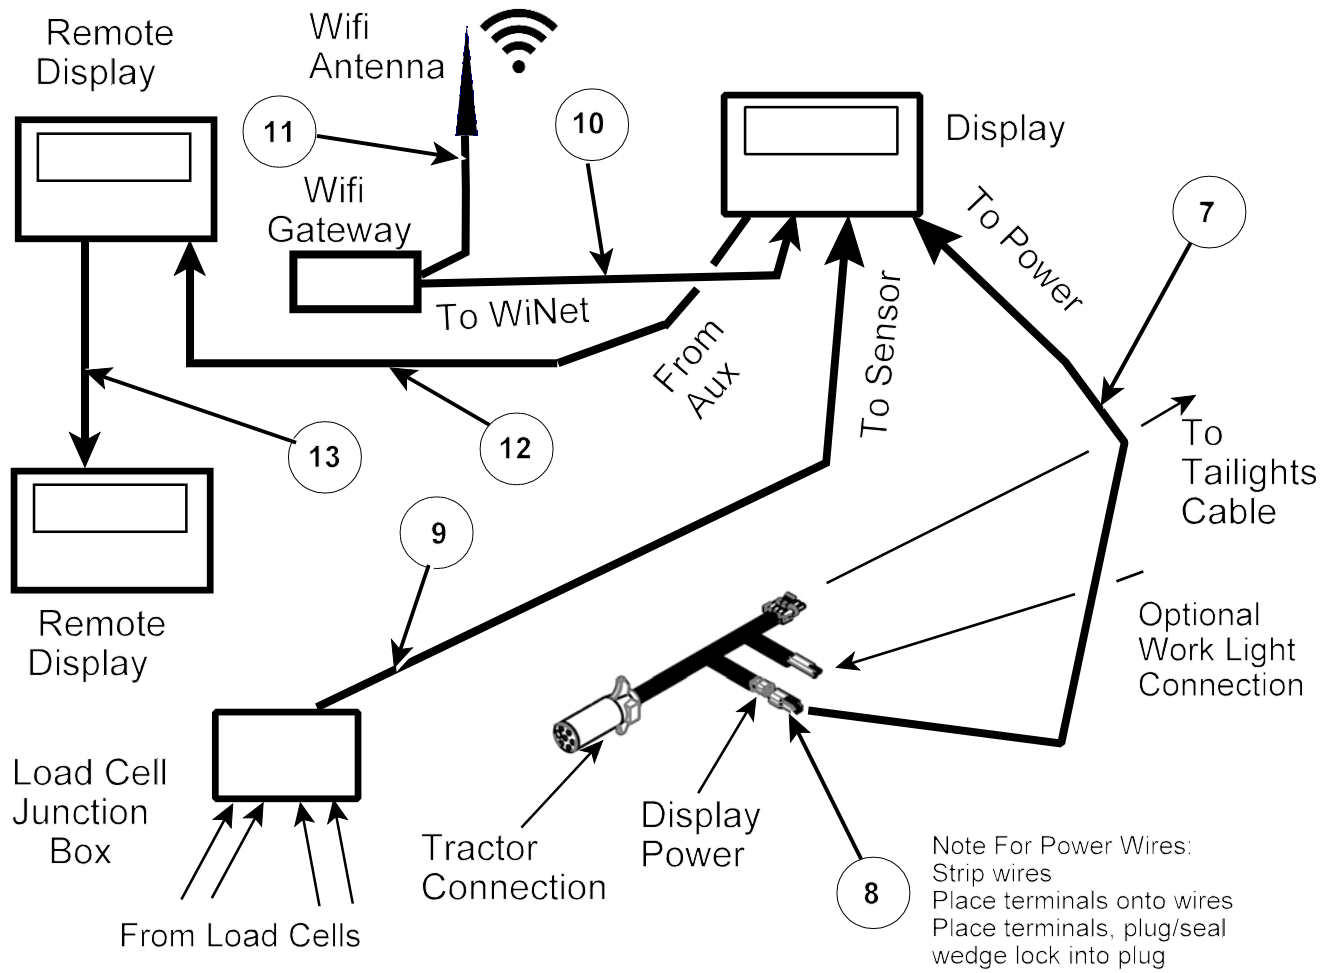

Dinamica 2 Remote Connection Arrangement (Not to Scale)

223154C

7	Wire to Power of Main Display
8	Connection for Power
9	Wire from Load Cell Junction Box
10	Wire to WiFi Gateway
11	WiFi Antenna
12	Wire to Remote
13	Wire Remote to Remote