


Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.


Securely block the machine to avoid any movement while doing the work.



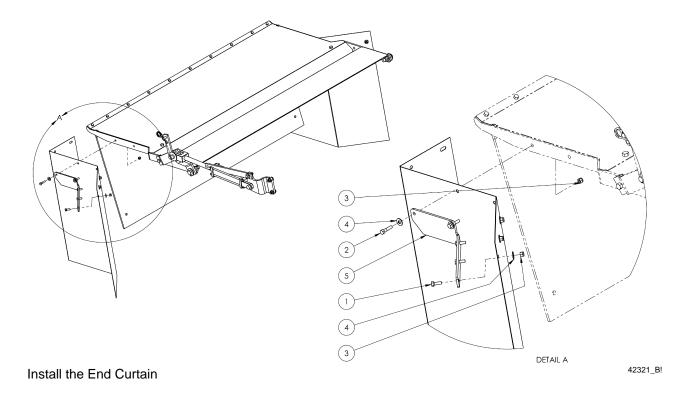

ITEM NO.	DESCRIPTION	QTY.
1	BOLT,HEX,3/8X1,UNC,GR5,ZP	6
2	BOLT,HEX,3/8X1-1/2,UNC,GR5,ZP	4
3	NUT,NYLOCK,3/8,UNC,ZP	10
4	WASHER,FLAT,3/8,ZP	10
5	PLATE,SKIRT,END,LH	1
6	PLATE,SKIRT,END,RH	1
7	CURTAIN,END,BELTING	1
8	CURTAIN,END,BELTING	1

- Page 1 ———— E9773\_B

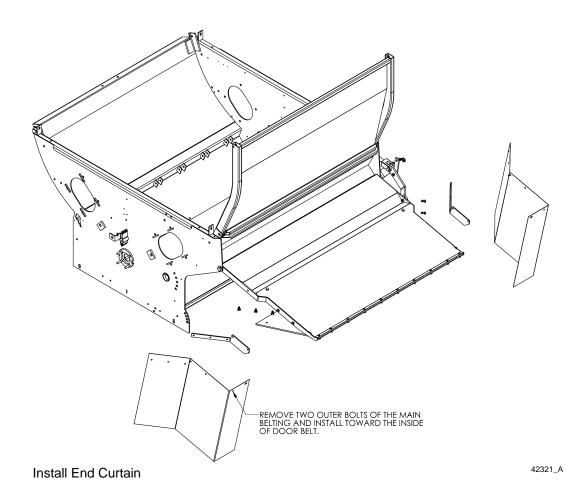

- Page 2 ----- E9773\_B