

Installation of the Bale Top Deflectors



Shut down the tractor and remove the key before repairing, servicing, lubricating or cleaning the machine.

Relieve all hydraulic pressure in the hoses. Disconnect the hydraulic hoses from the tractor before going near the machine.

Securely block the machine to avoid any movement while doing the work.



Do Not Enter Tub While Parts Are Rotating

Before entering the tub:

- Turn off the tractor and remove the key.
- Wait for rotating parts to stop


Contact with the rotating flail drum will cause serious injury or death.



CFR650 & CFR651

Installing On The Right Tub Wall


1. Remove the fasteners (1) that connect the top of the front screen to the right tub wall.
 - Keep these fasteners as they will be used later.

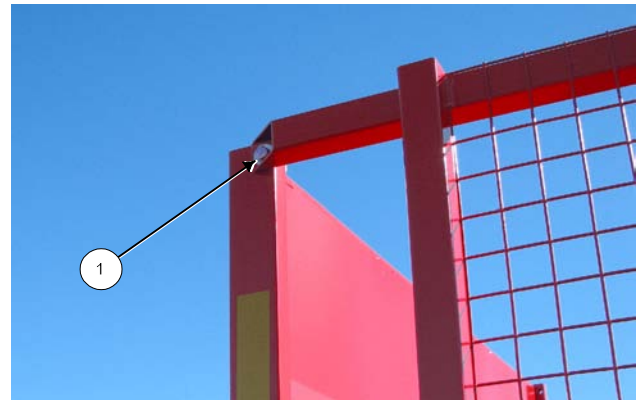

Remove Fasteners From Screen to Tub Wall 215088C

Installation of the Bale Top Deflectors

2. Place the deflector panel into the wall tubes.
 - Ensure the bent portion of the panel is toward the inside of the tub.
3. Fasten the front of the deflector.
 - Use the fasteners that were removed in Step 1.
 - Place the fastener through the screen and wall tube.
4. Fasten the rear of the deflector with the supplied $\frac{1}{2}$ " x 2 $\frac{1}{2}$ " bolt and locknut.

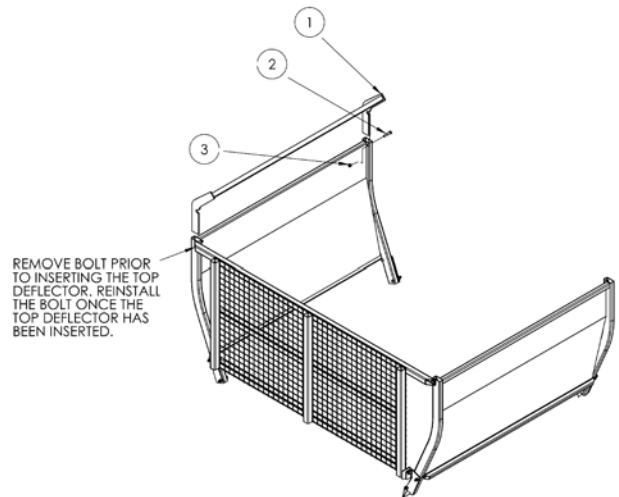


Top Deflector on Right Tub Wall

215089


Installing On The Left Tub Wall

1. Remove the fasteners (1) that connect the top of the front screen to the left tub wall.
 - Keep these fasteners as they will be used later.
2. Place the deflector panel into the wall tubes.
 - Ensure the bent portion of the panel is toward the inside of the tub.
3. Fasten the front of the deflector.
 - Use the fasteners that were removed in Step 1.
 - Place the fastener through the screen and wall tube.
4. Fasten the rear of the deflector with the supplied $\frac{1}{2}$ " x 2 $\frac{1}{2}$ " bolt and locknut.

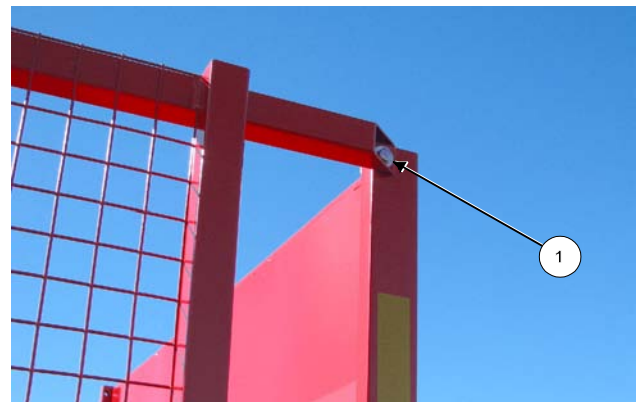

Remove Fasteners From Screen to Tub Wall

215090C

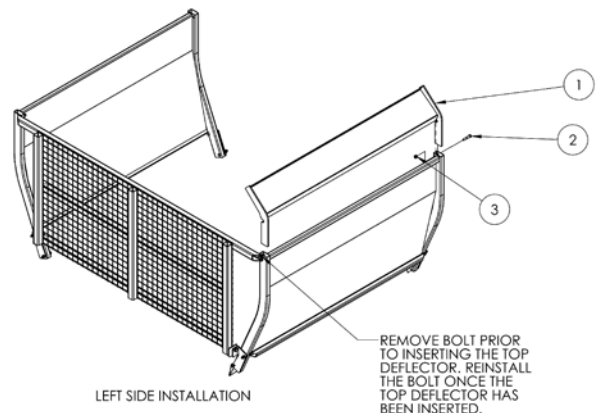

Top Deflector on Left Tub Wall


215091

CFR1251

Installing On The Front Right Tub Wall

1. Remove the fasteners (1) that connect the top of the front screen to the right tub wall.

- Keep these fasteners as they will be used later.

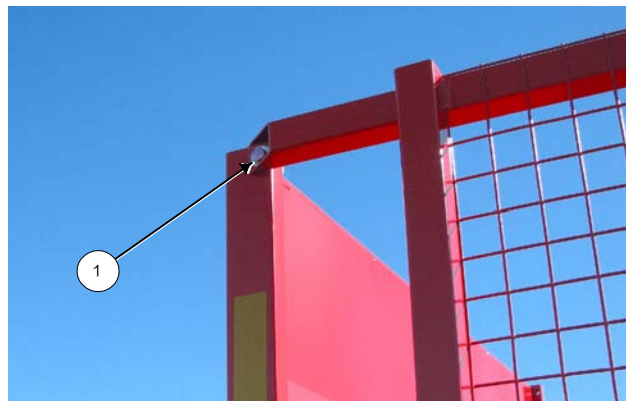

Remove Fasteners From Screen to Tub Wall 215088C

2. Move the camera and mount plate.

- Place the camera out of the way during installation.
- The camera will be re-installed later.



Move the Camera & Mount Plate 215100

3. Remove the fasteners and spacer tube between the front and rear wall.


- Keep these fasteners and spacer as they will be used later.



Remove Fastener and Spacer Between Walls 215101

Installation of the Bale Top Deflectors


4. Place the deflector panel into the wall tubes.
 - Ensure the bent portion of the panel is toward the inside of the tub.

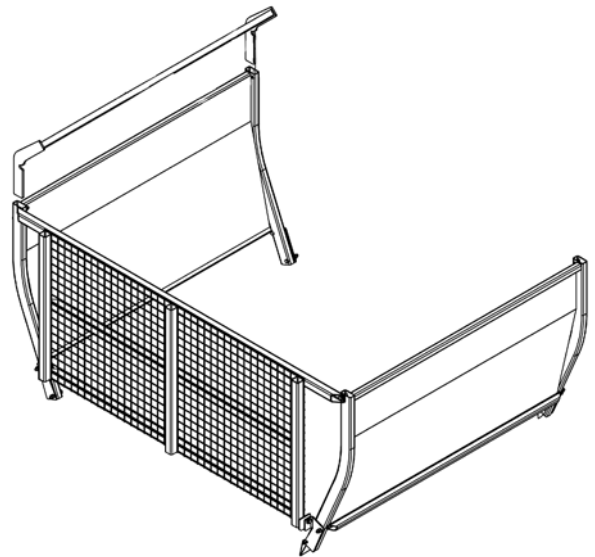

Top Deflector on Right Tub Wall

215110

5. Place the camera between the screen tube and front tube.
6. Fasten the front of the deflector.
 - Use the fasteners that were removed in Step 1.
 - Place the fastener through the screen tube, camera plate and wall tube.

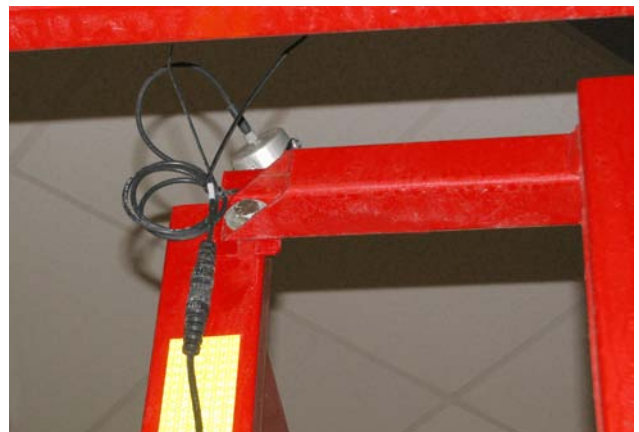


Mount the Camera on the Front Tube

215101

7. Fasten the rear of the deflector with the spacer (1), bolt and locknut (2) that was removed in Step 3.

Note: If a top deflector is being installed on the rear tub wall, leave the spacer and fasteners until the rear deflector is installed.

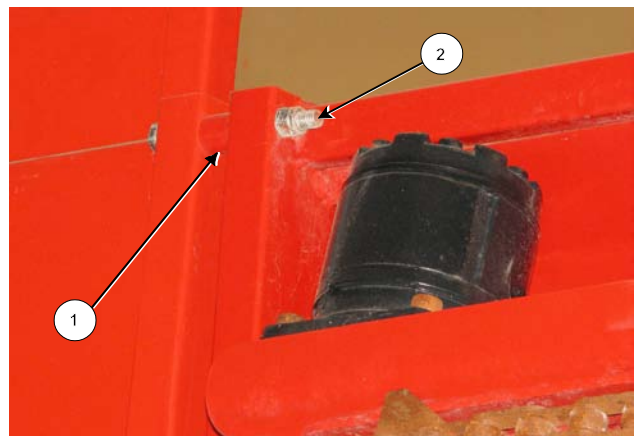

Fasten Rear of the Deflector

215107C

Installing On The Rear Right Tub Wall

1. Remove the fasteners and spacer tube between the front and rear wall.

- Note: If the front deflector is being installed, these fasteners will have already been removed.
- Keep these fasteners and spacer as they will be used later.




Remove Fastener and Spacer Between Walls 215101

2. Place the deflector panel into the wall tubes.


- Ensure the bent portion of the panel is toward the inside of the tub.

3. Fasten the rear of the deflector (1) with the supplied $\frac{1}{2}$ " x $2\frac{1}{2}$ " bolt (2) and locknut (3).

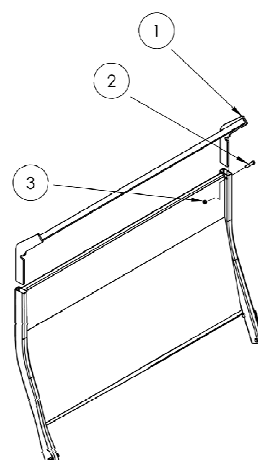

4. Place the spacer (1) that was removed in Step 1 between the front and rear wall tubes.

- Place the bolt through the tubes and spacer and fasten with the locknut (2).

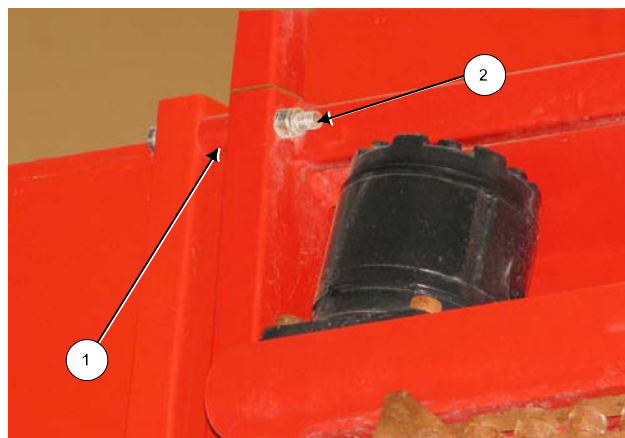

Tighten Deflector with Spacer and Fastener 215103C

Installing On The Front Left Tub Wall

1. Remove the fasteners (1) that connect the top of the front screen to the left tub wall.
 - Keep these fasteners as they will be used later.




Remove Fasteners From Screen to Tub Wall 215090C

2. Remove the fasteners and spacer tube between the front and rear wall.
 - Keep these fasteners and spacer as they will be used later.



Remove Fastener and Spacer Between Walls 215104

3. Place the deflector panel into the wall tubes.
 - Ensure the bent portion of the panel is toward the inside of the tub.

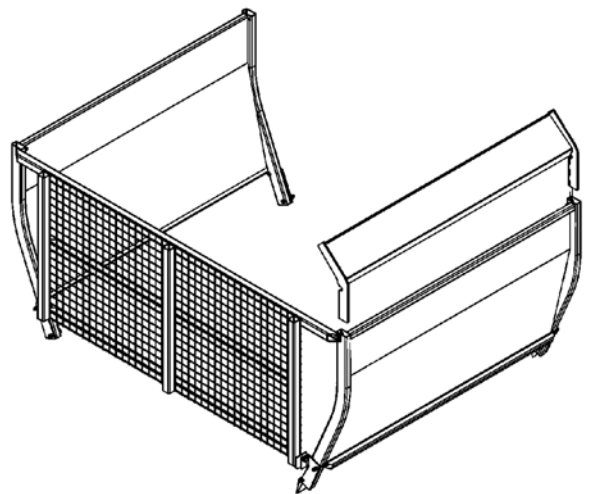


Top Deflector on Left Tub Wall

215105

4. Fasten the front of the deflector.
 - Use the fasteners that were removed in Step 1.
 - Place the fastener through the screen and wall tube.
5. Fasten the rear of the front deflector with the spacer (1), bolt and locknut (2) that was removed in Step 3.

Note: If a top deflector is being installed on the rear tub wall, leave the spacer and fasteners until the rear deflector is installed.

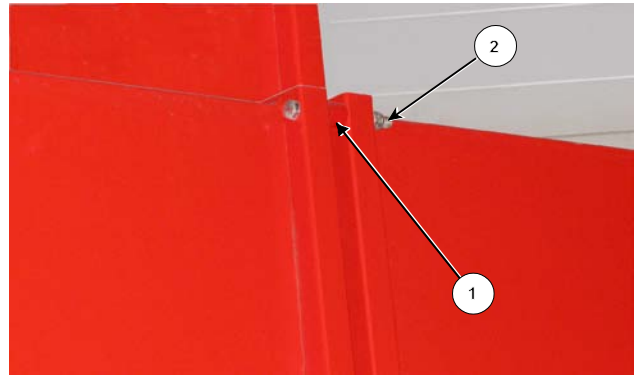

Fasten Rear of the Deflector

215106C

Installing On The Rear Left Tub Wall


6. Remove the fasteners and spacer tube between the front and rear wall.
 - Note: If the front deflector is being installed, these fasteners will have already been removed.
 - Keep these fasteners and spacer as they will be used later.



Remove Fastener and Spacer Between Walls

215104

7. Place the deflector panel into the wall tubes.
 - Ensure the bent portion of the panel is toward the inside of the tub.
8. Fasten the rear of the deflector (1) with the supplied $\frac{1}{2}$ " x $2\frac{1}{2}$ " bolt (2) and locknut (3).

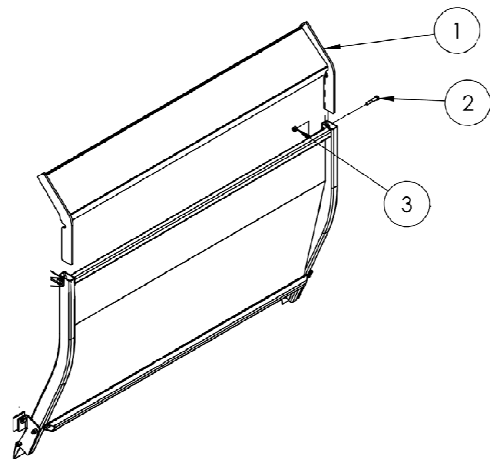


Fasten Rear of the Deflector

215108

Installation of the Bale Top Deflectors

9. Place the spacer (1) that was removed in Step 6 between the front and rear wall tubes.
 - Place the bolt through the tubes and spacer and fasten with the locknut (2).

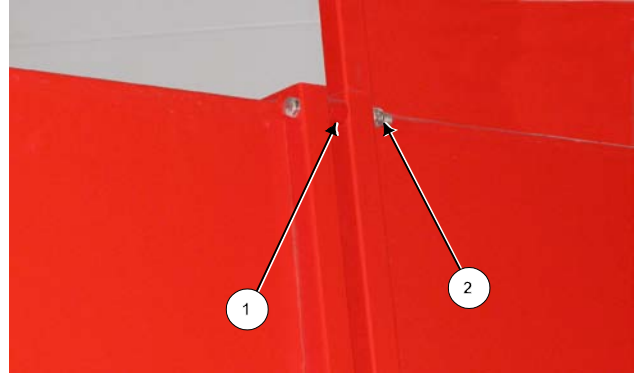

Fasten the Rear Deflector

215109C