


ROCK-MASTER

XL-W5

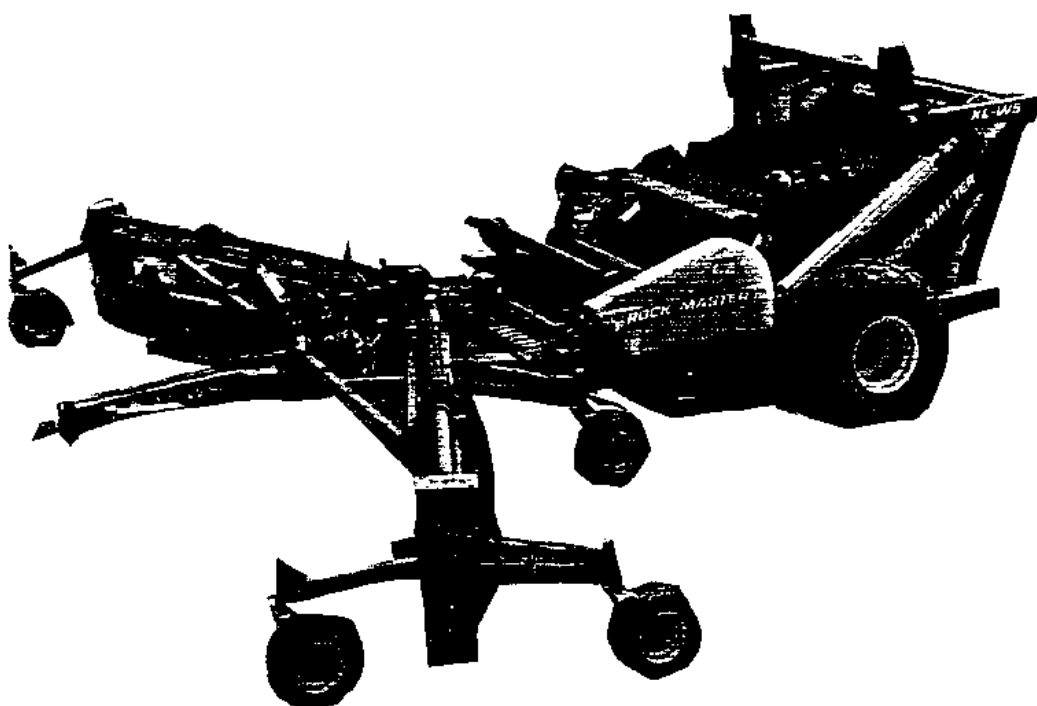

OPERATORS MANUAL

HIGH-LINE MFG. INC.
ROCKMASTER LAURIER



ROCK-MASTER A NEW NAME IN THE ROCK PICKING FIELD, IS MANUFACTURED BY HIGH-LINE MFG. INC. A COMPANY MANNED WITH A CREW WHICH HAS OVER 25 YEARS EXPERIENCE IN THE INDUSTRY.

THIS OPERATOR MANUAL HAS BEEN PREPARED TO PROVIDE INFORMATION NECESSARY FOR THE SAFE AND EFFICIENT OPERATION OF YOUR ROCK-MASTER PICKER. IN IT YOU WILL FIND SAFTY PROCEDURES, MAINTENANCE ROUTINES AND DETAILED PARTS DIAGRAMS.

IF YOU SHOULD FIND THAT YOU REQUIRE INFORMATION NOT COVERED IN THIS MANUAL, FEEL FREE TO CONSULT US OR YOUR LOCAL DEALER.

SHOULD THE NEED ARISE, THIS MANUAL WILL ASSIST YOU IN ACQUIRING REPLACEMENT PARTS. SHOULD YOUR DEALER NOT HAVE THE PARTS YOU REQUIRE IN STOCK, HE WILL BE HAPPY TO ORDER THEM FOR YOU.

THE ROCK-MASTER ROCK PICKER WAS DESIGNED TO WORK IN THE MOST DIFFICULT OF ROCK PICKING SITUATIONS. A LITTLE TIME AND EFFORT SPENT IN PROPER MAINTENANCE WILL INCREASE THE PERFORMANCE AND DURABILITY OF YOUR PICKER.

IN ORDER TO MAINTAIN HIGH EFFICIENCY STANDARDS, CHANGES OR IMPROVEMENTS ARE MADE FROM TIME TO TIME. HIGH-LINE MFG. INC. RESERVES THE RIGHT TO MAKE THOSE CHANGES AND ADD IMPROVMENTS WHEN PRACTICAL TO DO SO WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES AND IMPROVEMENTS ON MACHINES SOLD PREVIOUSLY.

HIGH-LINE MFG. INC. THANKS AND CONGRATULATES YOU FOR SELECTING A ROCK-MASTER ROCK PICKER AS THE MACHINE OF YOUR CHOICE.

RAYMOND BUSSIERE
PRESIDENT

P.O BOX 307 VONDA, SASKATCHEWAN S0K 4N0
PHONE 1-800-665-2010 FAX (306) 258-2010

YOUR MODEL XL-W5 ROCK-MASTER STONE PICKER WAS DESIGNED FOR EASE OF HANDLING IN THE TOUGHEST OF CONDITIONS.

THE XL-W5 WILL CLEAN YOUR FIELDS OF SMALL AND LARGE STONES FAST AND WITH THE GREATEST OF EASE.

THE ROCK-MASTER STONE PICKER IS NOT A LUXURY, IT IS A SOUND ADDITION TO YOUR FARMING OPERATION.

MANY ACRES OF TROUBLE FREE SERVICE CAN BE EXPECTED WITH A LITTLE INSIGHT AND PROPER MAINTENANCE DESCRIBED IN THIS MANUAL.

DIAGRAMS AND PARTS LISTS HAVE INCLUDED FOR YOUR CONVENIENCE TO ASSIST IN THE ADJUSTMENTS AND UPKEEP THAT MAY BE REQUIRED.

CAUTION!

- ALWAYS DISENGAGE PTO BEFORE DISMOUNTING TRACTOR
- DO NOT OPERATE UNLESS PTO GUARDS ARE IN PLACE
- PTO GUARDS MUST TURN FREELY AND BE PROPERLY ATTACHED AND MAINTAINED
- PTO SHAFTS MUST BE SECURELY LOCKED ONTO TRACTOR AND IMPLEMENT SHAFTS
- KEEP YOURSELF AND OTHERS CLEAR OF ROTATING PARTS TO PREVENT INJURY
- READ ALL SAFETY "NOTES"
- PAY ATTENTION TO ALL "WARNING & SAFETY" DECALS
- ABOVE ALL "BE CAREFUL"

CONTENTS

1.....	PRESIDENT'S MESSAGE
2.....	SCOPE
3.....	CONTENTS
4.....	WARRANTY
5.....	REEL ASSY.
6.....	DRIVE
7.....	REEL
8.....	SPRING IDENTIFICATION
9.....	WING DRIVE
10.....	APRON
11.....	DUMP ASSY.
13.....	WHEEL & RIM
14.....	H817 HUB
15.....	HD211 HUB
16.....	DUAL CASTOR ASSY.
17.....	SINGLE CASTOR ASSY.
18.....	WING A-FRAME
19.....	DRUM TIGHTENER
20.....	DRUM ASSY.
21.....	9000 CLUTCH
22.....	6000 CLUTCH
23.....	M4559 PTO SHAFT
25.....	M4558 PTO SHAFT
29.....	3½" x 42" HYD. CYLINDER
30.....	3" x 10" HYD. CYLINDER
31.....	HYD. LAYOUT
33.....	DOUBLE DRIVE GEARBOX
35.....	MAINTENANCE

WARRANTY

HIGH-LINE MFG. INC. WARRANTS ITS PRODUCTS TO THE ORIGINAL OWNER FOR A PERIOD OF TWO YEARS FROM DATE OF PURCHASE. SUBJECT TO THE FOLLOWING PROVISIONS.

*1ST YEAR - PARTS & LABOUR

*2ND YEAR - PARTS ONLY

*ALL MATTERS RELATED WITH THE WARRANTY OF PRODUCTS MUST BE HANDLED THROUGH AN AUTHORIZED ROCK-MASTER DEALER.

*ANY LABOUR SUBJECT TO WARRANTY MUST BE AUTHORIZED BY A HIGH- LINE MFG. INC. REPRESENTATIVE, BEFORE WORK IS STARTED.

*MACHINES USED FOR RENTAL, CUSTOM WORK OR INDUSTRIAL, CONSTRUCTION USE, WILL BE WARRANTED FOR A PERIOD OF 60 DAYS FROM DATE OF PURCHASE. (PARTS AND LABOUR)

*WARRANTY WILL BE VOID IF ANY COMPONENT OF THE ROCK-PICKER IS ALTERED OR MODIFIED IN ANY WAY, UNLESS WRITTEN PERMISSION IS GIVEN BY HIGH-LINE MFG. INC. .

*HIGH-LINE MFG. INC. WILL NOT ASSUME ANY RESPONSIBILITY FOR WHATEVER DAMAGE MAY OCCUR TO EQUIPMENT TO WHICH THE ROCK-PICKER MAY BE ATTACHED.

*WARRANTY TERMS AND CONDITIONS ARE SUBJECT TO PROVINCIAL AND STATE LEGISLATION.


ROCK-MASTER

XL-56

XL-58

XL-78


XL-W5

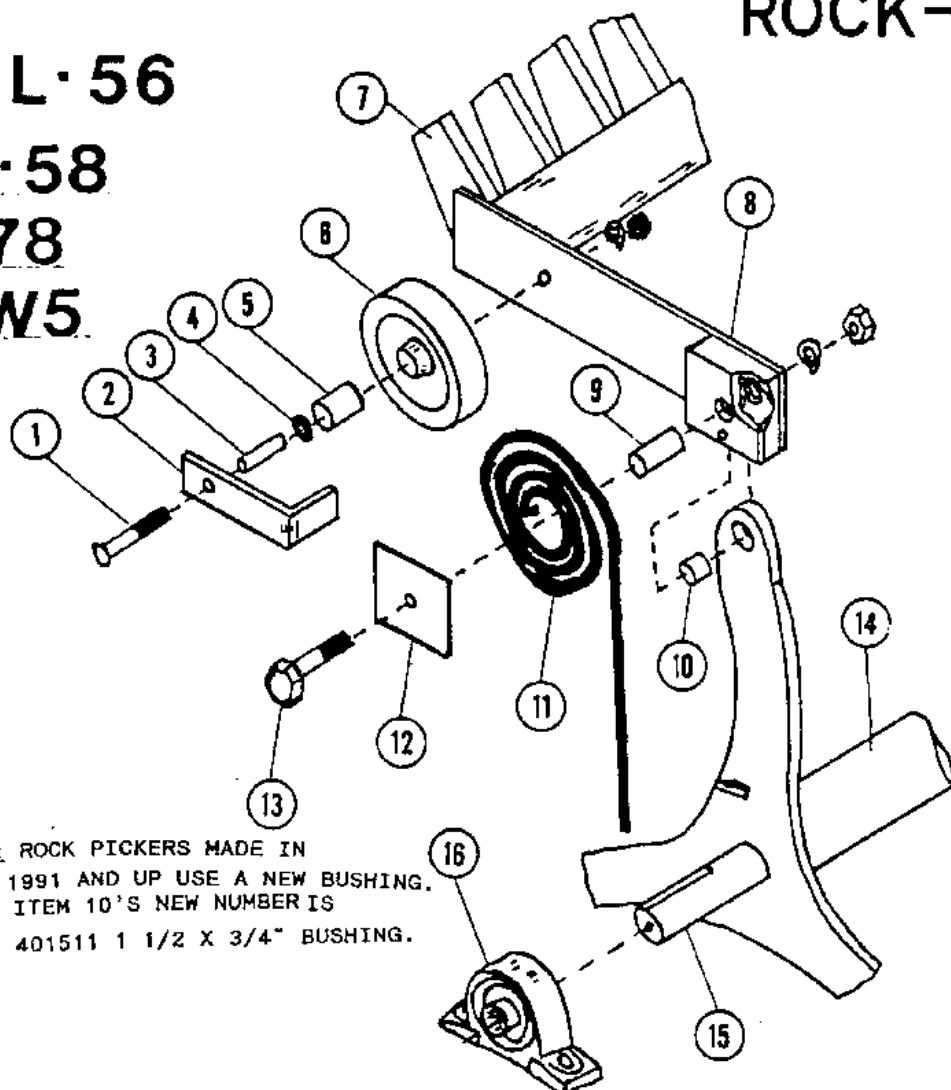

NOTE: ROCK PICKERS MADE IN 1991 AND UP USE A NEW BUSHING. ITEM 10'S NEW NUMBER IS 401511 1 1/2 X 3/4" BUSHING.

NO.	PART NO.		DESCRIPTION
	XL-56/58/W5	XL-78/W7	
1	C5C1072	SAME	5/8 X 4 1/2 UNC GR5 CARR.
	LW10	SAME	5/8" LOCK WASHER
	NC10P	SAME	5/8" UNC NUT PLTD
2	401103	SAME	BOGEY WHEEL BRACKET
3	400007	SAME	SPANNER SLEEVE
4	400008	SAME	BOGEY WHEEL SEAL
5	400009	SAME	BOGEY WHEEL BEARING
6	400010	SAME	8" BOGEY WHEEL
7	400011	SAME	REEL BAT TOOTH
8	401114	-	5' REEL BAT
	-	401203	7' REEL BAT
9	400012	SAME	1 1/16" X 2 3/8" BUSHING
	400013	SAME	1 1/16" X 3 1/8" BUSHING
10	400014	SAME	1 5/16" X 3/4" BUSHING
11	400015	SAME	LEFT REEL SPRING
	400016	SAME	RIGHT REEL SPRING
12	400017	SAME	SPRING HOLDING PLATE
13	B5F1056P	SAME	5/8 X 3 1/2 UNF GR5
	B5F1080P	SAME	5/8 X 5 UNF GR5
	LW10	SAME	5/8" LOCK WASHER
	NF10	SAME	5/8" UNF NUT
14	401112	-	5' REEL ARM LESS BATS
	-	401204	7' REEL ARM LESS BATS
	401115	-	5' REEL ARM COMPLETE W/BATS
	-	401205	7' REEL ARM COMPLETE W/BATS
15	400025	SAME	2 7/16" REEL SHAFT
16	400026	SAME	2 7/16" PILLOW BLOCK BEARING

ROCK-MASTER

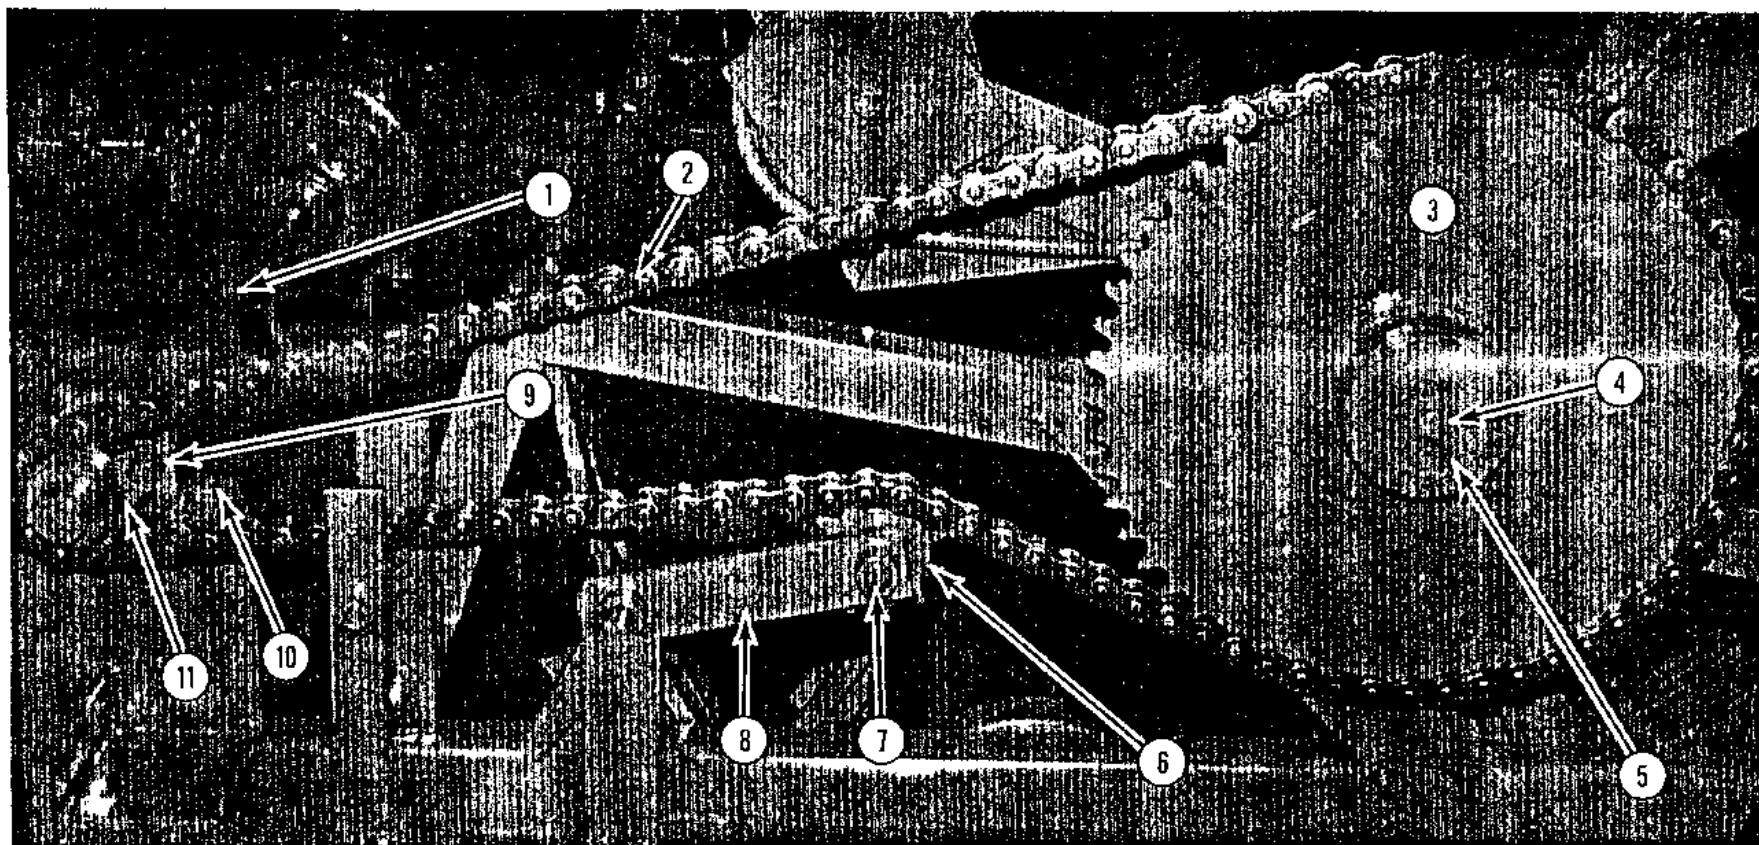


NO.	PART NO.	DESCRIPTION			
1	401111	1 3/8" X 34 1/2" SHAFT	6	701003	80A12 IDLER SPROCKET
2	702010	#80 CHAIN X 107 PINS	7	B5C1240	3/4 X 2 1/2 UNC GR5
	702002	#80 CONNECTOR LINK		LNC12	3/4" UNC LOCK NUT
	702003	#80 HALF LINK	8	400004	TIGHTENER ARM
3	701002	80C50 SPROCKET	9	400001	1 3/8" PILLOW BLOCK BEARING
4	B5C0816	1/2 X 1 UNC GR5	10	B5C0832	1/2 X 2 UNC GR5
	LW08P	1/2" LOCK WASHER PLTD		LW08P	1/2" LOCK WASHER PLTD
5	801302	1/2" X 3 1/8" WASHER		NC08P	1/2" UNC NUT PLTD
			11	701001	80C11 SPROCKET

ROCK-MASTER


XL-56

XL-58

XL-78

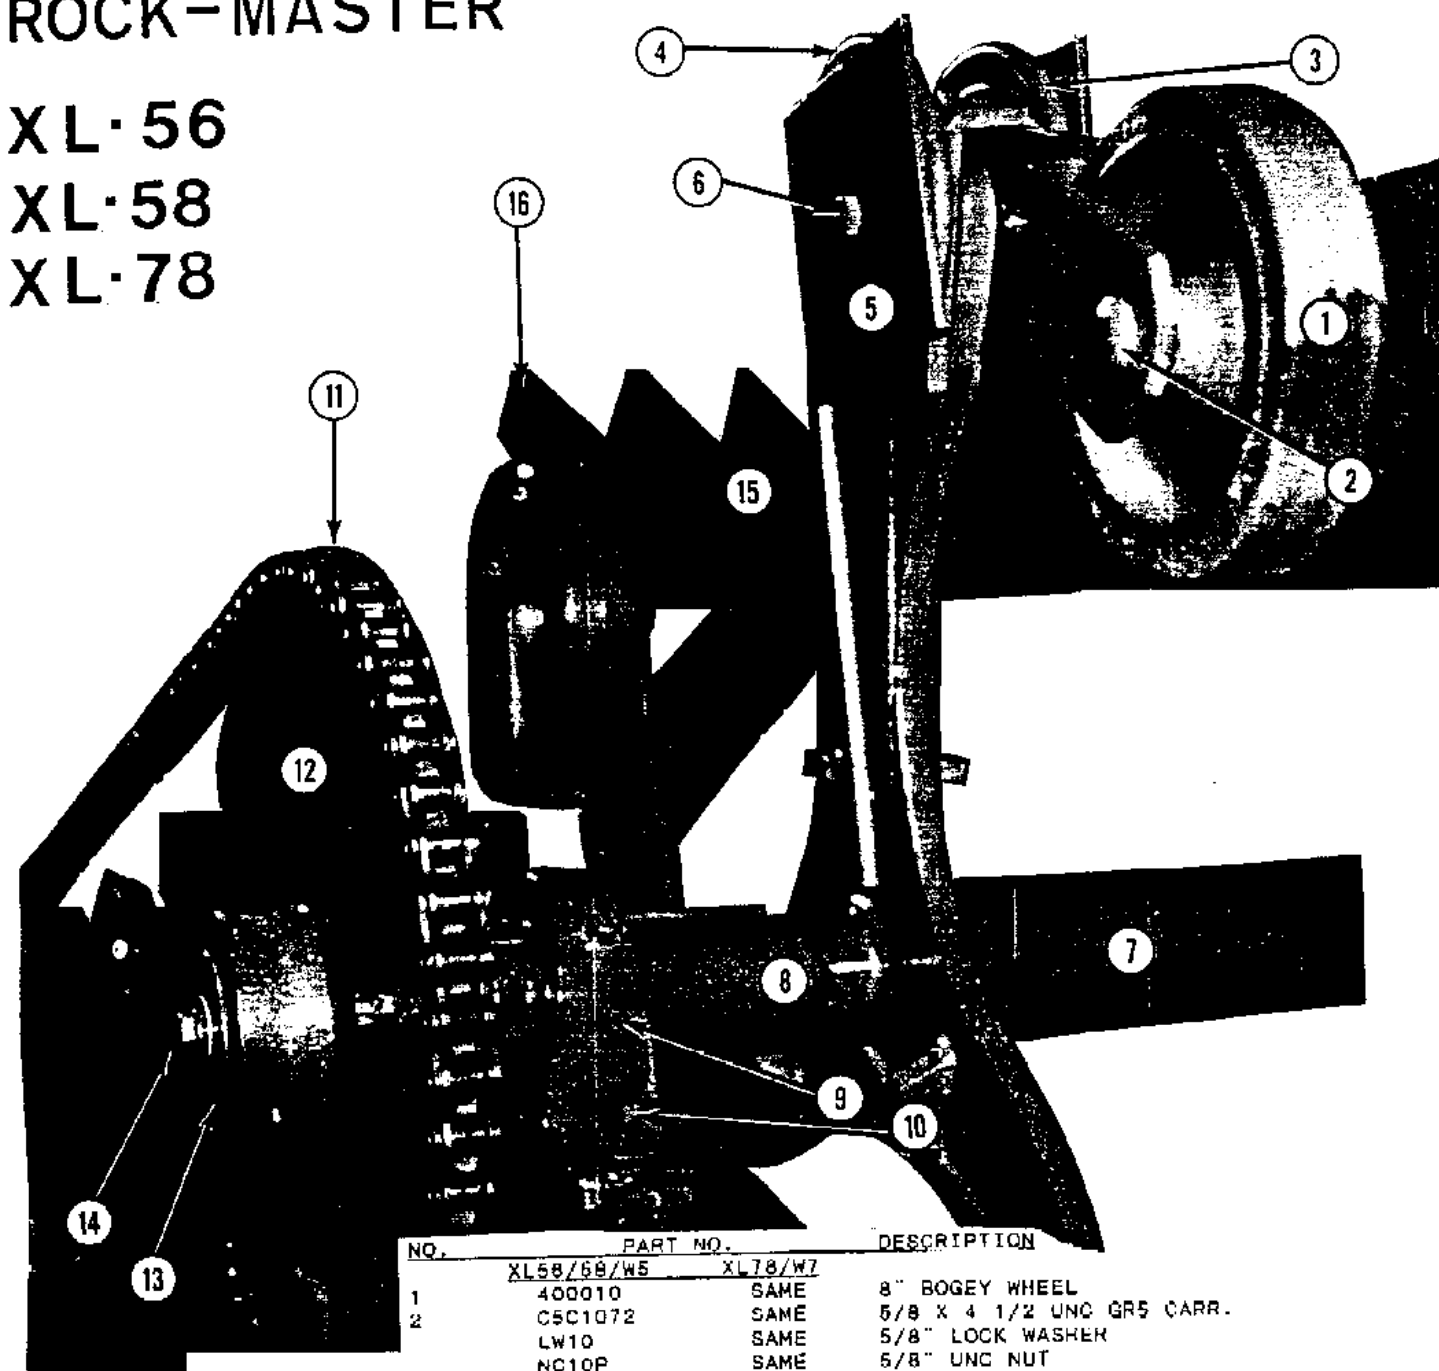

NO.	PART NO.		DESCRIPTION
	XL58/68/W5	XL78/W7	
1	400010	SAME	8" BOGEY WHEEL
2	C5C1072	SAME	5/8 X 4 1/2 UNC GR5 CARR.
	LW10	SAME	5/8" LOCK WASHER
	NC10P	SAME	5/8" UNC NUT
3	400016	SAME	RIGHT REEL SPRING
4	400015	SAME	LEFT REEL SPRING
5	400017	SAME	SPRING HOLDING PLATE
6	B5F1080P	SAME	5/8 X 5 UNF GR5
	LW10	SAME	5/8" LOCK WASHER
	NF10	SAME	5/8" UNF NUT
7	401112	-	5' REEL ARM LESS BATS
	-	401204	7' REEL ARM LESS BATS
	401115	-	5' REEL ARM W/BATS
	-	401205	7' REEL ARM W/BATS
8	400025	SAME	2 7/16" REEL SHAFT
9	400026	SAME	2 7/16" PILLOW BLOCK BEARING
10	B5F1036P	SAME	5/8 X 2 1/2 UNF GR5
	LW10	SAME	5/8" LOCK WASHER
	FW10P	SAME	5/8" FLAT WASHER PLTD
	NF10	SAME	5/8" UNF NUT
11	702001	SAME	#80 CHAIN X 102 PINS
	702002	SAME	#80 CONNECTOR LINK
	702003	SAME	#80 HALF LINK
12	701015	SAME	80C54 SPROCKET
13	801302	SAME	1/2 X 3 1/8 WASHER
14	B5C0816	SAME	1/2 X 1 UNC GR5
	LW08P	SAME	1/2" LOCK WASHER PLTD
15	401114	-	5' REEL BAT
	-	401203	7' REEL BAT
16	400011	SAME	REEL BAT TOOTH

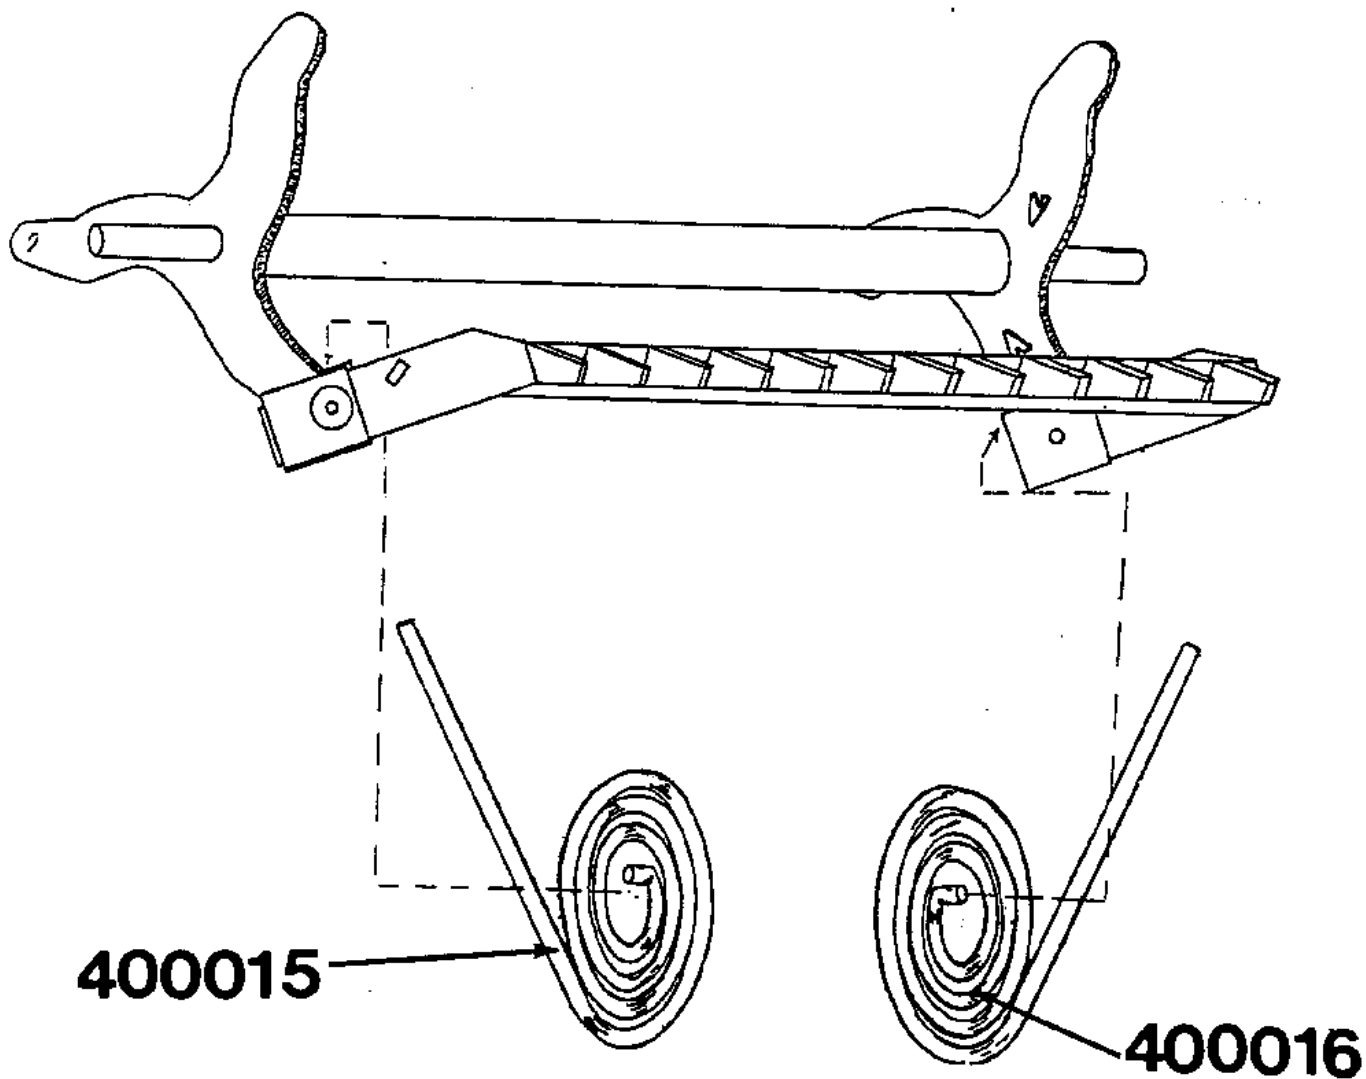


SPRING IDENTIFICATION

CAUTION!!

BEFORE REMOVING REEL SPRINGS RELEASE TENSION BY UNHOOKING BOTTOM OF SPRING FROM HOLDER, THEN REMOVE BOLTS.

ROCK-MASTER XL

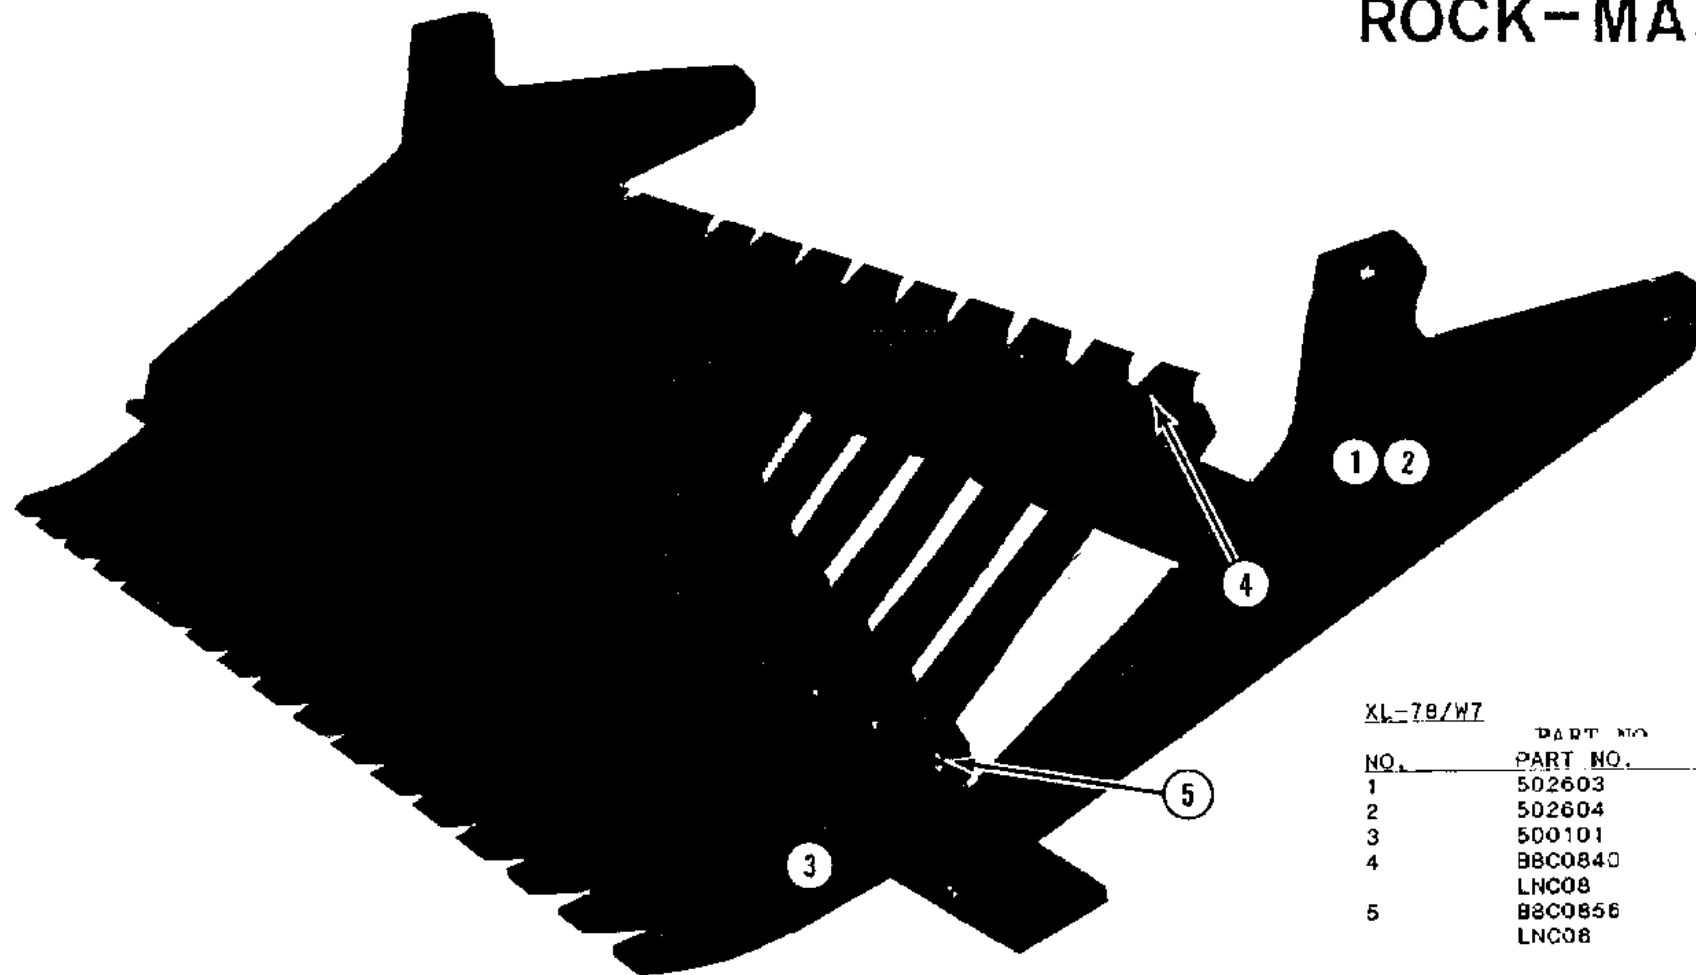


XL-78/W7

NO.	PART NO.	DESCRIPTION
1	502603	APRON LESS TINES
2	502604	APRON WITH TINES
3	500101	APRON TINE
4	B8C0840 LNC08	1/2 X 2 1/2 UNC GR8 1/2" UNC LOCK NUT
5	B8C0856 LNC08	1/2 X 3 1/2 UNC GR8 1/2" UNC LOCK NUT

XL56/58/W5


NO.	PART NO.	DESCRIPTION
1	502403	APRON LESS TINES
2	502404	APRON WITH TINES
3	500101	APRON TINE
4	B8C0840 LNC08	1/2 X 2 1/2 UNC GR8 1/2" UNC LOCK NUT
5	B8C0856 LNC08	1/2 X 3 1/2 UNC GR8 1/2" UNC LOCK NUT

ROCK-MASTER

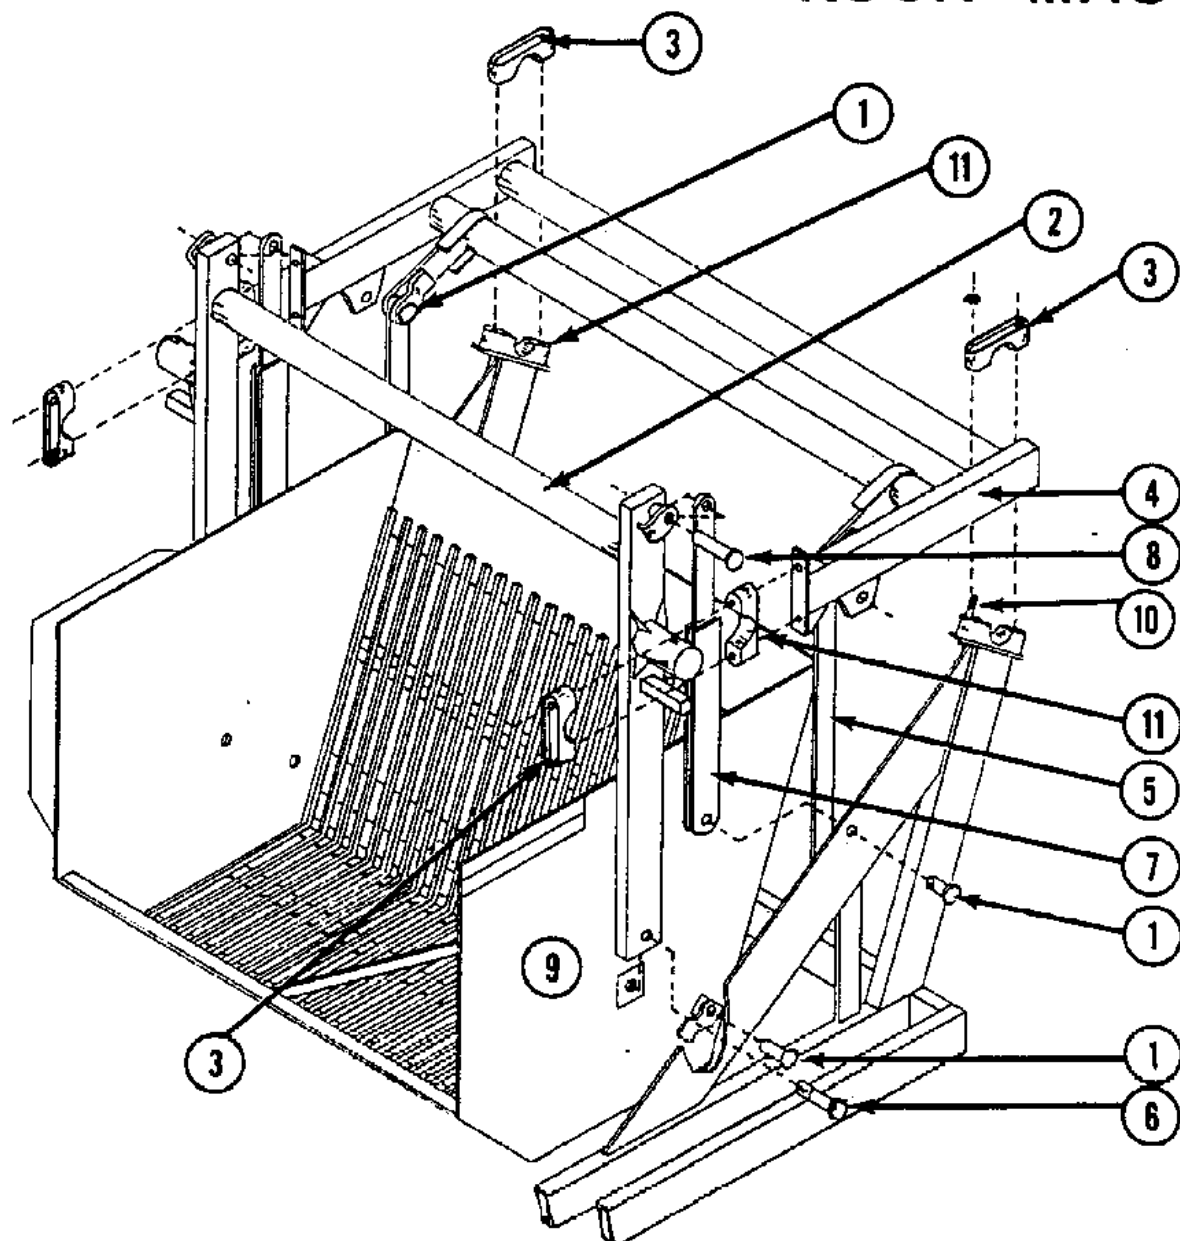

NO.	PART NO.	DESCRIPTION
1	801204	1" X 2 1/2" PIN
2	503202	LONG DUMP ASSY.
3	500202	TOP PIPE CLAMP
4	503203	SHORT DUMP ASSY.
5	503204	DUMP BRACE
6	B5C1664	1 X 4 UNC GR5
	NC16	1" UNC NUT
	LW16	1" LOCK WASHER
7	503205	TELESCOPIC BRACE
8	801205	1" X 6" PIN
9	503201	BUCKET
10	B5F0972P	9/16 X 4 1/2 UNF GR5 PLTD
	NF09	9/16" UNF NUT
	LW09	9/16" LOCK WASHER
11	500201	BOTTOM PIPE CLAMP
	204201	3 1/2" X 42" HYD. CYL.


ROCK-MASTER

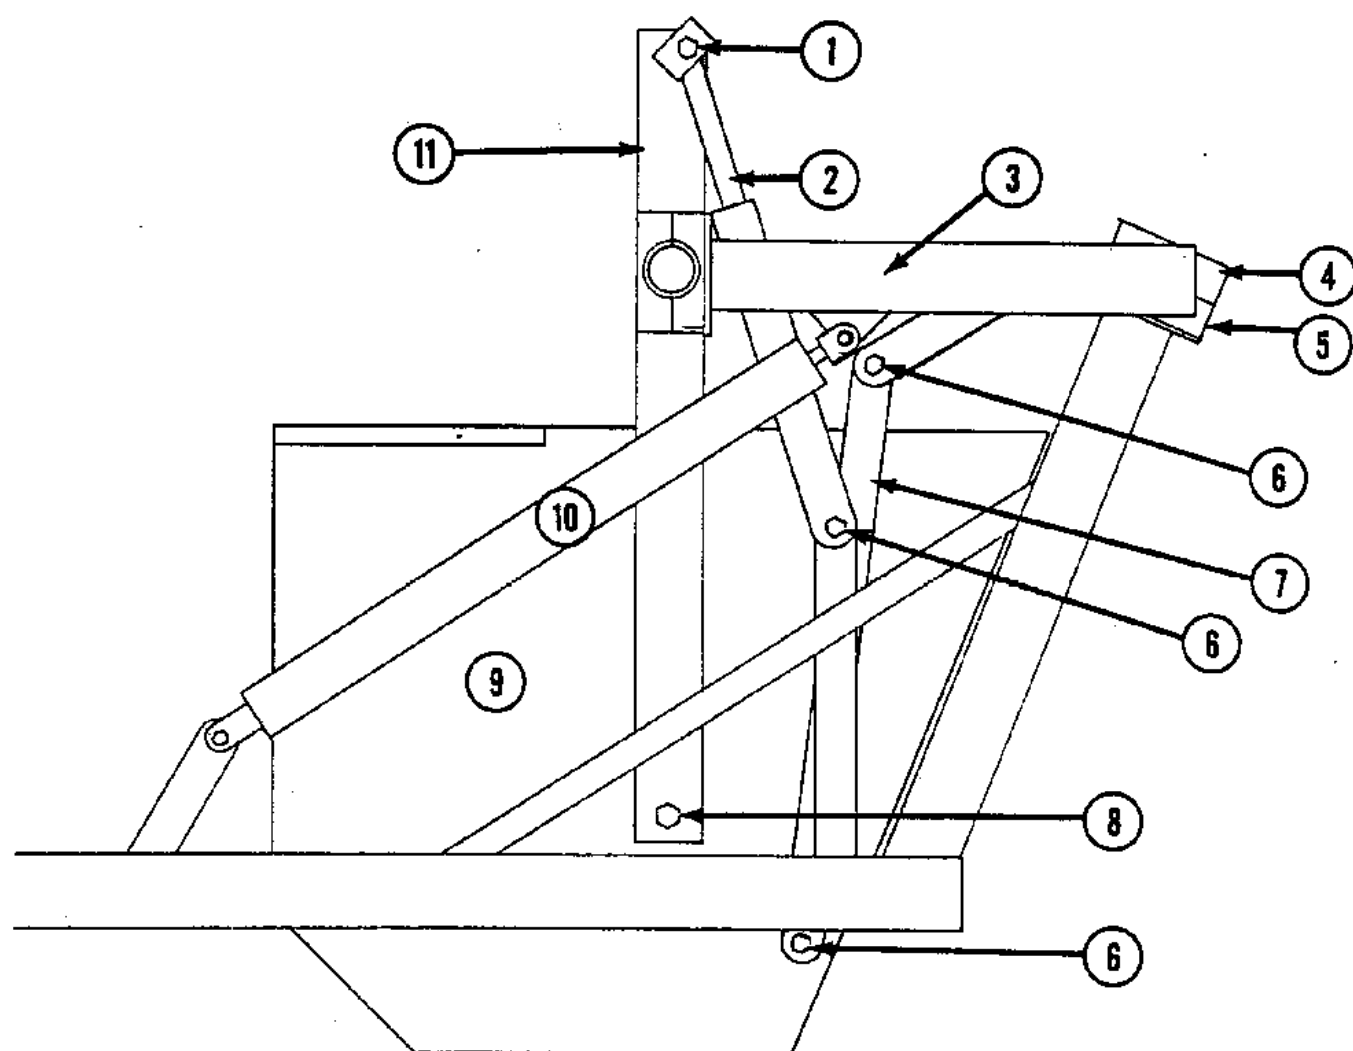

NO.	PART NO.	DESCRIPTION
1	801205	1" X 6" PIN
2	503205	TELESCOPIC BRACE
3	503203	SHORT DUMP ASSY.
4	500202	TOP PIPE CLAMP
5	500201	BOTTOM PIPE CLAMP
6	801204	1" X 2 1/2" PIN
7	503204	DUMP BRACE
8	B5C1864	1 X 4 UNC GR5
	NC16	1" UNC NUT
	LW16	1" LOCK WASHER
9	503201	BUCKET
10	204201	3 1/2" X 42" HYD. CYL.
11	503202	LONG DUMP ASSY.

ROCK-MASTER


XL-58
XL-78
XL-W5

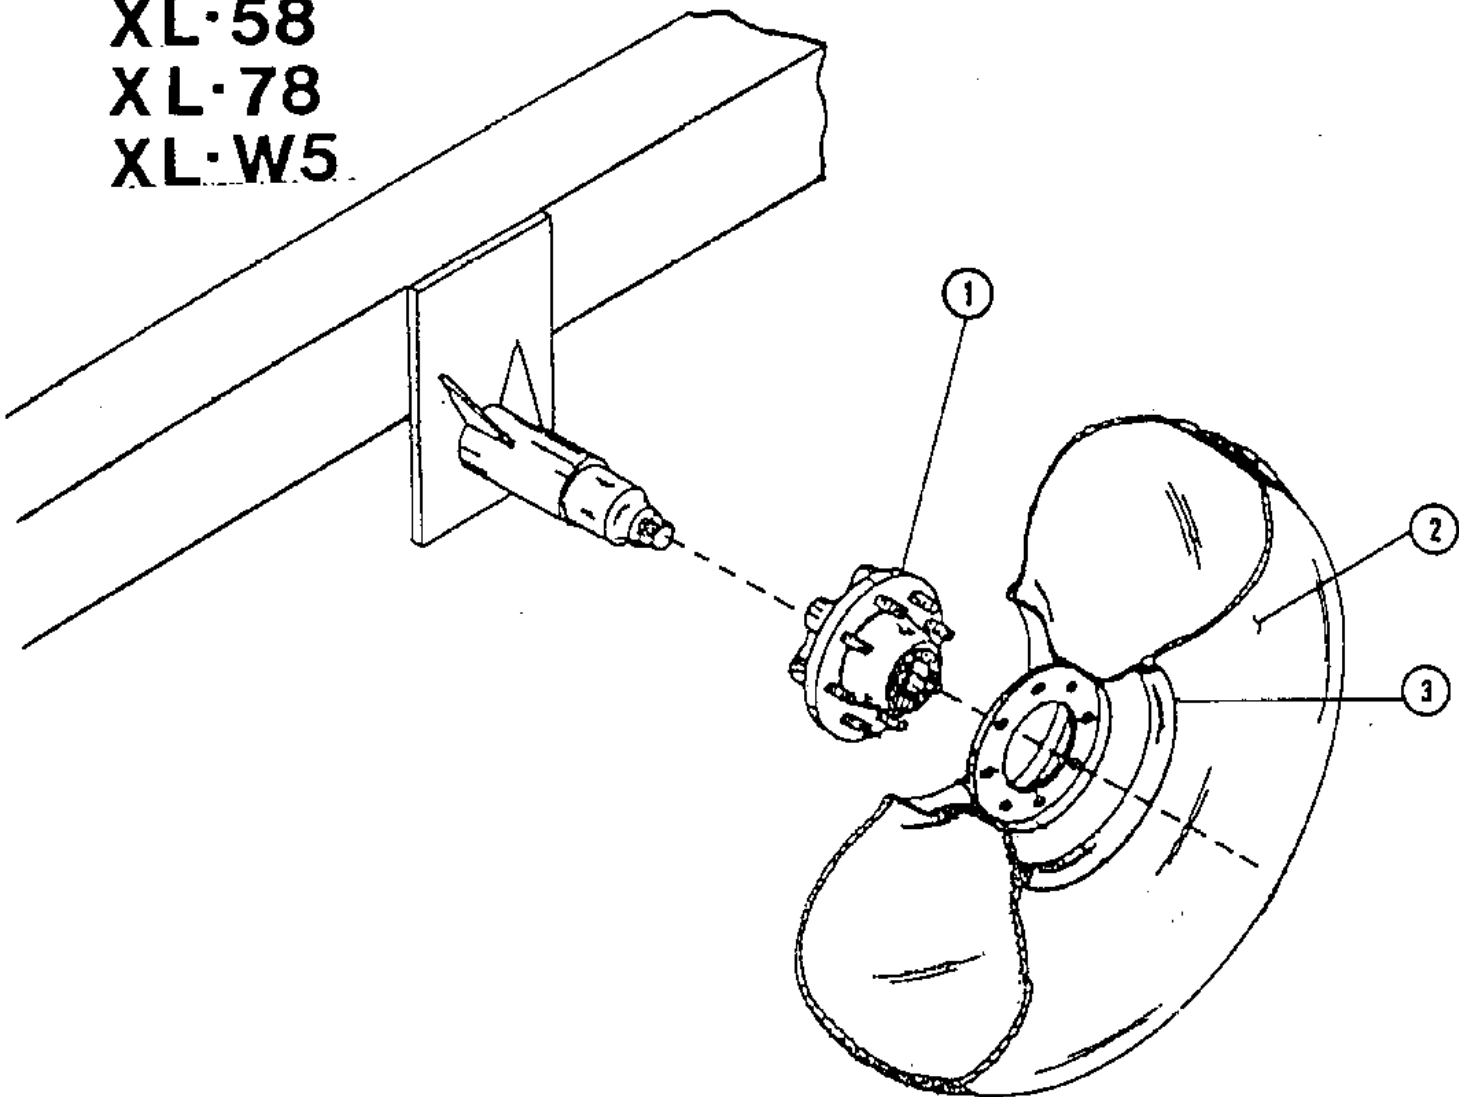

NO.	PART NO.	DESCRIPTION
1	301106	H817 HUB
2	301112	16.5 x 16.1 FLOTATION TIRE
3	301113	16 x 14 - 8 HOLE RIM

ROCK-MASTER


XL-58
XL-78
XL-W5

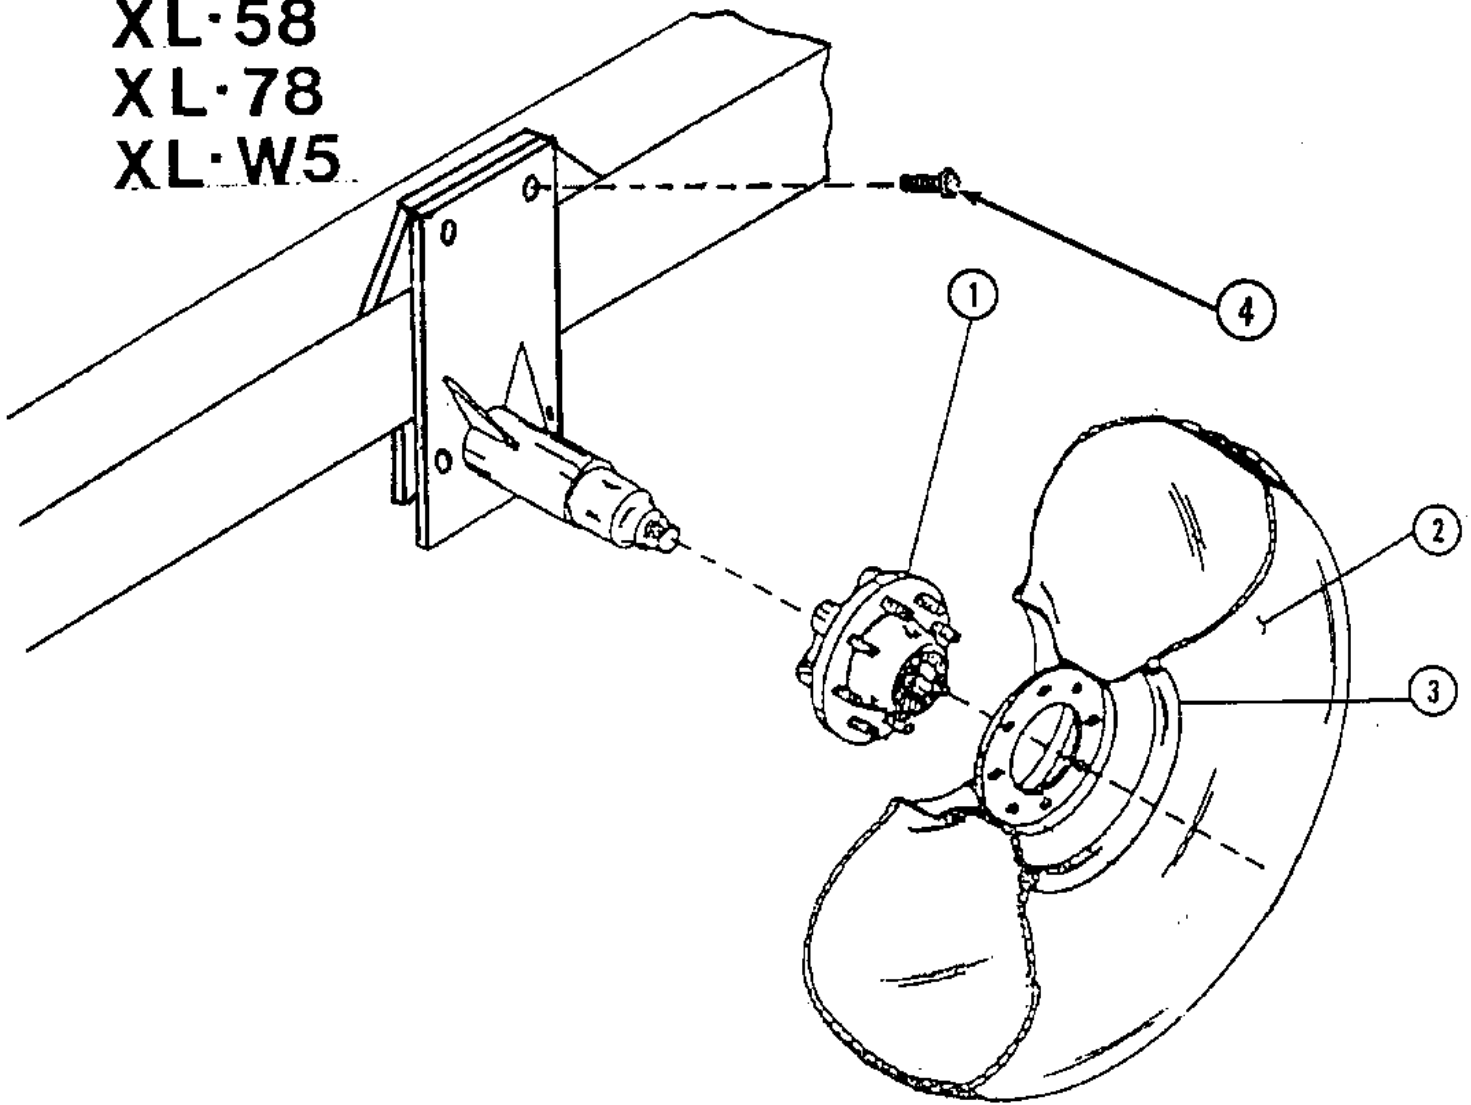

NO.	PART NO.	DESCRIPTION
1	301106	H817 HUB
2	301112	16.5 X 16.1 FLOTATION TIRE
3	301113	16 X 14 -8 HOLE RIM
4	B5C1240P	3/4 X 2 1/2" UNC GR 5 BOLT
	LW12P	3/4" LOCKWASHER
	NC12P	3/4" UNC NUT

8-BOLT


ROCK-MASTER

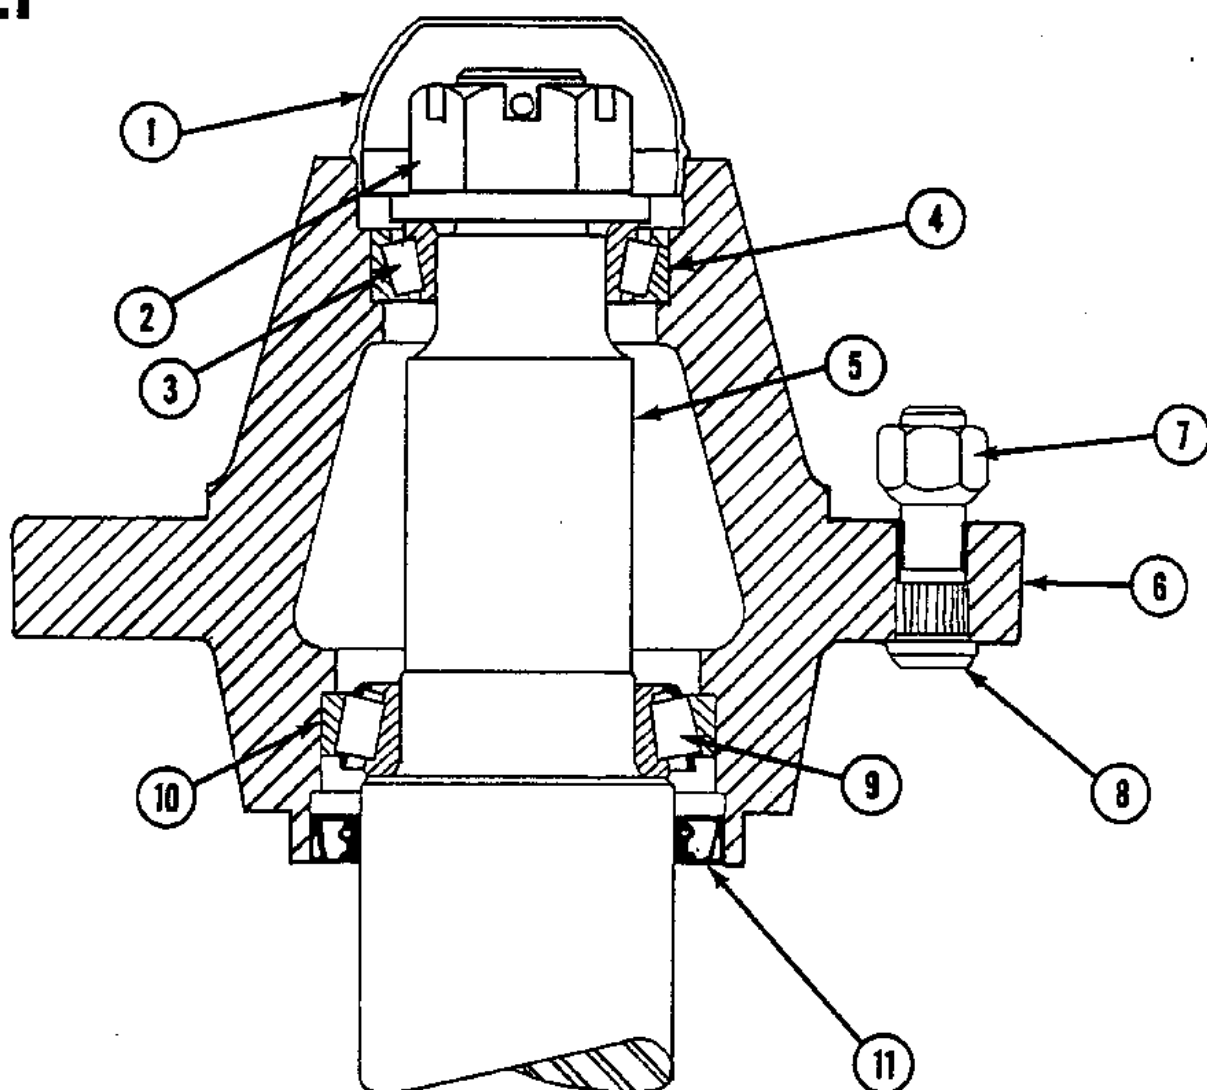

NO.	PART NO.	DESCRIPTION
1	301101	DC26 DUST CAP
2	301102	CASTELLATED NUT 1½ - 12 UNF
3	301103	LM501349 OUTER CONE
4	301104	LM501310 OUTER CUP
5	301105	S817 SPINDLE ONLY
6	301106	H817 HUB ONLY
7	301107	WB18 NUT 5/8 - 18 UNF
8	301108	WB46 STUD 5/8 - 18 UNF x 2½
9	301109	387AS INNER CONE
10	301110	382A INNER CUP
11	301111	SE42 GREASE SEAL

ROCK-MASTER


4-BOLT HD211

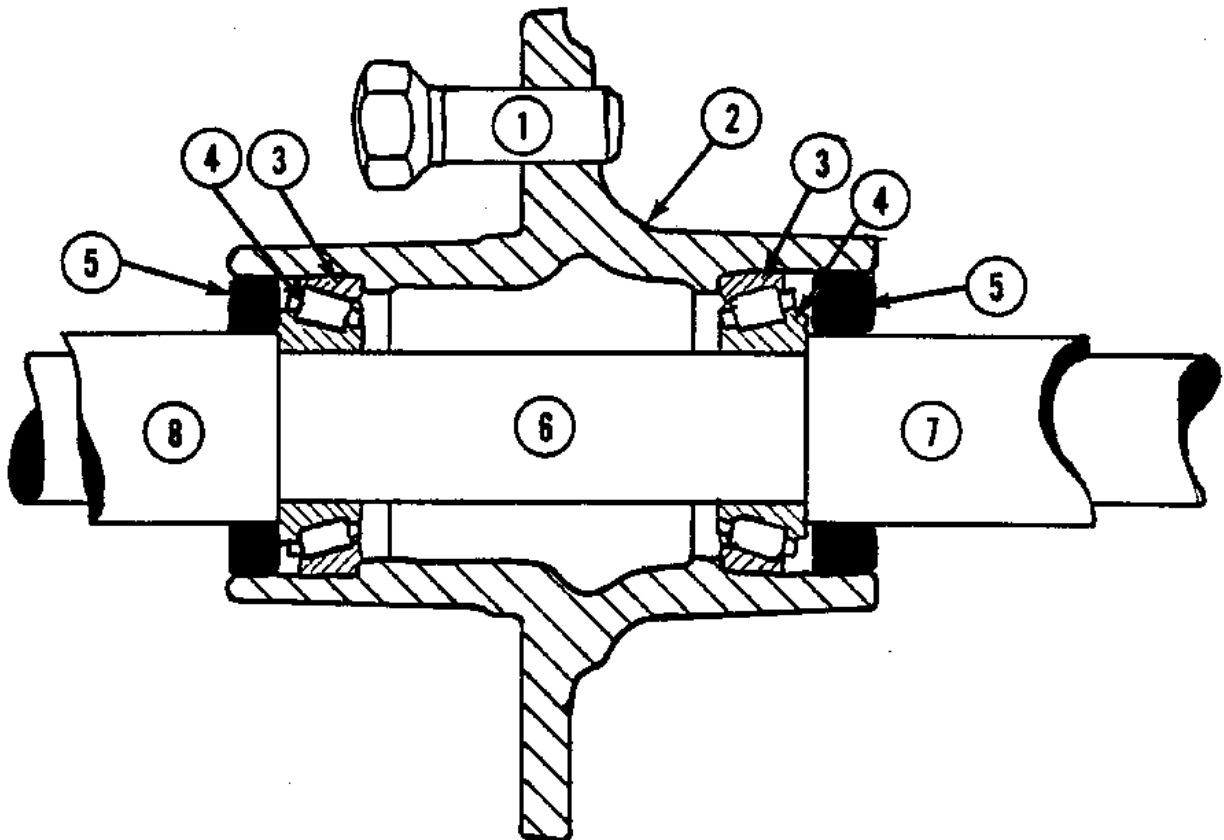

NO.	PART NO.	DESCRIPTION	R56-P15
1	301204	1/2" WHEEL BOLT	
2	301203	HD211 WHEEL HUB	
3	301205	L44610 RACE	
4	301206	L44643 BEARING	
5	301207	SE10 SEAL	
6	B5C16144P	1 X 9 UNC GR5 PLTD	
	LNC16	1" UNC LOCK NUT	
7	301208	1" I.D. X 2" L SPACER	
8	301209	1" I.D. X 1 1/2" SPACER	

ROCK-MASTER


OSCILLATING DUAL CASTOR ASSY.

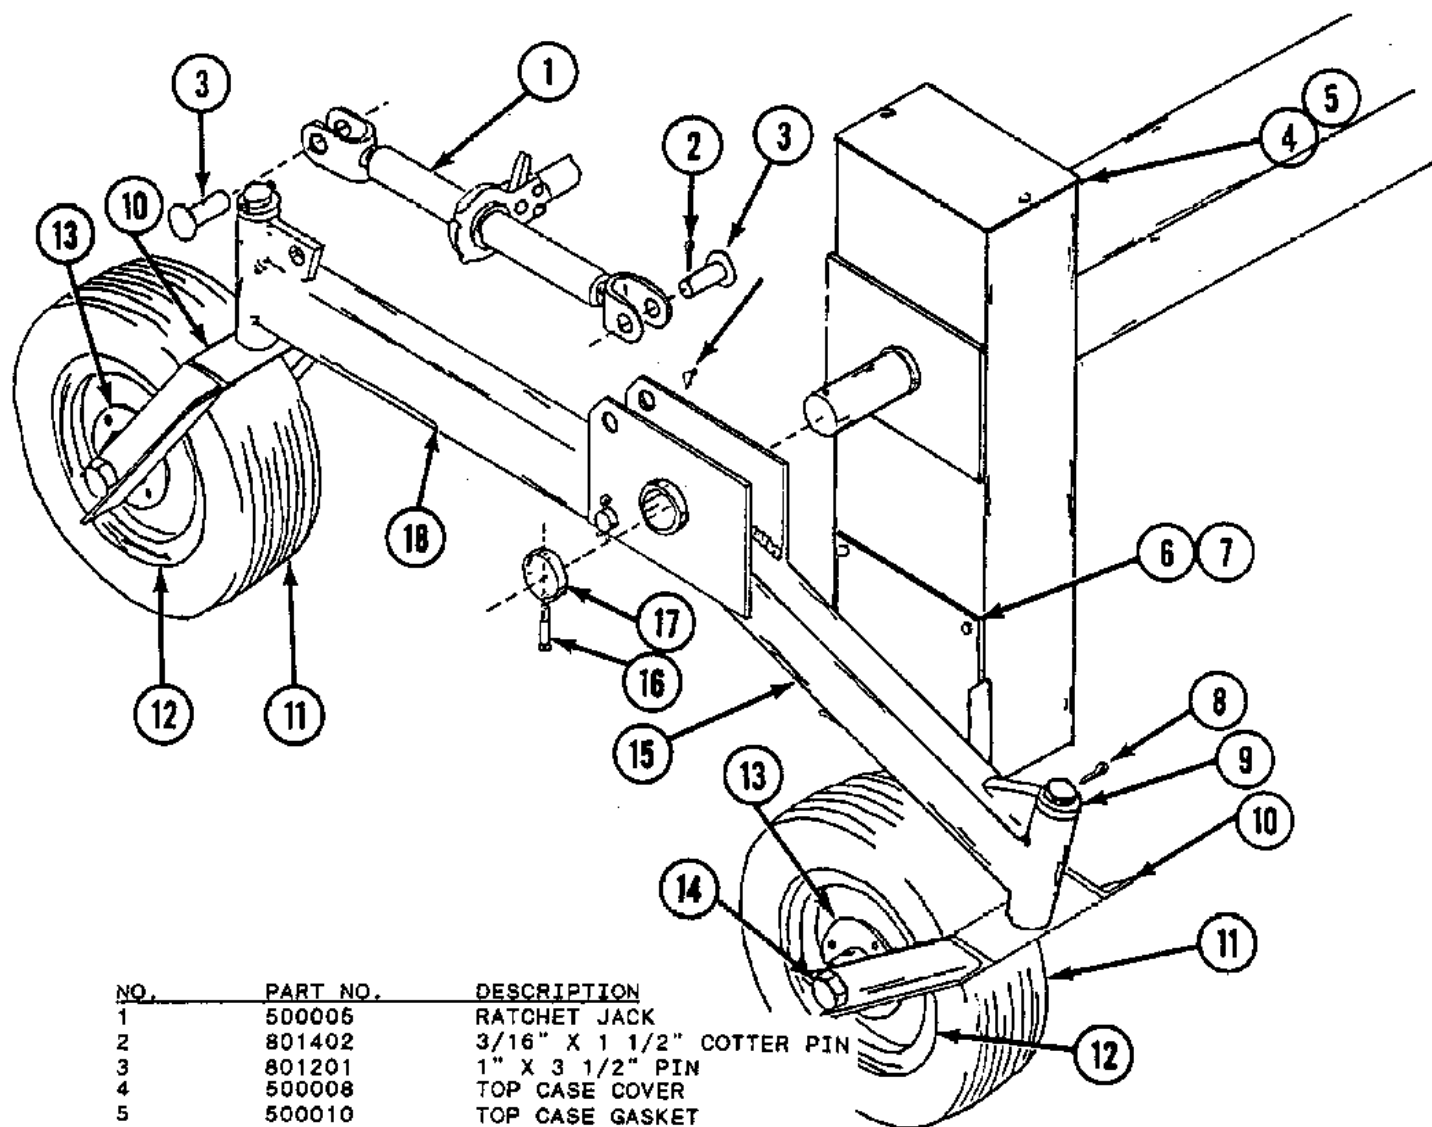

NO.	PART NO.	DESCRIPTION
1	500006	RATCHET JACK
2	801402	3/16" X 1 1/2" COTTER PIN
3	801201	1" X 3 1/2" PIN
4	500008	TOP CASE COVER
5	500010	TOP CASE GASKET
6	500009	SIDE CASE COVER
7	500011	SIDE CASE GASKET
8	CP0432	1/4" X 2" COTTER PIN
9	801304	1 1/4" X 1/2" SPACER
10	500007	CASTOR FORK
11	301202	16.5 X 6.50 X 8 TIRE
12	301201	6.50 X 8 RIM
13	301203	HD211 HUB
14	B5C18144P	1 X 9 UNC GR5 PLTD
	LNC18	1" UNC LOCKNUT
15	500012	OSCILLATING FIXED ARM
16	B5C0680P	3/8 X 3.75 UNC GR5 PLTD
	LNC08	3/8" UNC LOCKNUT
17	500013	PIN COLLAR
18	500006	CASTOR ARM
19	801701	1/8" GREASE NIPPLE


ROCK-MASTER

CASTOR & ARM ASSY.

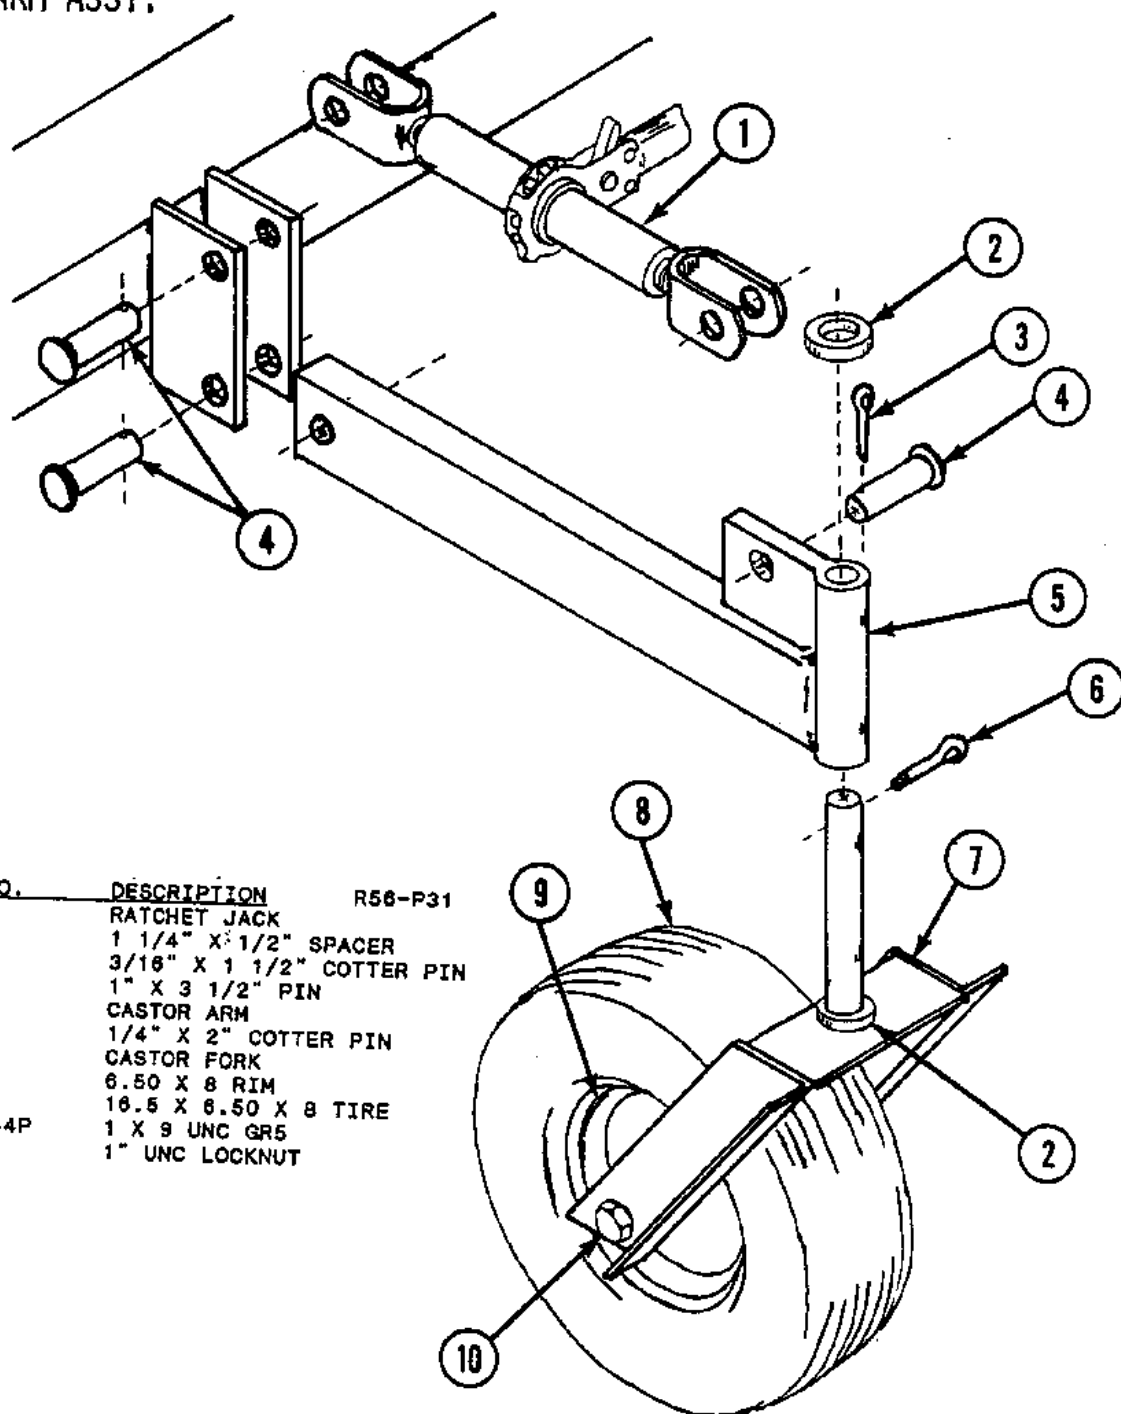

NO.	PART NO.	DESCRIPTION	R56-P31
1	500005	RATCHET JACK	
2	801304	1 1/4" X 1/2" SPACER	
3	801402	3/16" X 1 1/2" COTTER PIN	
4	801201	1" X 3 1/2" PIN	
5	500006	CASTOR ARM	
6	CP0432	1/4" X 2" COTTER PIN	
7	500007	CASTOR FORK	
8	301201	6.50 X 8 RIM	
9	301202	16.5 X 6.50 X 8 TIRE	
10	B5C16144P	1 X 9 UNC GR5	
	LNC16	1" UNC LOCKNUT	

ROCK-MASTER

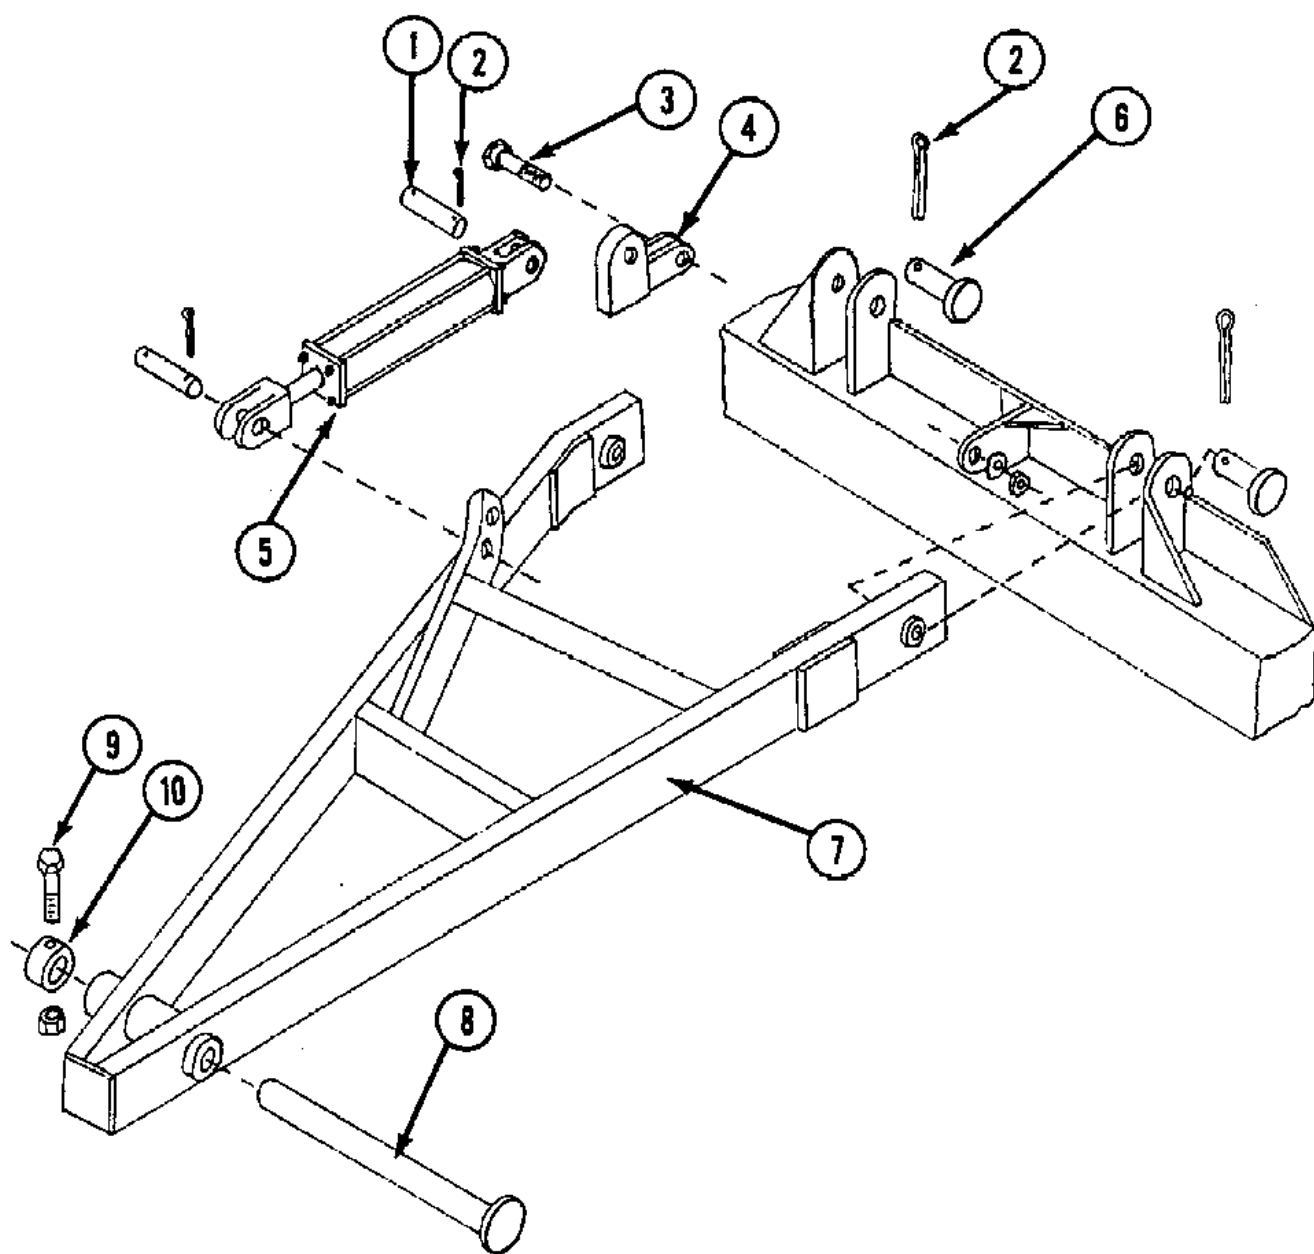

NO.	PART NO.	DESCRIPTION
1	203003	CLEVIS PIN
2	CP0440	1/4 X 2 1/2 COTTER PIN
3	B5C1032	5/8 X 2 UNC GR5
	LW10	5/8" LOCK WASHER
	NC10P	5/8" UNC NUT PLTD
4	501401	HYDRAULIC BRACKET
5	201001	3" X 10" HYD. CYL.
6	801206	1 3/4" X 4" PIN
7	501402	LEFT WING A-FRAME
		RIGHT WING A-FRAME
8	801207	2" X 17 3/4" WING SHAFT W/COLLAR
9	B5C0856	1/2 X 3 1/2 UNC GR5
	LW08P	1/2" LOCK WASHER PLTD
	NC08P	1/2" UNC NUT PLTD
10	801305	WING SHAFT COLLAR


19



NO.	PART NO.	DESCRIPTION
1	B5C0516P	5/16 X 1 UNC GR5 PLTD
2	500008	TOP CASE COVER
3	401107	SHAFT SHIELD
4	B5C0856	1/2 X 3 1/2 UNC GR5
	LW08P	1/2" LOCK WASHER PLTD
	NC08P	1/2" UNC NUT PLTD
5	801305	WING SHAFT COLLAR
6	401108	1 3/8" X 48 1/2" SHAFT
7	901101	M4558 PTO SHAFT COMPLETE
8	NC10P	5/8" UNC NUT PLTD
9	400003	2" PILLOW BLOCK BEARING
10	501402	LEFT WING A-FRAME
	501403	RIGHT WING A-FRAME
11	801207	2" X 17 3/4" WING SHAFT & COLLAR
12	702004	#100 CHAIN X 46 1/2 LINKS
13	B5C1032	5/8 X 2 UNC GR5
	LW10	5/8" LOCK WASHER
	NC10P	5/8" UNC NUT PLTD
14	701008	100C14 SPROCKET
15	801302	1/2 X 3 1/2 WASHER
16	B5C0816	1/2 X 1 UNC GR5
	LW08P	1/2" LOCK WASHER PLTD
17	801605	1/2" X 2" KEY
18	400103	2" FLANGE BEARING
19	701010	100C9 SPROCKET
20	801603	5/16" X 2 1/2" KEY
21	B5C0840P	1/2 X 2 1/2 UNC GR5
	LW08P	1/2" LOCK WASHER PLTD
	NC08P	1/2" UNC NUT PLTD
22	400108	1 3/8" FLANGE BEARING
23	400105	DRUM TOOTH
24	401301	RIGHT WING DRUM COMPLETE
	401302	LEFT WING DRUM COMPLETE
25	500009	SIDE CASE COVER
26	500011	SIDE CASE COVER GASKET
27	400106	1 3/8" FLANGE BEARING
28	B5C0840P	1/2 X 2 1/2" UNC GR5
29	NC12P	3/4" UNC NUT
30	400102	IDLER BRACKET
31	NC20P	1 1/4" UNC NUT
32	400101	2" NYLON IDLER

WEASLER

PTO SHAFT

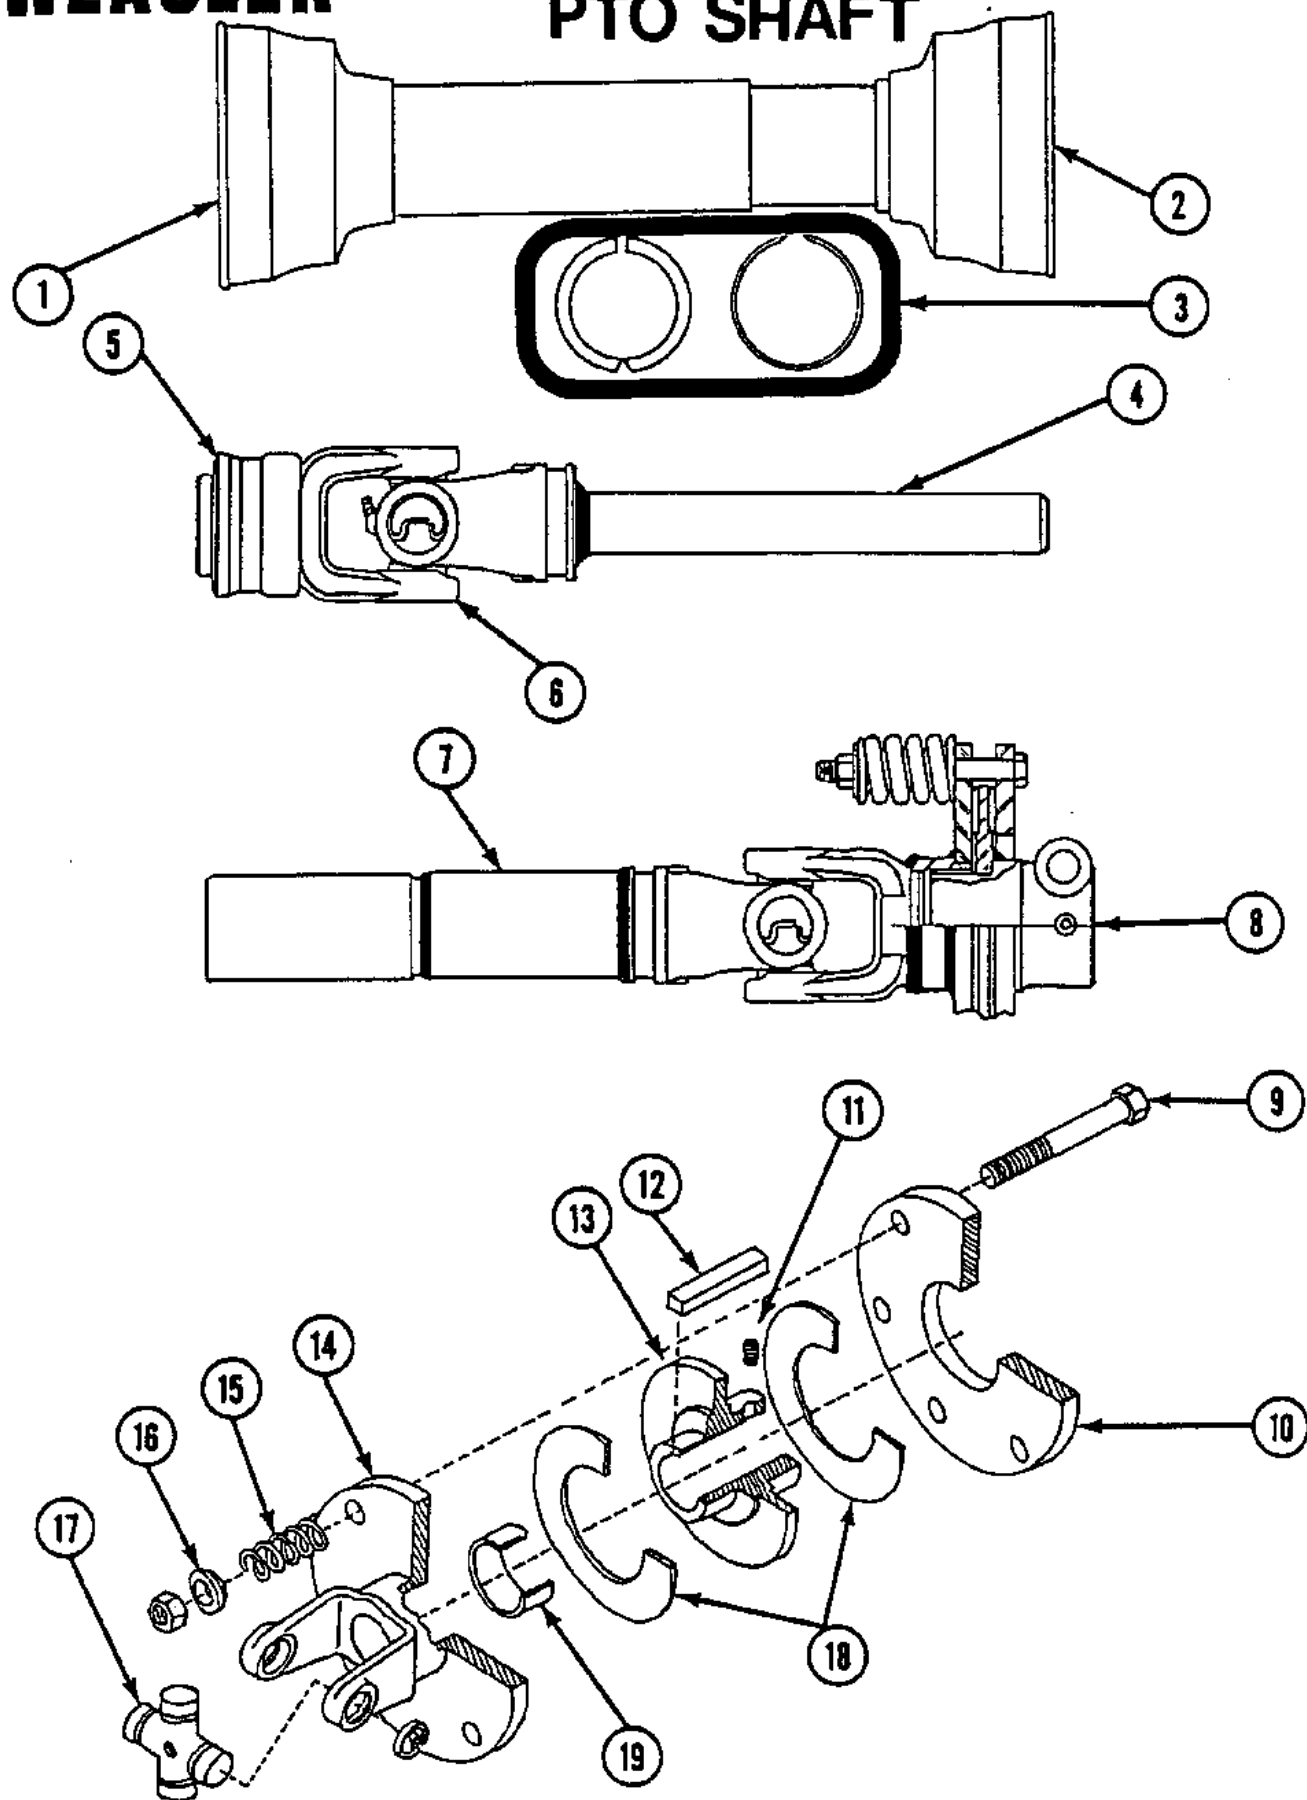

<u>NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	901010	OUTER GUARD
2	901011	INNER GUARD
3	901012	GUARD RETAINER KIT
4	901004	YOKE & SHAFT
5	901013	SPRING-LOK YOKE REPAIR KIT
6	901002	TRACTOR YOKE
7	901005	YOKE & TUBE
8	901016	6000 CLUTCH ONLY COMPLETE
9	901008	6000 CLUTCH BOLT W/NUT
10	900002	CLUTCH PRESSURE PLATE
11	801501	3/8-16 SET SCREW
12	801602	5/16 X 2 KEY
13	900001	CLUTCH HUB
14	901006	YOKE W/CLUTCH PLATE
15	901007	6000 CLUTCH SPRING
16	901009	6000 CLUTCH SPRING HOLDING WASHER
17	901003	14R JOURNAL KIT
18	900003	CLUTCH FRICTION DISC
19	900004	BRASS BUSHING
20	901014	TRACTOR HALF PTO SHAFT W/GUARD
21	901015	CLUTCH HALF PTO SHAFT W/GUARD
	901001	M4559 PTO COMPLETE

"6000 CLUTCH"

OPERATING AND MAINTENANCE INSTRUCTIONS.

1) ATMOSPHERIC CONDITIONS AND PROLONGED STORAGE MAY ALTER THE OPERATING CHARACTERISTICS OF FRICTION CLUTCHES. BEFORE FIRST USE OR AFTER STORAGE OF MORE THAN ONE MONTH ALL SPRING ADJUSTING NUTS SHOULD BE BACKED OFF UNTIL SPRINGS ARE LOOSE. THEN TIGHTENED ONE TURN.

2) THE CLUTCH SHOULD THEN BE SLIPPED UNTIL IT STARTS TO SMOKE. THE SPRINGS SHOULD THEN BE SET TO THE DESIRED SPRING SETTING, SET ALL SPRINGS TO THE SAME LENGTH.


NOTE: THAT AFTER A CLUTCH HAS BEEN "RUN IN" IT WILL SLIP ABOUT 20% HIGHER THAN BEFORE.

3) THE TEMPERATURE OF THE CLUTCH SHOULD BE CHECKED OFTEN DURING THE FIRST 20 MIN. OF OPERATION AND ABOUT EVERY 8 HRS. THEREAFTER. IF THE CLUTCH SMOKES, OR IS TOO HOT TO TOUCH (140 DEG.F. APPROX. DON'T BURN YOURSELF), THE SPRINGS SHOULD BE TIGHTENED OR THE CLUTCH WILL BURN UP AND FAIL.

4) SOME CLUTCHES MAY HAVE A SPRING STOP INSIDE THE SPRING TO PREVENT TIGHTENING THE SPRING BEYOND A PRESET LENGTH.

CAUTION!! INJURY MAY RESULT IF SPRING IS TIGHTENED BEYOND PRESET LENGTH.

EG 40 SERIES

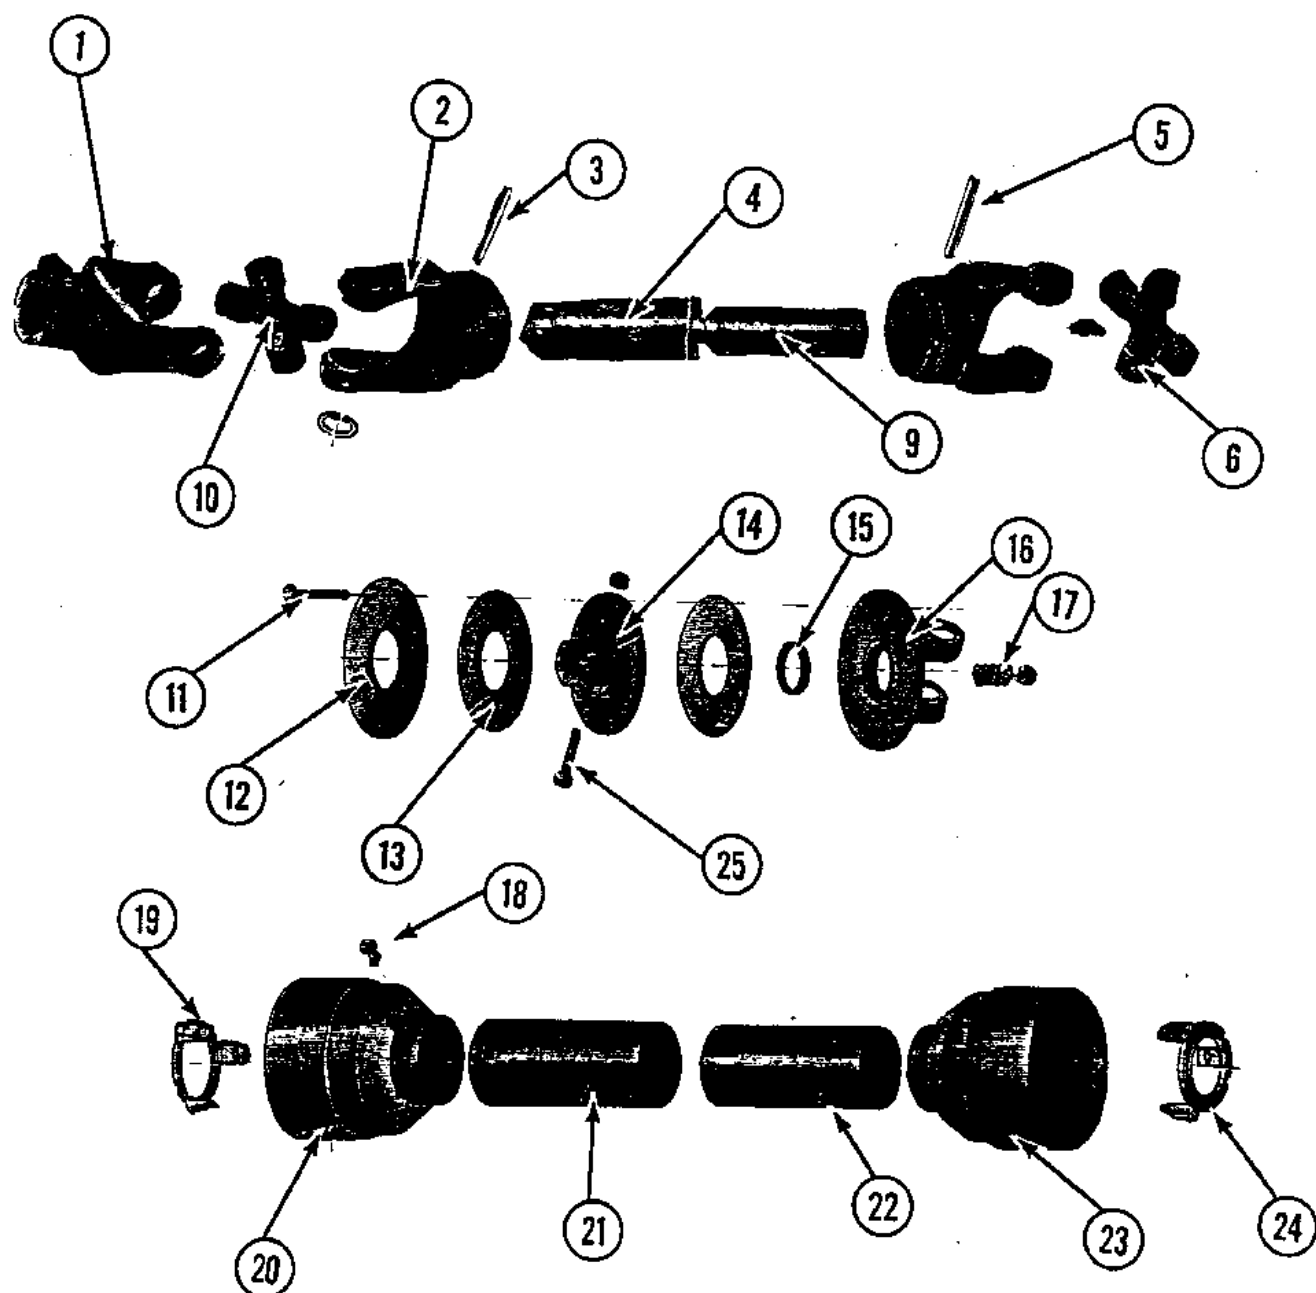

PTO PARTS

ROCKMASTER

EG 40 SERIES





NO.	PART NO.	DESCRIPTION
1	901021	1 3/8 - 6 YOKE
2	901023	OUTER TUBE YOKE
3	901024	ROLL PIN OUTER YOKE
4	901025	OUTER TUBE
5	901028	ROLL PIN
6	901022	CROSS KIT
9	901035	INNER TUBE
10	901022	CROSS KIT
11	901031	SPRING BOLT (M10 X 80)
12	901036	PRESSURE PLATE
13	901029	CLUTCH FACING
14	901037	CLUTCH SUPPORT
15	901038	BUSHING
16	901039	FLANGED YOKE
17	901030	CLUTCH SPRING
18	901137	CONE RETAINING BOLT
19	901040	OUTER TUBE RETAINING COLLAR
20	901041	OUTER TUBE CONE
21	901042	OUTER SHIELD TUBE
22	901043	INNER SHIELD TUBE
23	901044	INNER TUBE CLUTCH CONE
24	901045	INNER TUBE RETAINING COLLAR
25	901034	M12 X 65 BOLT

901032

EG 40 SERIES PTO COMPLETE

M4558 PTO SHAFT


ROCK-MASTER

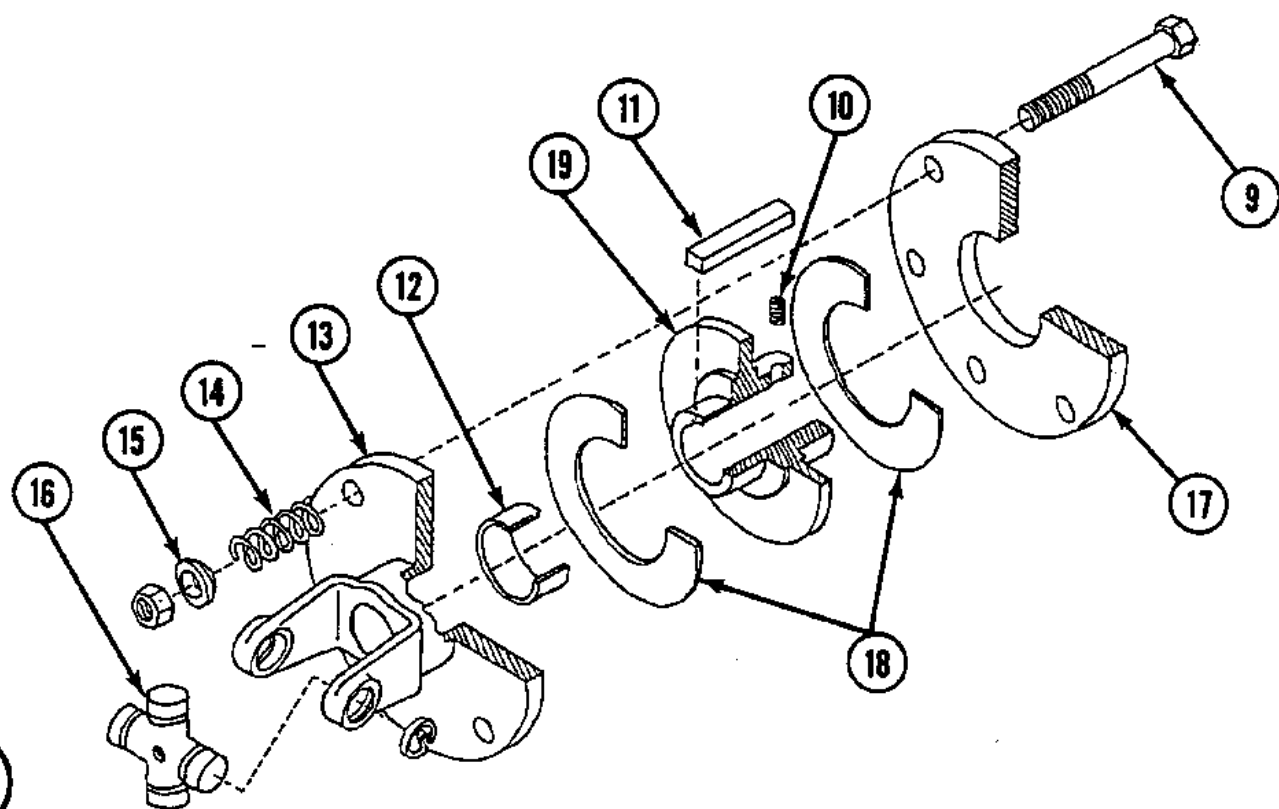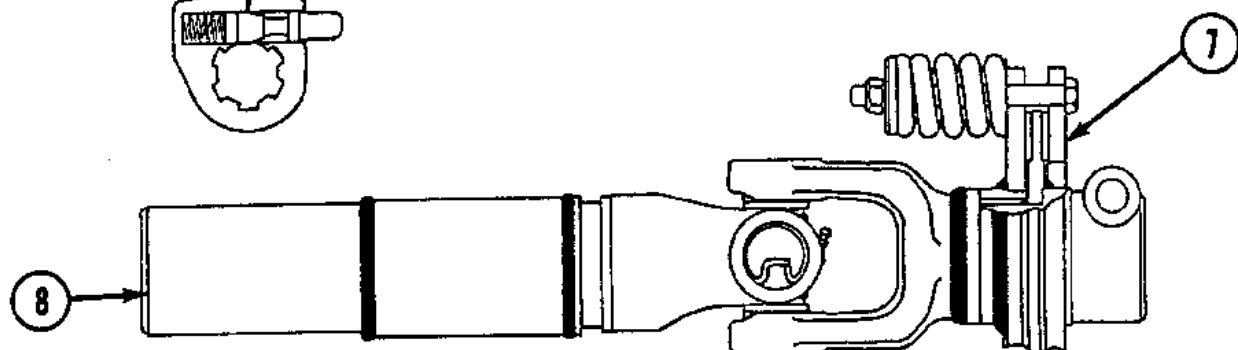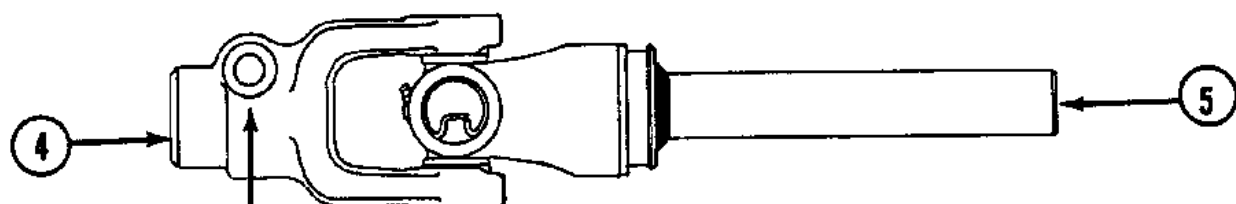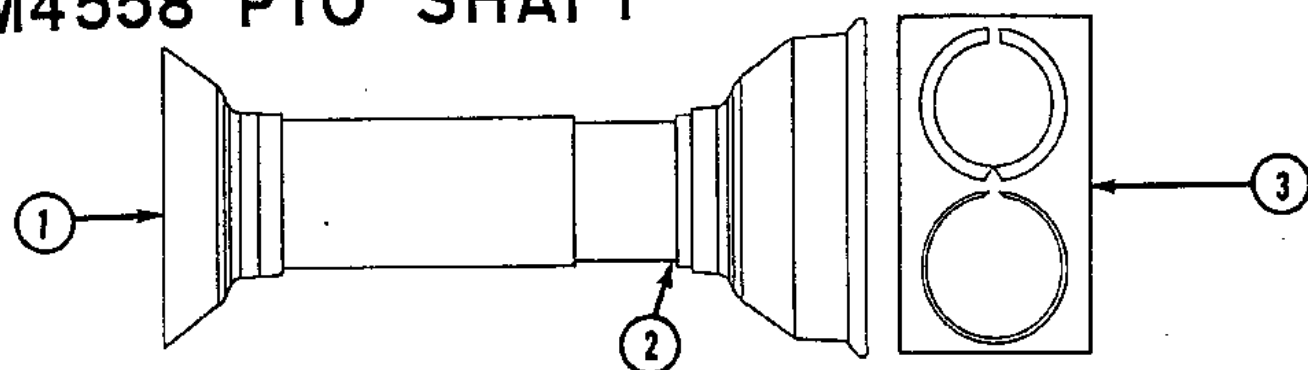

ROCK-MASTER

<u>NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	901110	OUTER GUARD
2	901111	INNER GUARD
3	901112	GUARD RETAINER KIT
4	901102	TRACTOR YOKE
5	901104	YOKE AND SHAFT
6	901113	YOKE PIN LOCK REPAIR KIT
7	901114	9000 CLUTCH COMPLETE
8	901105	YOKE AND TUBE
9	901108	9000 CLUTCH BOLT W/NUT
10	801501	3/8 -16 SET SCREW
11	801602	5/16 X 2 KEY
12	900004	BRASS BUSHING
13	901106	YOKE WITH CLUTCH PLATE
14	901107	9000 CLUTCH SPRING
15	901109	9000 CLUTCH SPRING HOLDING WASHER
16	901103	35RW JOURNAL KIT
17	900002	CLUTCH PRESSURE PLATE
18	900003	CLUTCH FRICTION DISC
19	900001	CLUTCH HUB
20	901115	TRACTOR HALF PTO SHAFT W/GUARD
21	901116	CLUTCH HALF PTO SHAFT W/GUARD

EG 60 SERIES

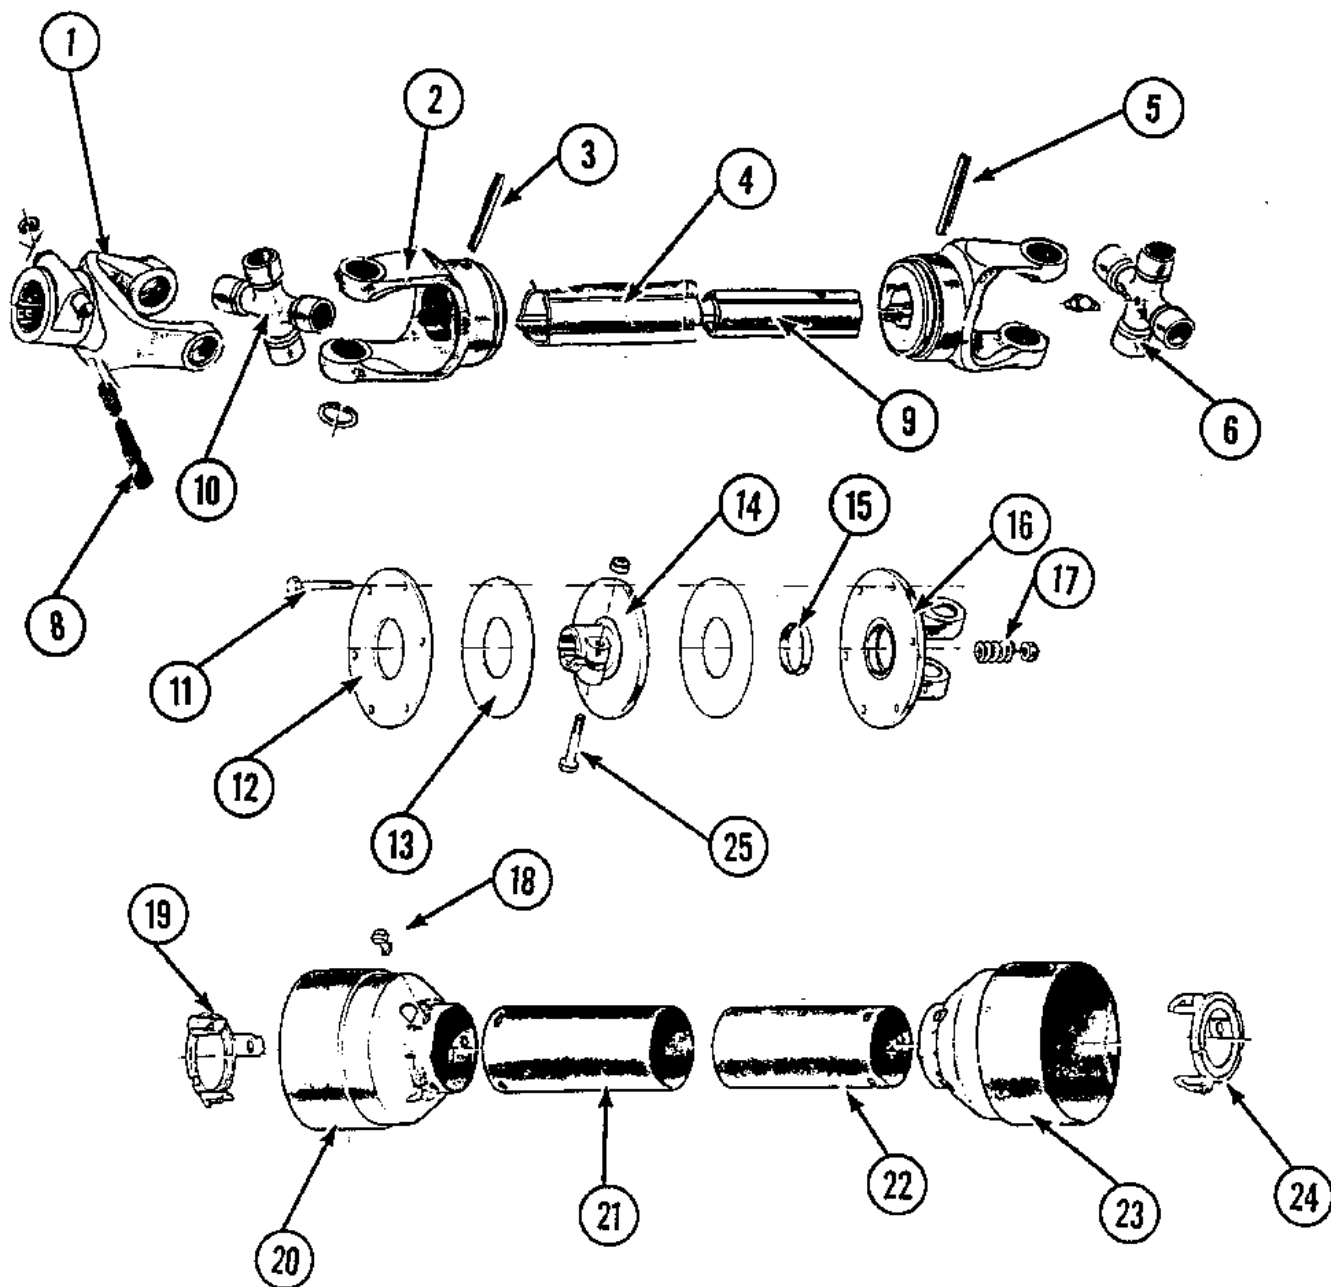

PTO PARTS


ROCKMASTER

EG 60 SERIES

NO.	PART NO.	DESCRIPTION
1	901117	1 3/8 - 6 YOKE
2	901119	OUTER TUBE YOKE
3	901120	ROLL PIN OUTER YOKE
4	901121	OUTER TUBE
5	901124	ROLL PIN
6	901118	CROSS KIT
8	901123	PUSH PIN KIT
9	901122	INNER TUBE
10	901118	CROSS KIT
11	901031	SPRING BOLT (M10 X 80)
12	901132	PRESSURE PLATE
13	901127	CLUTCH FACING
14	901144	CLUTCH SUPPORT
15	901133	BUSHING
16	901134	FLANGED YOKE
17	901126	CLUTCH SPRING
18	901137	CONE RETAINING BOLT
19	901136	OUTER TUBE RETAINING COLLAR
20	901138	OUTER TUBE CONE
21	901139	OUTER SHIELD TUBE
22	901140	INNER SHIELD TUBE
23	901142	INNER TUBE CLUTCH CONE
24	901143	INNER TUBE RETAINING COLLAR
25	901034	M12 X 65 BOLT
	901131	EG 60 SERIES PTO COMPLETE


ROCK-MASTER

204201 3½" X 42" HYD. CYL. COMPLETE
 204210 3½" X 42" SEAL KIT COMPLETE

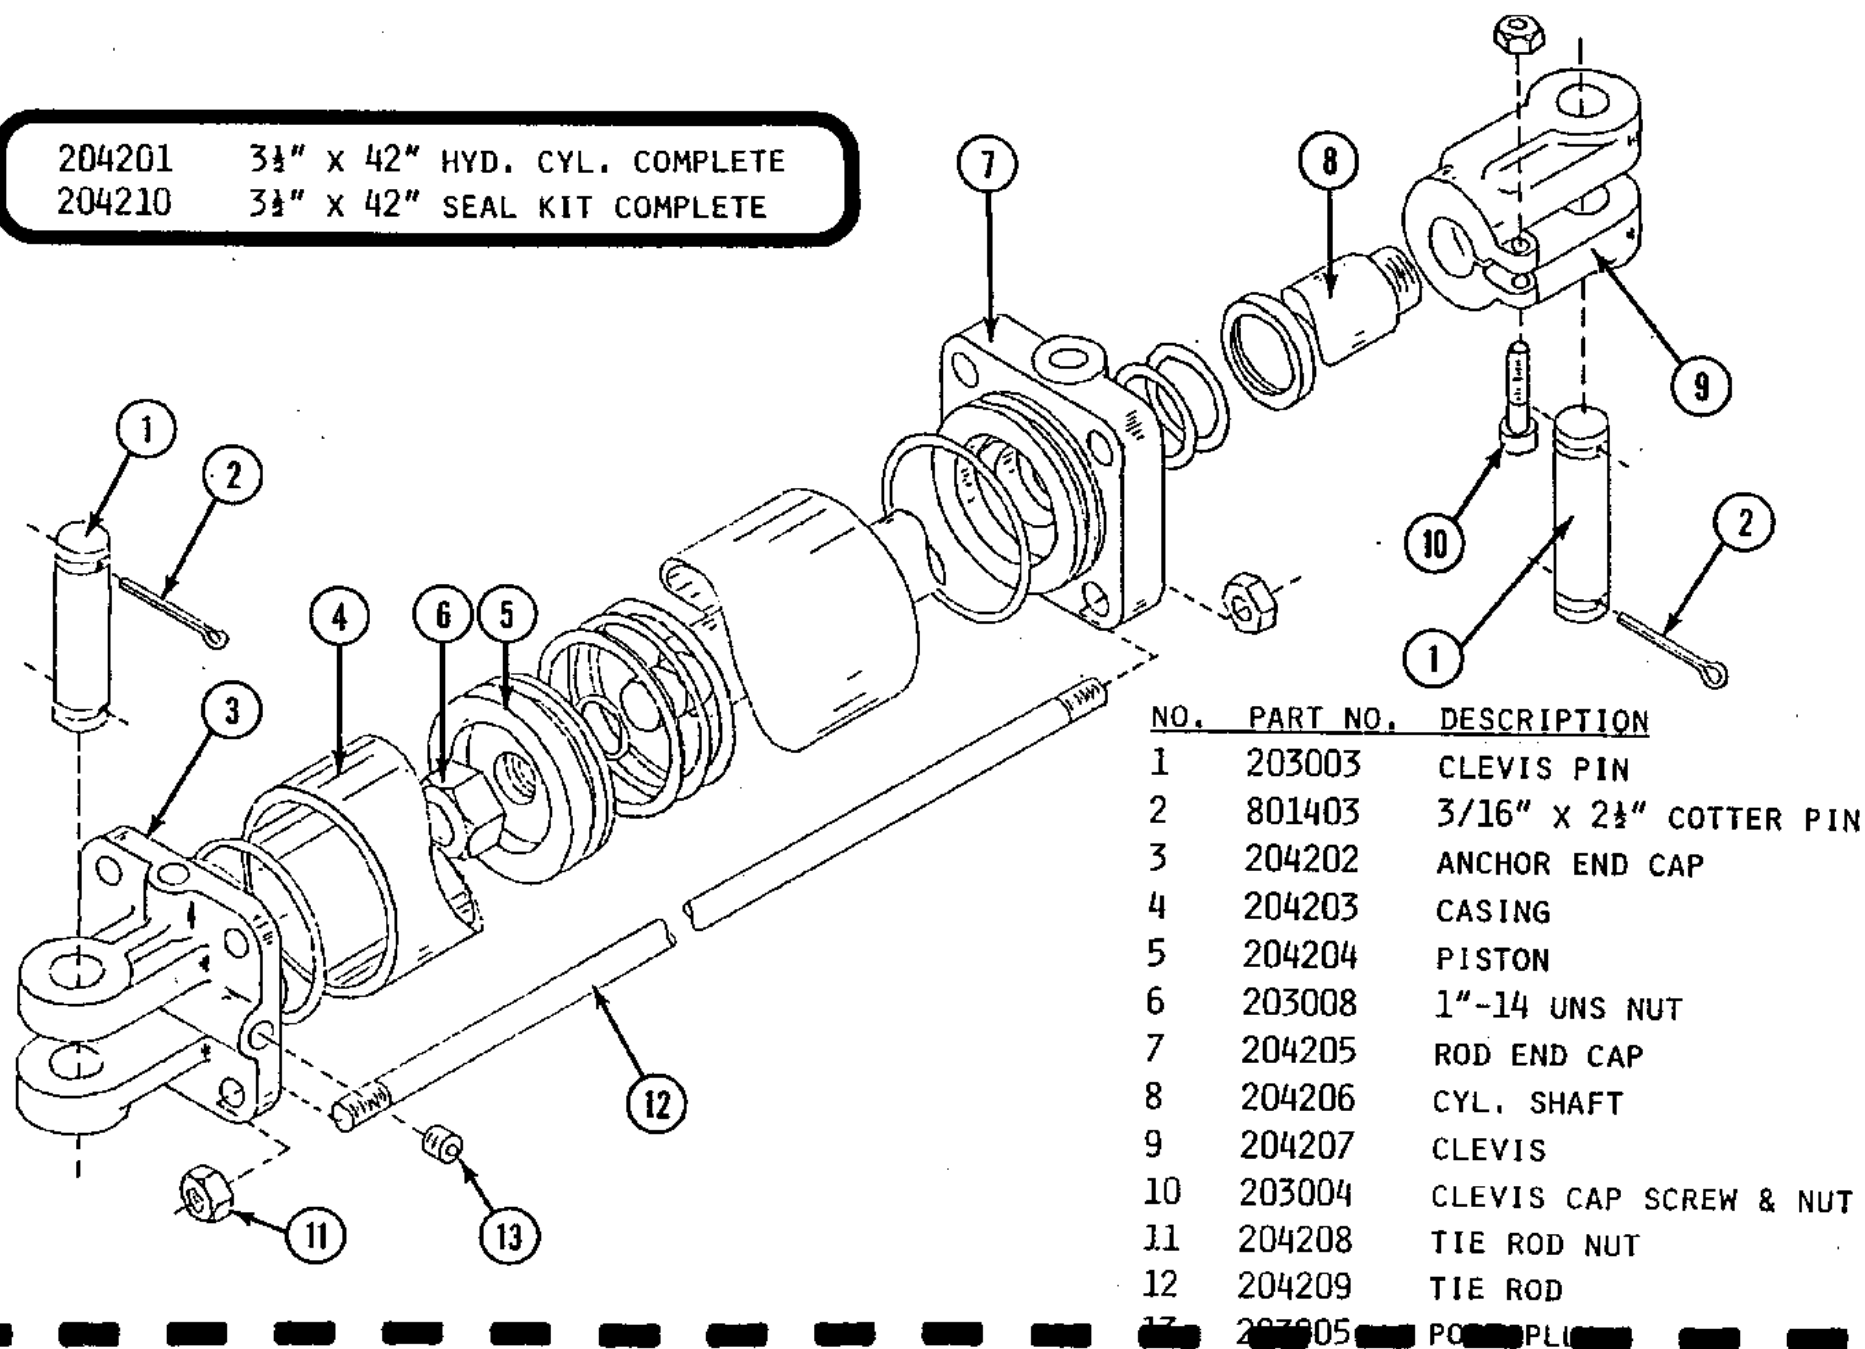

ROCK-MASTER


201001 3" X 10" HYD. CYL. COMPLETE
201010 3" X 10" SEAL KIT COMPLETE

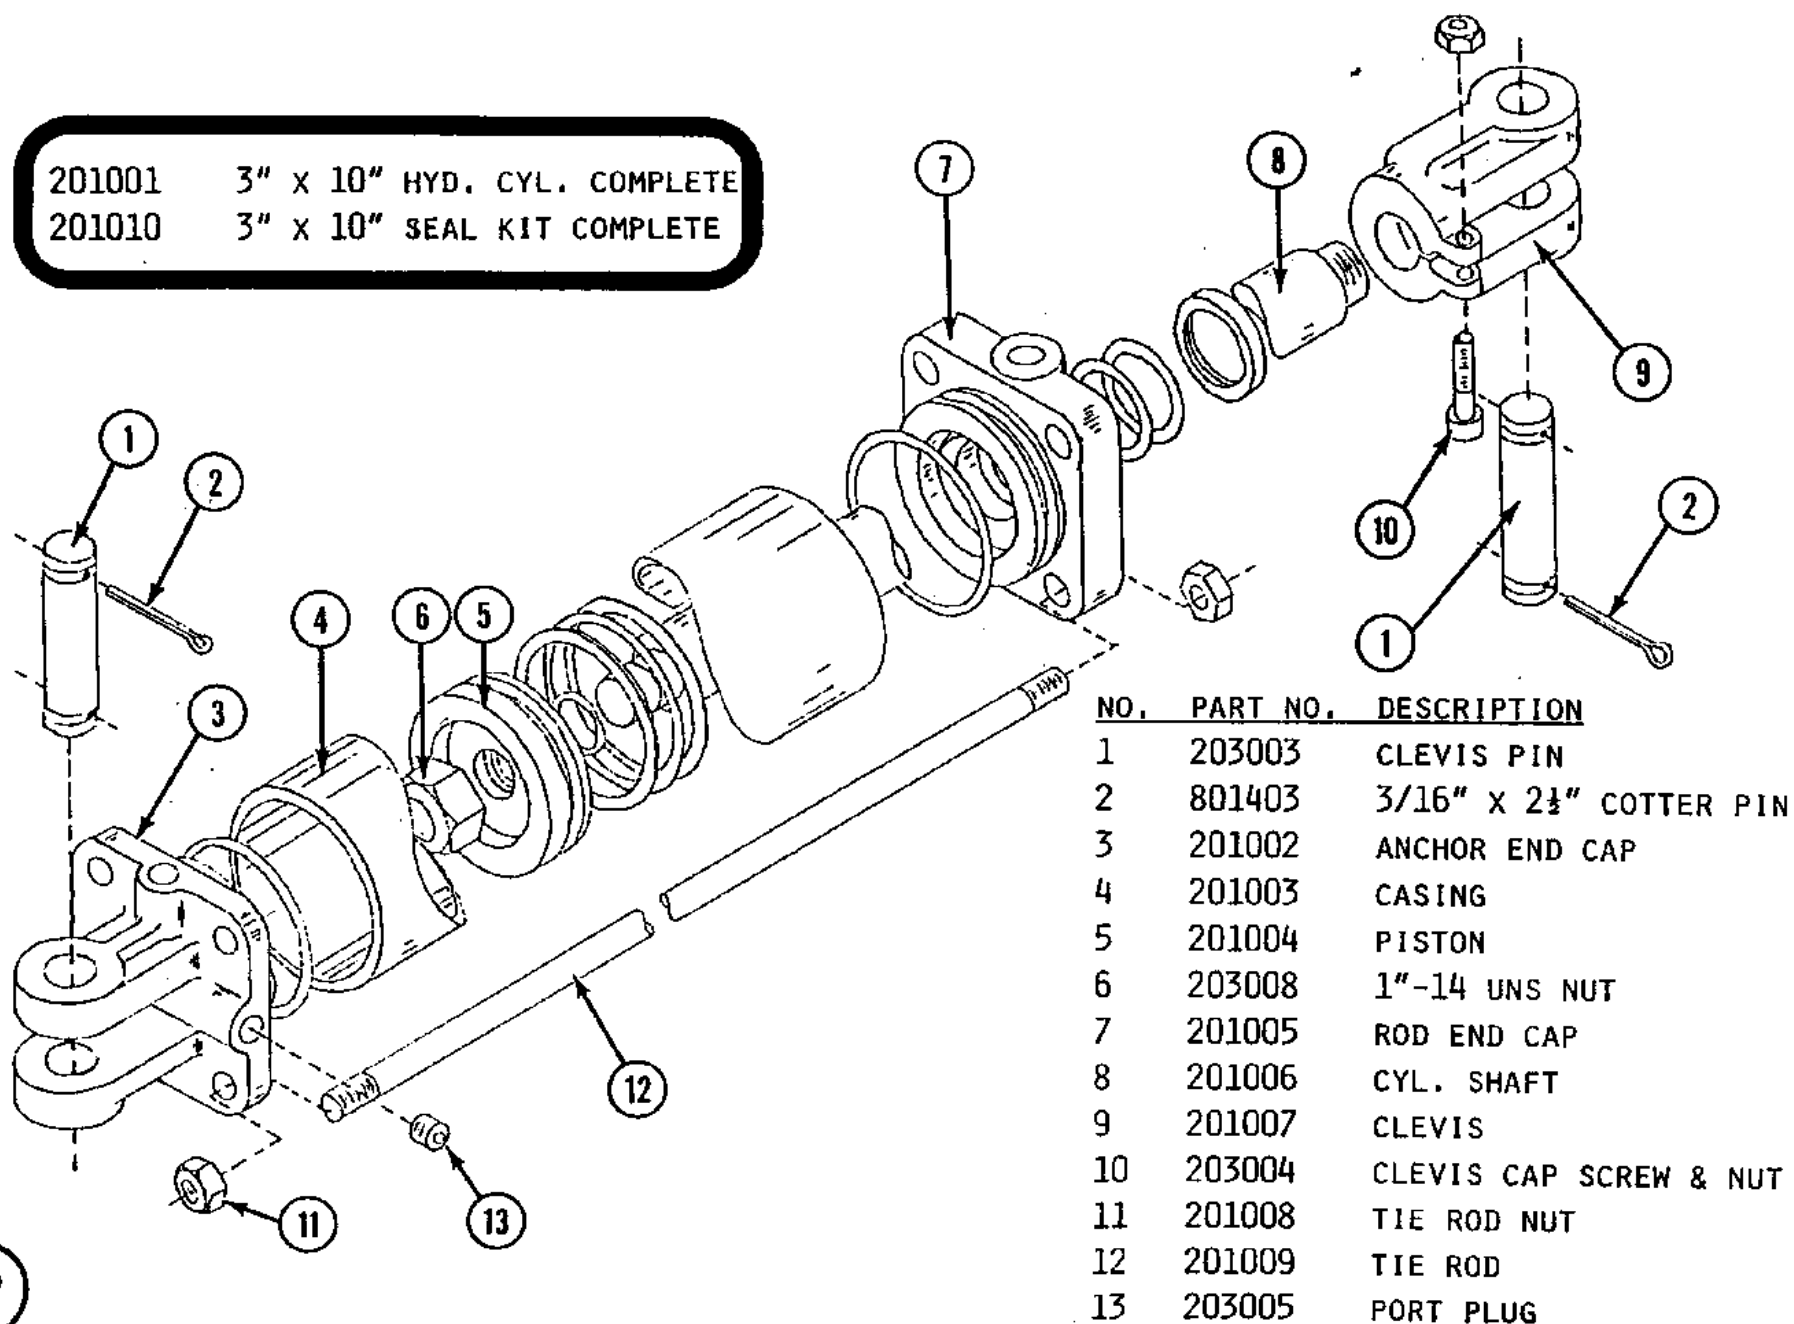

NO.	PART NO.	DESCRIPTION
1	203003	CLEVIS PIN
2	801403	3/16" X 2 1/2" COTTER PIN
3	201002	ANCHOR END CAP
4	201003	CASING
5	201004	PISTON
6	203008	1"-14 UNS NUT
7	201005	ROD END CAP
8	201006	CYL. SHAFT
9	201007	CLEVIS
10	203004	CLEVIS CAP SCREW & NUT
11	201008	TIE ROD NUT
12	201009	TIE ROD
13	203005	PORT PLUG


XL-W5

ROCK-MASTER

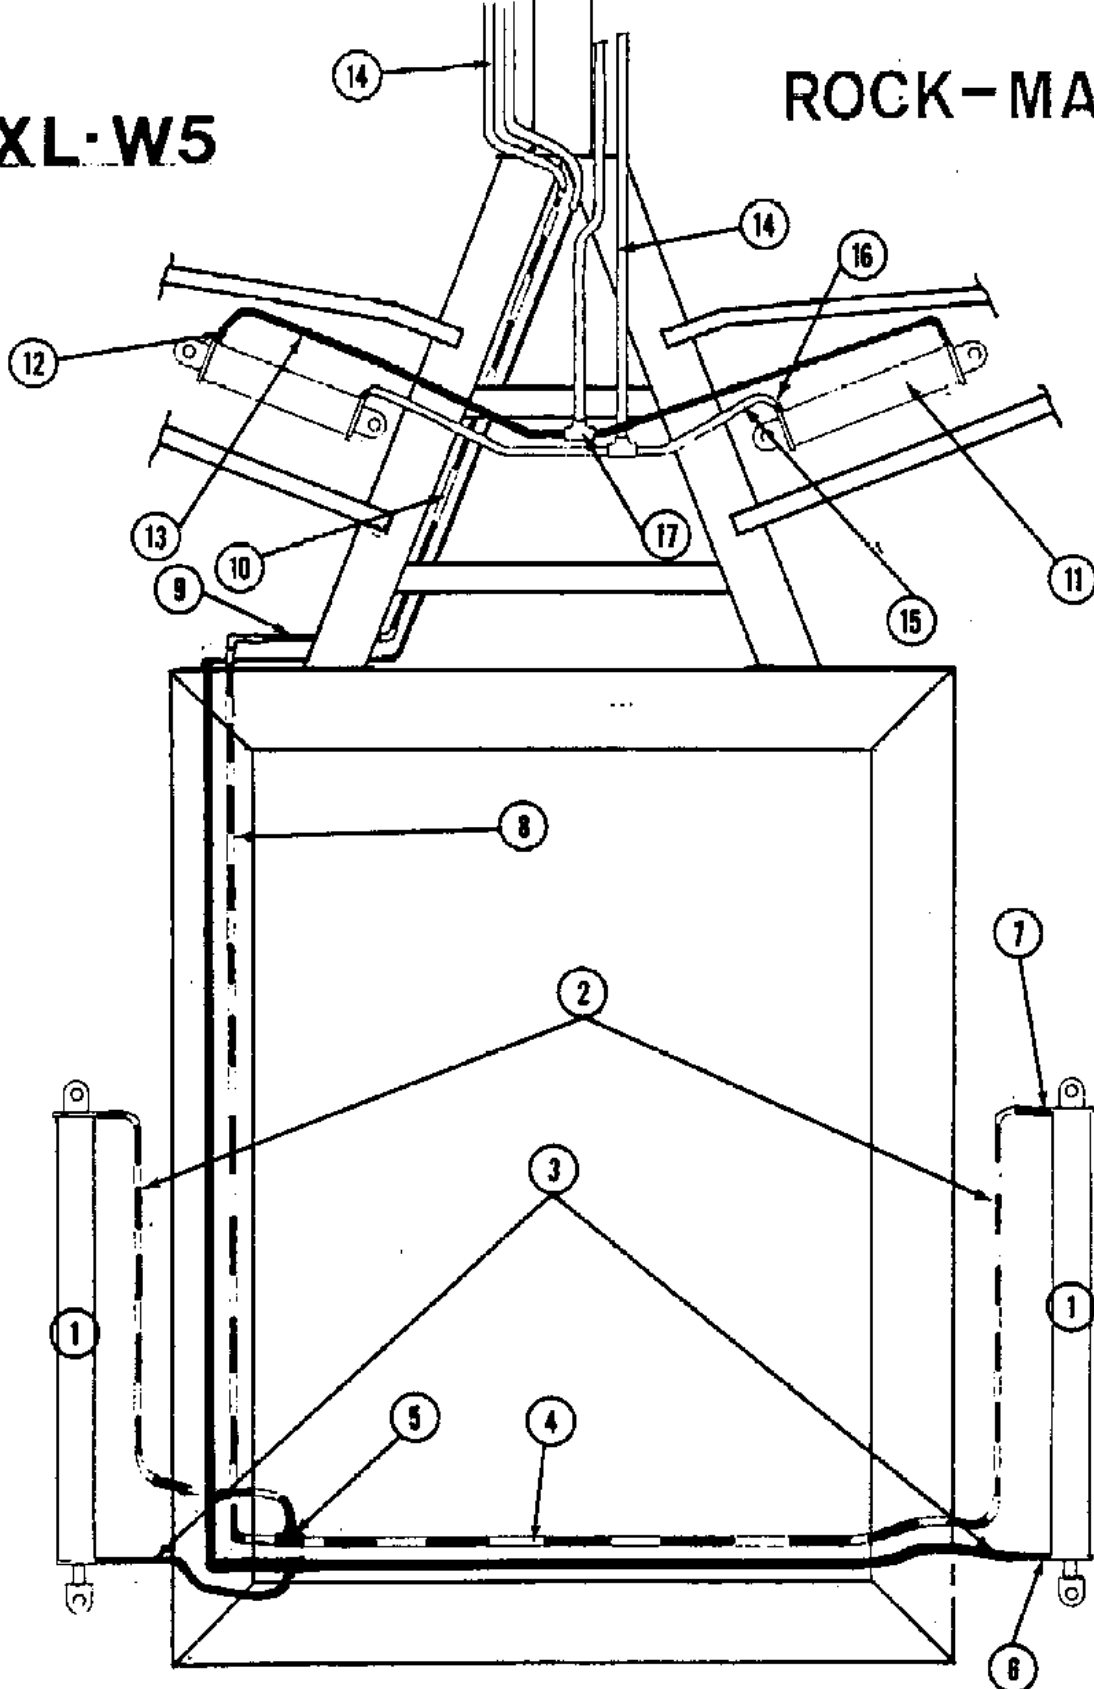

NO.	PART NO.	DESCRIPTION	NO.	PART NO.	DESCRIPTION
1	204201	3 1/2 X 42" CYLINDER	10	601106	80" HYD TUBING
2	601009	3/8 X 46" HYD HOSE	11	201001	3 X 10" HYD CYL
3	601010	3/8 X 52" HYD HOSE	12	60UA0808	SWIVEL ELBOW
4	601120	66" HYD TUBING	13	601011	1/2 X 30" HOSE
5	872FS08	TEE	14	601003	3/8 X 96" HOSE
6	848FS0808	ADAPTER	15	601012	3/8 X 24" HOSE
7	849FS0808	ELBOW	16	61UA0608	SWIVEL ELBOW
8	601123	106" HYD. TUBING	17	872FS08	TEE
9	601016	3/8" X 27" HYD. HOSE			

ROCK-MASTER

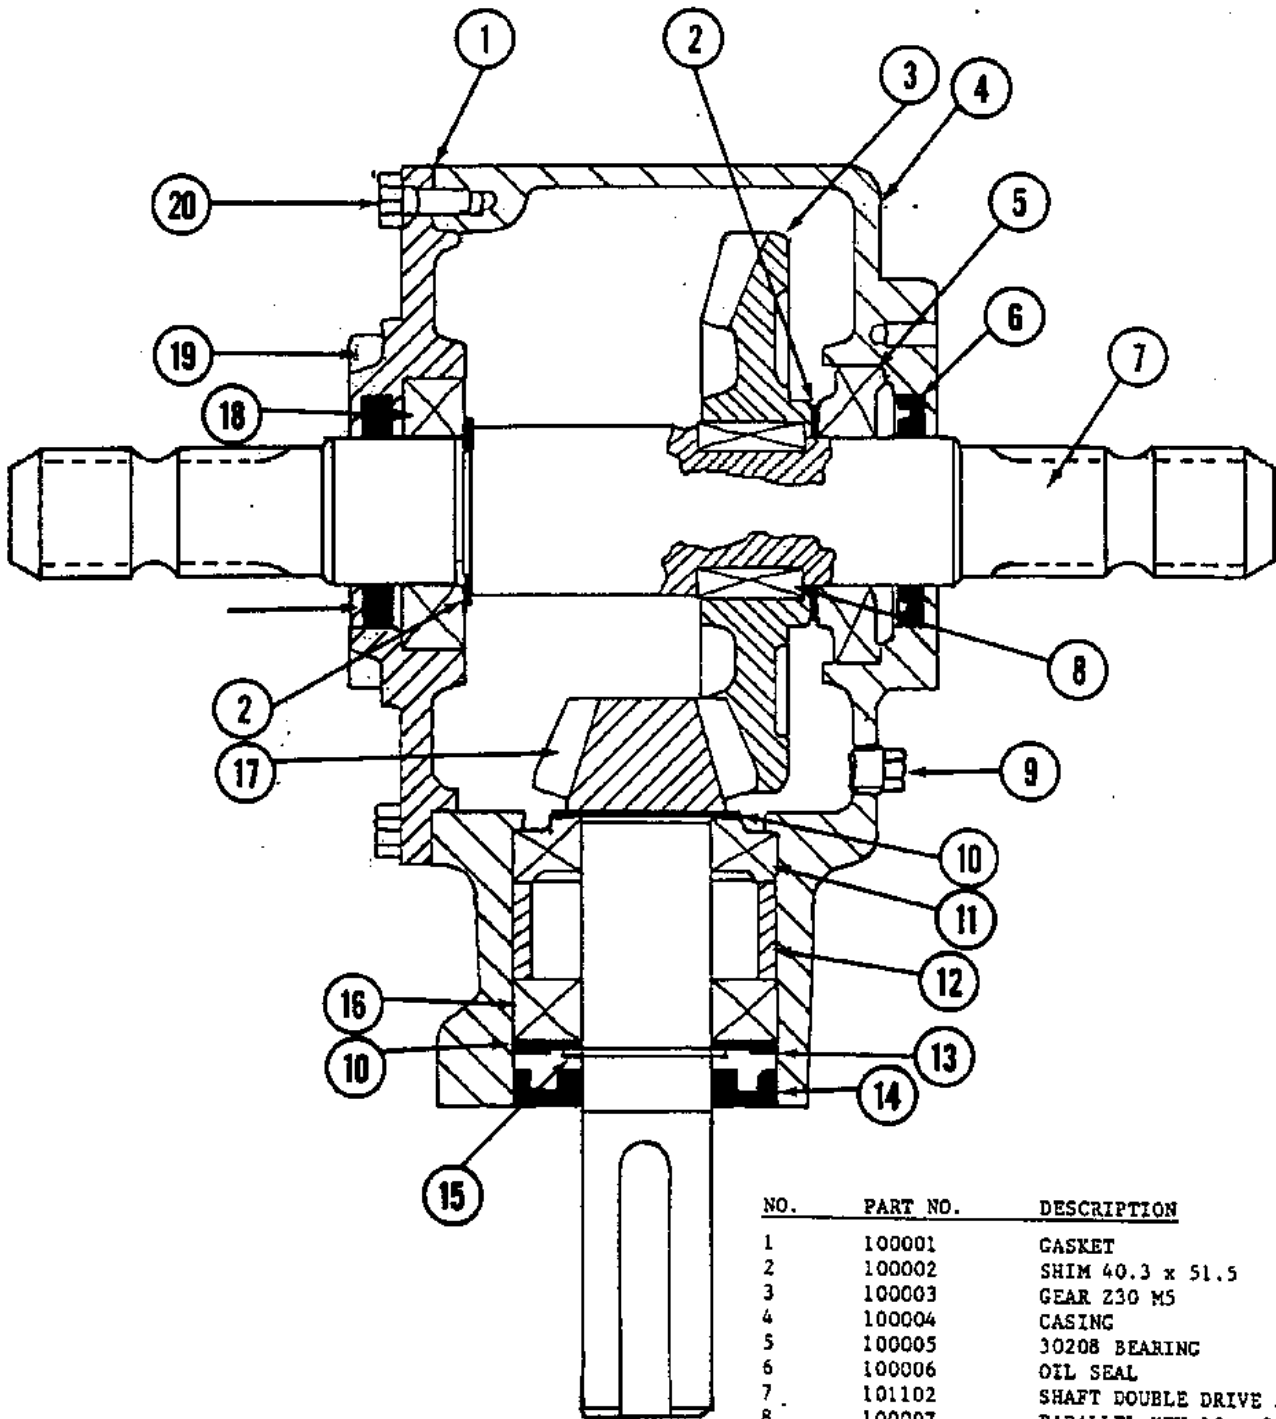

NO.	PART NO.	DESCRIPTION
1	100001	GASKET
2	100002	SHIM 40.3 x 51.5
3	100003	GEAR Z30 M5
4	100004	CASING
5	100005	30208 BEARING
6	100006	OIL SEAL
7	101102	SHAFT DOUBLE DRIVE SPLINED
8	100007	PARALLEL KEY 10 x 8 x 30
9	100008	1/4" PLUG
10	100009	SHIM 35.3"x 48
11	100010	30207 BEARING
12	100011	SPACER
13	100012	SNAP RING 72 UN17437
14	100013	OIL SEAL
15	100014	SNAP RING 35 IN17435
16	100015	6207 BEARING
17	100016	PINION GEAR Z10 M5
18	101103	6208 BEARING
19	101104	DOUBLE DRIVE COVER
20	101018	BOLT M8 x 20 8.8
	101101	DOUBLE DRIVE GEAR BOX COMPLETE

ROUTINE MAINTENANCE

- PERIODICALLY CHECK AIR PRESSURE IN TIRES AS UNEQUAL PRESSURE WOULD MAKE IT PRACTICALLY IMPOSSIBLE TO LEVEL MACHINE PROPERLY.
- CHECK OIL IN GEAR BOX AND ADD #90 GEAR OIL IF NEEDED.
- CHECK WHEEL BOLTS FOR TIGHTNESS.
- CHECK ALL BOLTS FOR TIGHTNESS.
- CHECK HYD. HOSE AND TUBING CONNECTIONS.
- GREASE TELESCOPIC SHAFT REGULARLY TO MINIMIZE TRUST FORCES.
- CHECK CHAIN TIGHTENER.
- TIGHTEN ALL SET SCREWS.

SPECIFICATIONS

PICKING WIDTH.....	5' 6"
DUMP HEIGHT.....	8'
TIRES.....	16.5 x 16.1
CYLINDERS.....	3½" x 42"
CHAIN & SPROCKETS.....	NO. 80
PTO DRIVE.....	540 STD.
HYDRAULIC PRESSURE.....	2500 PSI
BUCKET CAPACITY.....	2.4 CU. YD.
WEIGHT.....	5420 IBS. APPROX.

DANGER

ANY PETOLEUM PRODUCT UNDER PRESSURE CAN INFILTRATE THE SKIN CAUSING SERIOUS AFTER EFFECTS. IF THIS SHOULD HAPPEN, APPLY COLD PACKS TO THE AFFECTED AREA AND SEE A DOCTOR IMMEDIATELY.