

brackets can be discarded.

Completed By:

Highline Pre-Delivery Inspection Checklist CFR651

	Dealership:	
	Technician:	©Highline Bale PTO cruss
	Customer Name:	
	Model:	
	Serial #:	
	Estimated Setup Time: 2.5 hours	
Specs:		☐ Secure the hydraulic hose holder to the front of the
	Have the correct options been installed on the unit as per the order?	frame. □ Ensure guard rod adjustment is free for operation. □ Ensure flail drum lock engages.
Safety:		 Ensure twine cutter can be passed through across drum and stored properly.
Check I (Refer t	Owner's manual located in the designated holder. Ensure all safety decals are in place and legible. Safety locks are functional and in place. Safety chain inspection (refer to manual). Safety lights and slow moving vehicle sign are functional and visible. ist: Operator's manual for instructions. Remove shipping blocks. Wash the unit, removing all road debris (road salt and other material). Check for aesthetic defects and shipping damage — replace damaged items or touch up paint as required. Check wheel bolts, as per manual specs. Check wheel bearings, ensure bearings are	 □ Ensure all manual operated adjustments function properly and freely. □ Ensure feed chain is at correct tension (1 inch of lift in center). □ Ensure belt tensions are set correctly (manual specs). □ Check flail drum access panels are easily moveable. □ Check sprocket alignment and chain tension on Grain Tank (if applicable). □ Check clean-out door can move freely (if applicable). Operational Check: □ Cycle all cylinders a minimum of three times, check for leaks and clearance. □ Cycle feed chain in both directions and check for alignment. □ Check the grain tank clutch engages (if applicable). □ Check back up clutch operates freely in reverse and locks
_	properly reloaded and nut, washer and cotter pins are in place.	up forward (if applicable). ☐ Engage PTO, ensure operation.
	Check tire pressure and adjust as required.	Customer Review:
	Lubricate areas and chains as per manual specifications. Check oil level in gear box (additional gearboxes with grain tank). Remove the forks and install (Fig. 1 & Fig. 2).	 Review with the customer the understanding and operation of the machine. Review with the customer the safety section of the Operator's Manual.
	Remove safety lock, hose holder and driveline from shipping position. (Fig.3)	Comments:
	Remove the shipping brackets (Fig.4). Shipping	

Signature:

Date:



Support Pictures:

Figure 1

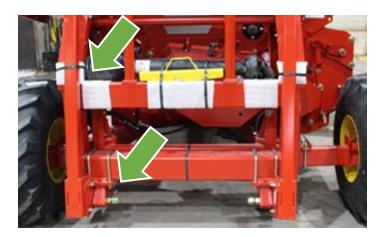


Figure 2

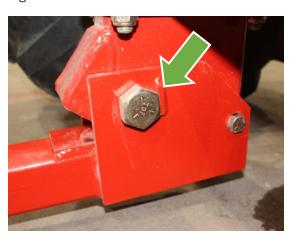


Figure 3



Figure 4

